

[Manuals.plus](#) /

> [Lavor](#) /

> Lavor Cruiser 160 Plus Pressure Washer Instruction Manual

Lavor 8.108.0047C

Lavor Cruiser 160 Plus Pressure Washer Instruction Manual

Model: 8.108.0047C

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Lavor Cruiser 160 Plus pressure washer. Please read these instructions carefully before using the appliance and keep them for future reference. Proper use and maintenance will ensure optimal performance and extend the lifespan of your unit.

SAFETY INFORMATION

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury. This pressure washer generates high-pressure water jets, which can be dangerous if misused.

- **Read all instructions:** Familiarize yourself with the controls and proper use of the appliance.
- **Wear appropriate protective gear:** Always wear safety glasses, hearing protection, and suitable footwear.
- **Keep children and pets away:** Do not allow children or untrained personnel to operate the pressure washer.
- **Never point the spray gun at people or animals:** The high-pressure jet can cause serious injury.
- **Ensure stable footing:** The recoil force from the spray gun can cause loss of balance.
- **Check electrical connections:** Ensure the power cord and plug are undamaged and suitable for outdoor use. Do not use extension cords unless specifically rated for outdoor use and the appliance's power requirements.
- **Disconnect power before maintenance:** Always unplug the unit from the power source before performing any cleaning, maintenance, or repairs.
- **Use only clean water:** Do not use flammable liquids or solvents.

PACKAGE CONTENTS

Before beginning assembly, ensure all parts are present and undamaged. If any parts are missing or damaged, do not attempt to assemble or operate the unit. Contact customer support.

- Lavor Cruiser 160 Plus Main Unit
- High-Pressure Hose (8 meters)

- Spray Gun with Lance
- Adjustable Nozzle
- Detergent Tank (if included)
- Water Inlet Connector
- Instruction Manual

SETUP

Follow these steps to prepare your pressure washer for first use.

1. Unpacking and Assembly

Carefully remove all components from the packaging. Attach any loose parts such as the handle, wheels, and hose reel according to the diagrams in the manual. Ensure all connections are secure.





Front view of the Lavor Cruiser 160 Plus pressure washer, showing the main unit, hose reel, and spray gun holder. This image illustrates the assembled unit.

2. Water Connection

1. Connect a standard garden hose (not supplied) to the water inlet connector on the pressure washer. Ensure the connection is tight to prevent leaks.
2. Connect the other end of the garden hose to a water tap.
3. Turn on the water supply fully.
4. *Important:* The pressure washer requires a constant and adequate water supply. Do not run the unit without water, as this can cause damage to the pump.

3. High-Pressure Hose and Spray Gun Connection

1. Connect the high-pressure hose to the outlet on the pressure washer unit.
2. Connect the other end of the high-pressure hose to the spray gun.
3. Attach the desired nozzle or lance to the spray gun.

4. Electrical Connection

1. Ensure the power switch on the unit is in the "OFF" position.
2. Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Follow these steps for safe and effective operation of your pressure washer.

1. Priming the Pump

1. With the water supply on and the unit still off, squeeze the trigger on the spray gun to release any air trapped in the system. Allow water to flow through the gun until a steady stream is achieved, free of air bubbles.
2. Release the trigger.

2. Starting the Unit

1. Turn the power switch to the "ON" position. The motor will start.
2. Squeeze the spray gun trigger to begin spraying. The motor will run continuously while the trigger is depressed.
3. When the trigger is released, the motor will stop or cycle on and off to maintain pressure.

3. Cleaning Techniques

- **Test a small area:** Before cleaning a large surface, test the spray pattern and pressure on an inconspicuous area to avoid damage.
- **Maintain distance:** Keep the nozzle at an appropriate distance from the surface to prevent damage. Start further away and move closer as needed.
- **Even strokes:** Use overlapping, even strokes to ensure thorough cleaning.
- **Detergent application:** If using detergent, follow the instructions for your specific detergent and the pressure washer's detergent tank system. Apply detergent at low pressure, allow it to soak, then rinse with high pressure.



A user operating the Lavor Cruiser 160 Plus pressure washer to clean a car, demonstrating proper spray technique for vehicle washing.



A user operating the Lavor Cruiser 160 Plus pressure washer to clean a patio surface, illustrating wide area cleaning for outdoor spaces.

4. Shutting Down

1. Turn the power switch to the "OFF" position.
2. Turn off the water supply.
3. Squeeze the spray gun trigger to release any remaining pressure in the system.
4. Disconnect the garden hose and high-pressure hose.
5. Unplug the power cord.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pressure washer.

- **Clean Nozzles:** Periodically clean the nozzle orifice with the provided nozzle cleaning tool (if applicable) to remove any blockages.
- **Water Inlet Filter:** Check and clean the water inlet filter regularly to prevent debris from entering the pump.
- **Hose and Cord Inspection:** Inspect the high-pressure hose and power cord for any signs of wear, cuts, or damage before each use. Replace damaged components immediately.
- **Storage:** Store the pressure washer in a dry, frost-free area. Drain all water from the pump and hoses before storing, especially in cold climates, to prevent freezing damage.
- **Winterization:** For extended storage in freezing temperatures, use a pump protector or antifreeze solution specifically designed for pressure washers.

TROUBLESHOOTING

This section addresses common issues you might encounter with your pressure washer.

Problem	Possible Cause	Solution
Unit does not start	No power supply; tripped circuit breaker; faulty switch.	Check power connection; reset circuit breaker; contact service if switch is faulty.
Low pressure	Insufficient water supply; clogged nozzle; air in pump; leaky connections.	Ensure full water supply; clean nozzle; prime pump; tighten all connections.
Motor runs continuously when trigger is released	Air in pump; internal leak; unloader valve issue.	Prime pump; check for leaks; contact service.
Water leaks from connections	Loose connections; worn O-rings.	Tighten connections; replace O-rings.

SPECIFICATIONS

Key technical specifications for the Lavor Cruiser 160 Plus pressure washer.

Feature	Detail
Model Number	8.108.0047C
Maximum Pressure	160 Bars
Maximum Flow Rate	390 Litres per hour
Hose Length	8 Meters
Power Source	Electric Cable
Product Dimensions (L x W x H)	31 x 29 x 80 cm
Item Weight	15.5 Kilograms
Repairability Index	8.4/10



Graphic displaying the repairability index for the product, indicating a score of 8.4 out of 10.

WARRANTY AND SUPPORT

For warranty information, technical support, or to order replacement parts, please refer to the warranty card included with your product or visit the official Lavor website. Keep your purchase receipt as proof of purchase for warranty claims. Availability of spare parts in the EU is indicated for 10 years from the date of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C278J9L6>

More documents and user manuals: <https://manuals.plus/>