

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sweetcrispy](#) /

› [Sweetcrispy Computer Gaming Desk Chair ELHJC95-2 Instruction Manual](#)

Sweetcrispy ELHJC95-2

Sweetcrispy Computer Gaming Desk Chair ELHJC95-2 Instruction Manual

Model: ELHJC95-2

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Sweetcrispy Computer Gaming Desk Chair. Please read this manual thoroughly before assembly and use to ensure proper function and safety.

2. SAFETY INFORMATION

Important: Always follow basic safety precautions when using this product to reduce the risk of injury.

- Do not stand on the chair.
- Do not use the chair as a step stool.
- Ensure all bolts and screws are fully tightened before use. Re-tighten screws every 6 months or as needed.
- Do not exceed the maximum weight capacity of 275 pounds.
- Keep children away from moving parts.
- Use only on a stable, level surface.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, contact customer service.

- Gaming Chair components
- Installation tools
- Instruction manual



Image: All components laid out for assembly, including the seat, backrest, armrests, base, casters, gas lift, and hardware.

4. SETUP AND ASSEMBLY

Assembly typically takes approximately 15 minutes. Follow these steps carefully:

1. Assemble the Base:

- Insert the five legs into the central star-shaped piece of the metal base.
- Secure each leg with two short screws.
- Press the casters into the holes at the end of each base leg.
- Insert the gas lift into the center hole of the assembled base.

2. Attach the Seat Mechanism:

- Align the seat mechanism to the underside of the seat cushion, ensuring the "FRONT" label on the mechanism faces the front of the seat.
- Attach the mechanism using four bolts and tighten with the provided wrench.

3. Connect Seat to Base:

- Turn the seat upright and align the center hole of the seat plate with the gas lift. Push the seat down firmly until the connection is secure.

4. Attach Armrests:

- Attach the armrests to the seat using two bolts on each side. The bolts only need to be screwed in 50% at this stage.

5. Attach Backrest:

- Slide the backrest onto the armrests and screw it onto one side.
- Cap all screw holes with the provided plugs.
- Flip the chair over to the other side and insert the final screws and plugs.

6. Final Tightening:

- Rotate the back of the chair up, then secure it with the bolts. Adjust the balance on each side of the chair and

fully tighten all bolts.



Image: Detailed assembly instructions with diagrams for each step, including attaching the base, seat, and backrest.

5. OPERATING INSTRUCTIONS

Your Sweetcrispy Computer Gaming Desk Chair offers several adjustable features for personalized comfort.

- **Height Adjustment:** Use the lever located under the seat on the right side to adjust the chair's height. Pull the lever up to raise or lower the seat. Release the lever to lock the height. The adjustment range is approximately 18 to 22 inches.
- **Tilt Function:** Pull the lever located under the seat on the left side outwards to enable the rocking motion (0°-45° swing angle). Push the lever inwards to lock the chair in an upright position.
- **Armrest Adjustment:** The armrests can be flipped up 90 degrees. This feature allows the chair to be easily pushed under a desk, saving space.

COMFORTABLE SEAT CUSHION



Image: Visual guide showing the height adjustment lever and the rocking angle adjustment knob under the seat.

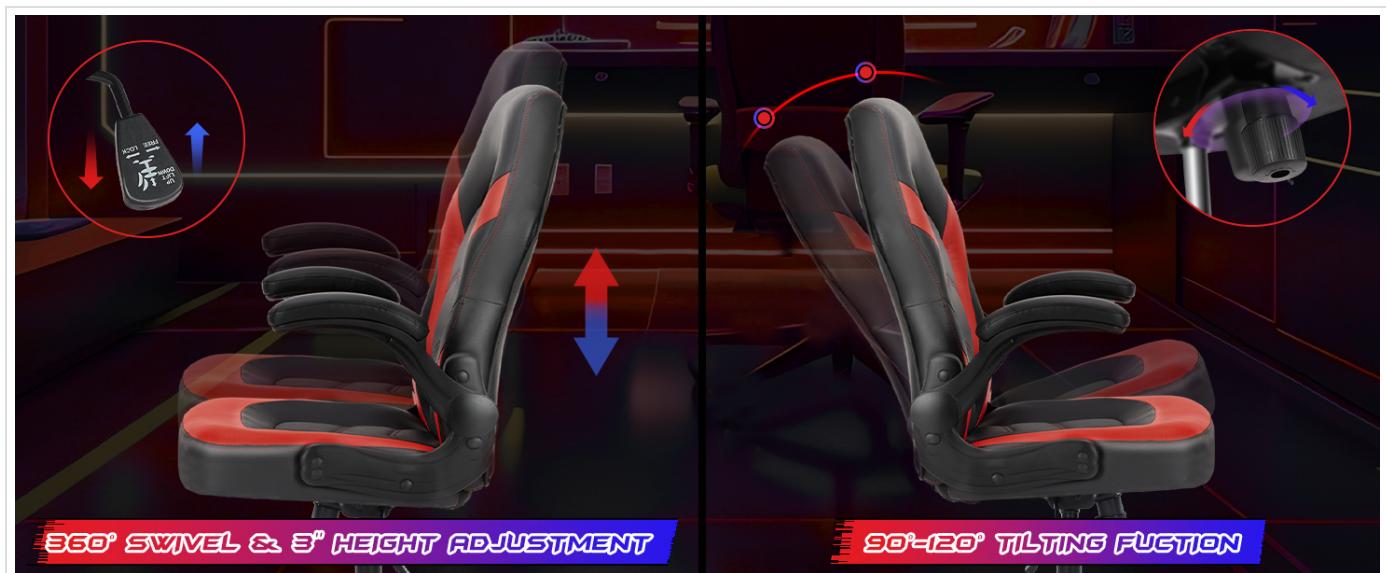


Image: The chair's armrests are shown in both the down and flipped-up positions, highlighting the space-saving feature.

6. MAINTENANCE

Regular maintenance will prolong the life and appearance of your chair.

- **Cleaning:** Wipe clean with a damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Fasteners:** Periodically check all bolts and screws for tightness. Re-tighten as necessary, ideally every 6 months.
- **Moving Parts:** Lubricate moving parts if squeaking or stiffness occurs.
- **Upholstery:** The PU leather is waterproof and scratch-resistant. Address spills promptly to prevent staining.

7. SPECIFICATIONS

Feature	Detail
Brand	Sweetcrispy
Model Name	Sweetcrispy Computer Gaming Chair
Model Number	ELHJC95-2
Color	Red
Material	Faux Leather, Memory Foam
Product Dimensions	25.98"D x 41.73"W x 25.39"H
Maximum Weight Recommendation	275 Pounds
Special Features	Adjustable Height, Flip-up Armrests, Tilt Function (0°-45°), 360° Swivel, Silent Casters
Assembly Required	Yes (approx. 15 minutes)

DIMENSIONS

275
LBS



Image: Diagram illustrating the key dimensions of the chair and its maximum weight capacity.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair does not adjust height.	Gas lift not properly installed or damaged.	Ensure gas lift is fully inserted into the base and seat mechanism. If issue persists, contact customer service for replacement.
Chair is unstable or wobbly.	Loose screws or uneven assembly.	Check and tighten all assembly screws, especially those connecting the legs to the base and armrests to the seat/backrest. Ensure the chair is on a level surface.
Casters do not roll smoothly.	Debris in casters or damaged casters.	Clean any hair or debris from the casters. If damaged, contact customer service for replacement casters.

Chair makes squeaking noises.	Friction between moving parts or loose connections.	Tighten all screws. Apply a small amount of lubricant to moving parts, such as the gas lift or tilt mechanism.
-------------------------------	---	--

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Sweetcrispy customer service. Refer to your purchase documentation for specific warranty terms and contact details.

Contact: Please refer to the contact information provided with your purchase or visit the official Sweetcrispy website.

© 2025 Sweetcrispy. All rights reserved.