

[Manuals.plus](#) /

› [ALLIMITY](#) /

› ALLIMITY RC4390A Replacement Remote Control User Manual

ALLIMITY RC4390A

ALLIMITY RC4390A Replacement Remote Control User Manual

INTRODUCTION

This manual provides instructions for the ALLIMITY RC4390A replacement remote control. This remote is designed to function as a direct replacement for various VORTEX television models, offering full functionality without the need for complex programming. Please read this manual carefully before use.



This image displays the front of the ALLIMITY RC4390A remote control, showing all buttons including power, number pad, volume, channel, navigation, and dedicated buttons for streaming services like Netflix and YouTube.


SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA alkaline batteries (not included) into the compartment, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

No programming is required. Once batteries are installed, the remote control is ready for immediate use with compatible VORTEX TV models.



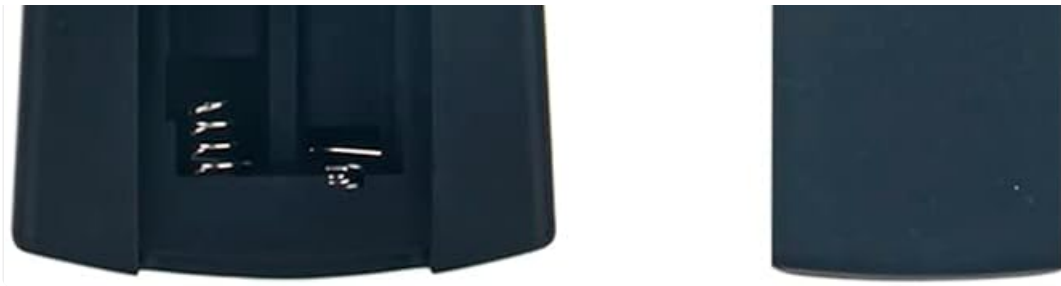

This image shows the back of the remote control with the battery cover removed, revealing the battery slots. It indicates the correct polarity for inserting AAA batteries.

OPERATING INSTRUCTIONS

Basic Functions

Point the remote control directly at your television's infrared sensor. Ensure there are no obstructions between the remote and the TV.

- **Power Button:** Turns the TV on or off.
- **Number Pad (0-9):** Selects channels directly.
- **Volume Up/Down:** Adjusts the sound level.
- **Channel Up/Down:** Changes channels sequentially.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used for menu navigation and selection.
- **Back/Exit:** Returns to the previous screen or exits a menu.
- **Smart TV Buttons (Netflix, YouTube, Kids, USB):** Provides direct access to these applications or functions, if supported by your TV model.

Compatible Models

This remote control is compatible with the following VORTEX TV models:

- V32EP18
- LED-1960
- LED-V24E16DF
- LEDV-24E19D
- LED-24E-112D
- LEDV-28E16D
- LEDV-24E24Z1
- LEDV-24CD06
- LEDV-24EP28S
- LEDV-32ED9D
- LEDV-28E22D
- LEDV-28E33D
- LEDV-24E12D
- LEDV-24E19DS
- LED-V2416DF
- LED-V24E1D
- LEDV-24E24Z
- LED-V32ED2D

- LED-V32E1D
- LEDV-40E48AS
- LEDV-42E15D
- LEDV-42E19D
- LEDV-40E19N

CARE AND MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Care:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity and are not depleted. Replace with fresh AAA alkaline batteries if necessary.
- **Line of Sight:** Make sure there is a clear path between the remote control and the TV's infrared sensor. Remove any obstructions.
- **TV Sensor:** Confirm that the TV's infrared sensor is not blocked or dirty.
- **Compatibility:** Verify that your TV model is listed as compatible with the ALLIMITY RC4390A remote control.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	ALLIMITY
Model Number	QYSY-RC4390A-V-QYSY
Compatible Devices	VORTEX V32EP18, LED-1960, LED-V24E16DF, LEDV-24E19D, LED-24E-112D, LEDV-28E16D, LEDV-24E24Z1, LEDV-24CD06, LEDV-24EP28S, LEDV-32ED9D, LEDV-28E22D, LEDV-28E33D, LEDV-24E12D, LEDV-24E19DS, LED-V2416DF, LED-V24E1D, LEDV-24E24Z, LED-V32ED2D, LED-V32E1D, LEDV-40E48AS, LEDV-42E15D, LEDV-42E19D, LEDV-40E19N
Special Features	No programming required
Batteries Required	Yes, 2x AAA (not included)
Connection Type	Infrared
Controller Type	Button Control

Feature	Detail
Maximum Range	10 Meters
Product Dimensions	4 x 12 x 0.3 cm
Product Weight	60 g
First Available Date	12 April 2023

WARRANTY INFORMATION

This product comes with a standard manufacturer's warranty. For specific details regarding warranty coverage and duration, please refer to the purchase documentation or contact the seller directly.

CUSTOMER SUPPORT

If you encounter any issues or have questions regarding your ALLIMITY RC4390A replacement remote control that are not addressed in this manual, please contact the seller or ALLIMITY customer support for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C27B7LCG>

More documents and user manuals: <https://manuals.plus/>