

[Manuals.plus](#) /

> [NEDIS](#) /

> NEDIS Bluetooth 5.0 Wireless Neck Speaker SPBT5010BK User Manual

NEDIS SPBT5010BK

NEDIS Bluetooth 5.0 Wireless Neck Speaker

Model: SPBT5010BK

User Manual

INTRODUCTION

Thank you for choosing the NEDIS Bluetooth 5.0 Wireless Neck Speaker. This manual provides essential information for the safe and efficient use of your device. Please read these instructions carefully before use and retain them for future reference.

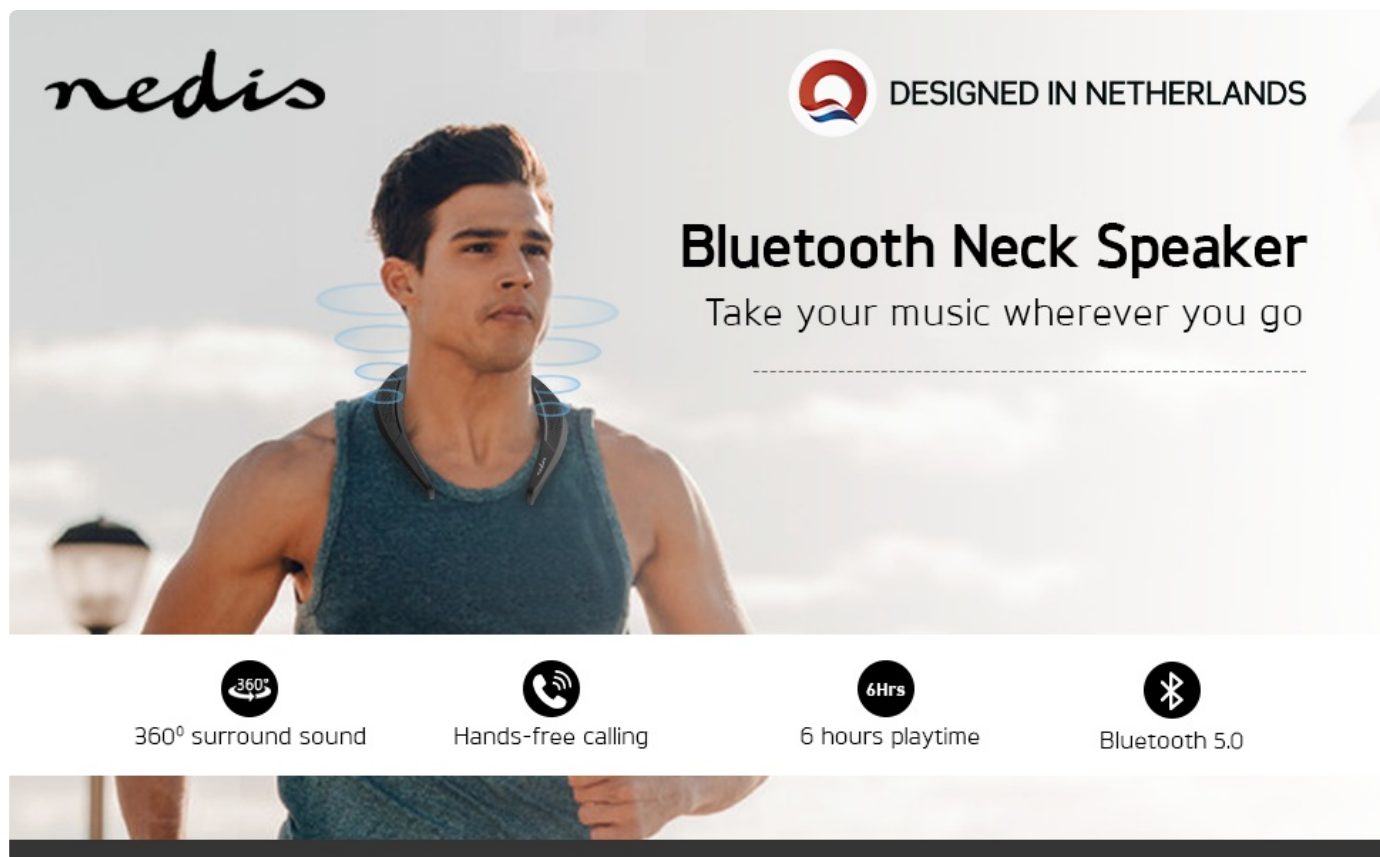


Figure 1: User wearing the NEDIS Bluetooth Neck Speaker, demonstrating comfortable fit.

WHAT'S IN THE BOX

- NEDIS Bluetooth 5.0 Wireless Neck Speaker (SPBT5010BK)


- USB Charging Cable
- User Manual

PRODUCT OVERVIEW

Speaker Components

Dynamic sound quality

Hi-fi audio performance with
well-balanced bass

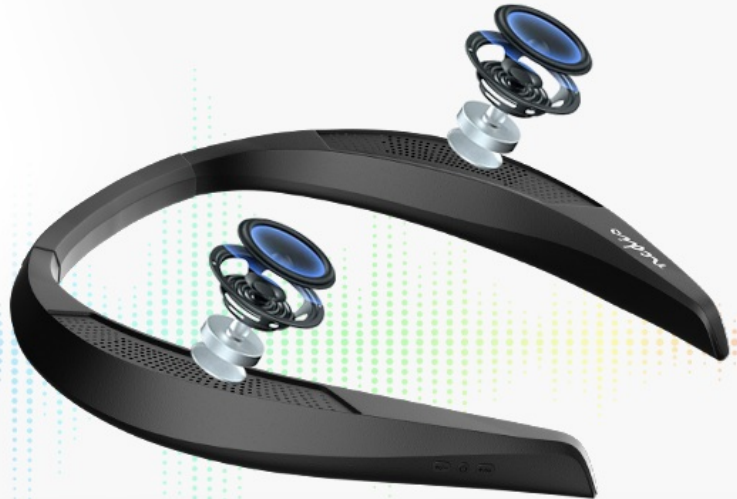

9W (2 x 4.5) peak
power output



Driver Diameter:
2x 40mm

Figure 2: Internal speaker components and power input details.

The neck speaker features two 4.5W peak power speakers for a total of 9W output, delivering clear stereo sound. It is powered by a 5V DC input.

Controls and Ports

nedis

Integrated Controls

Play/pause music, skip tracks, adjust the volume
and take calls on the go



Figure 3: Integrated controls including power button and volume/track change buttons.

- **Power Button:** Used to turn the speaker on/off.
- **Volume/Track Change Buttons:** Adjust volume and skip tracks.
- **Charging Port:** Micro USB port for charging the device.
- **Built-in Microphone:** For hands-free calling.

SETUP

1. Charging the Speaker

Before first use, fully charge the neck speaker. Use the provided USB charging cable.

1. Connect the small end of the USB cable to the charging port on the neck speaker.
2. Connect the larger end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. Once fully charged (approximately 2 hours), the light will change or turn off.

A full charge provides up to 6 hours of playtime at 50% volume and up to 120 hours of standby time.



Figure 4: Charging port and battery life information.

2. Bluetooth Pairing

To connect the neck speaker to your device:

1. Ensure the neck speaker is charged.
2. Press and hold the Power button until the indicator light flashes, indicating pairing mode.
3. On your smartphone or tablet, enable Bluetooth and search for available devices.
4. Select "NEDIS SPBT5010BK" from the list of devices.
5. Once connected, the indicator light will stop flashing and remain solid.

The speaker will automatically attempt to reconnect to the last paired device when powered on.

OPERATING INSTRUCTIONS

Power On/Off

- **To Power On:** Press and hold the Power button for approximately 3 seconds.
- **To Power Off:** Press and hold the Power button for approximately 3 seconds.

Music Playback

- **Play/Pause:** Press the Power button once.
- **Next Track:** Press the '+' button.
- **Previous Track:** Press the '-' button.
- **Volume Up:** Press and hold the '+' button.
- **Volume Down:** Press and hold the '-' button.

Hands-Free Calling

Stay connected, Stay comfortable



Hands-free
calling



Lightweight



Integrated
Controls



Volume and track change

Power button

Figure 5: The built-in microphone enables convenient hands-free communication.

- **Answer Call:** Press the Power button once when a call comes in.
- **End Call:** Press the Power button once during a call.
- **Reject Call:** Press and hold the Power button for approximately 2 seconds when a call comes in.

MAINTENANCE

- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the speaker to extreme temperatures, direct sunlight, or high humidity.
- The speaker is water resistant; however, do not submerge it in water.
- Store the speaker in a cool, dry place when not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is low or depleted.	Charge the speaker fully.
Cannot pair with device.	Speaker is not in pairing mode. Bluetooth is off on device. Device is too far.	Ensure speaker is in pairing mode. Turn on Bluetooth on your device. Move device closer to speaker (within 10 meters).

Problem	Possible Cause	Solution
No sound or low volume.	Volume is too low on speaker or device. Speaker is not connected.	Increase volume on both speaker and connected device. Repair the speaker if disconnected.
Poor call quality.	Weak Bluetooth connection. Obstructions.	Move closer to the connected device. Ensure no major obstructions between speaker and device.

SPECIFICATIONS

Feature	Detail
Brand	NEDIS
Model Number	SPBT5010BK
Connectivity Technology	Bluetooth 5.0
Audio Output Mode	Stereo
Speaker Maximum Output Power	9 Watts (2 x 4.5W peak)
Frequency Response	20 KHz
Battery Average Life	Up to 6 Hours (at 50% volume)
Control Method	Touch, Button
Water Resistance Level	Water Resistant
Item Weight	280 Grams
Item Dimensions (D x W x H)	5.5D x 20.8W x 36H Centimeters
Country of Origin	China

WARRANTY AND SUPPORT

Warranty Information

This NEDIS product is covered by a **1-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects and faults under normal use conditions.

Customer Support

For technical support, troubleshooting assistance, or warranty inquiries, please contact your retailer or the NEDIS customer service department. Refer to the contact information provided with your purchase documentation or visit the official NEDIS website for support details.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C27KJQHM>

More documents and user manuals: **<https://manuals.plus/>**