

[Manuals.plus](#) /

› [Pop Sonic](#) /

› Pop Sonic Moon Shaver User Manual - PS_Moon_Shaver_332

Pop Sonic PS_Moon_Shaver_332

Pop Sonic Moon Shaver User Manual

Model: PS_Moon_Shaver_332

[Safety Information](#)

[Product
Overview](#)

[Setup](#)

[Operation
Warranty &
Support](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Pop Sonic Moon Shaver. Retain this manual for future reference.

- **Caution:** Use with caution to avoid cuts or skin irritation.
- **Cleaning:** Always ensure the shaver is turned OFF before cleaning. Clean the shaver regularly and follow the manufacturer's instructions for proper maintenance.
- **Water Exposure:** Do not use the shaver near water or while charging the device. This product is designed for wet/dry use, but charging near water is prohibited.
- **Disassembly:** Do not attempt to disassemble or repair the shaver yourself. Contact customer support for assistance.
- **Children:** Keep out of reach of children.
- **Charging:** Use only the provided USB charging cable.

PRODUCT OVERVIEW

The Pop Sonic Moon Shaver is a portable electric shaver designed for efficient and comfortable hair removal on both face and body. Its ergonomic egg-shaped design ensures a comfortable grip.



This image displays the Pop Sonic Moon Shaver in a rose gold finish. On the left, the shaver is shown with its protective cap covering the blades, featuring a power button and the 'pop' logo. On the right, the shaver is shown with the cap removed, revealing the three floating rotary shaving heads.

Key Features:

- 3 Floating Rotary Heads: Adapts to body contours for a close shave.
- Titanium Blades: Sharper and more durable than standard blades.
- Ergonomic Egg-Shaped Design: Comfortable and easy to hold.
- Rechargeable Lithium-Ion Battery: Provides up to 60 minutes of cordless operation.
- Wet/Dry Use: Can be used for dry shaving or with shaving gel/foam.
- Portable: Compact design with a protective cap for travel.

SETUP

Unboxing and Initial Inspection:

1. Carefully remove the Pop Sonic Moon Shaver and its accessories from the packaging.
2. Verify that all components are present:
 - Pop Sonic Moon Shaver (main unit)
 - USB Charging Cable
 - Cleaning Brush
 - Protective Cap
3. Inspect the shaver for any visible damage. If damaged, do not use and contact customer support.

Initial Charging:

Before first use, fully charge the shaver.

1. Connect the small end of the USB charging cable to the charging port on the shaver.
2. Connect the large end of the USB charging cable to a compatible USB power adapter (not included) or a computer USB port.
3. During charging, the LED light around the power button will glow red.
4. The light will turn off when the shaver is fully charged. A full charge typically takes over 60 minutes and provides approximately 60 minutes of use.
5. Disconnect the charging cable once fully charged.

OPERATING INSTRUCTIONS

General Use:

1. Ensure the shaver is fully charged.
2. Remove the protective cap by gently twisting and pulling it off.
3. Press the power button to turn the shaver ON. The LED light will glow green.
4. For optimal results, hold the shaver at a 90-degree angle to your skin.
5. Shave hair by lightly moving the device upright against the skin, using small circular motions or gliding strokes.
6. Apply minimal pressure to avoid skin irritation.
7. After use, press the power button to turn the shaver OFF.
8. Replace the protective cap.

Wet or Dry Shaving:

- **Dry Shaving:** Use on clean, dry skin for quick touch-ups.
- **Wet Shaving:** Can be used with shaving cream or gel for a smoother, more comfortable shave. Rinse the shaver head under running water during or after use if using wet.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your shaver.

Cleaning the Shaver Head:

1. Ensure the shaver is turned OFF.
2. Remove the protective cap.
3. To access the blades for cleaning, gently twist the shaver head counter-clockwise and lift it off. The head is held by magnets.
4. Use the provided cleaning brush to remove any trapped hair from the blades and the inner chamber of the shaver head.
5. For a more thorough clean, the shaver head can be rinsed under running water. Ensure the main body of the shaver does not get wet if not designed for full immersion.
6. Allow all parts to air dry completely before reassembling.
7. Align the shaver head with the main body and gently twist clockwise until it clicks into place.

Storage:

Store the shaver in a cool, dry place with the protective cap on when not in use. Keep it away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver fully.
Shaver performance is poor / pulling hair.	Blades are dirty or dull.	Clean the shaver head thoroughly. If performance does not improve, blades may need replacement (contact support).
Skin irritation after shaving.	Excessive pressure applied; sensitive skin; dry shaving without preparation.	Use lighter pressure. Consider wet shaving with gel. Ensure skin is clean before shaving.
Charging light not illuminating.	Cable not properly connected; power source issue; shaver already fully charged.	Check USB cable connection. Try a different USB port or power adapter. If fully charged, the light will turn off.

If you encounter issues not listed here, please contact Pop Sonic customer support.

SPECIFICATIONS

- **Model Name:** Moon Shaver
- **Model Number:** PS_Moon_Shaver_332
- **Power Source:** Battery Powered
- **Battery Type:** 1 Lithium-ion (included)
- **Battery Life:** Approximately 60 minutes of use per full charge
- **Charging Time:** Over 60 minutes for a full charge
- **Blade Material:** Titanium
- **Head Type:** Rotary (3 floating heads)

- **Color:** White (Note: Product title and image may show a Rose Gold variant.)
- **Dimensions:** 16.21 x 11 x 7.39 cm
- **Weight:** 136.08 grams
- **Components Included:** Shaver, USB Charging Cable, Cleaning Brush, Protective Cap

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact Pop Sonic customer service.

Refer to the product packaging or the official Pop Sonic website for the most up-to-date contact information.

© 2026 Pop Sonic. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question