

[manuals.plus](#) /› [KITWLEMEN](#) /› [KITWLEMEN D13 40000mAh Rechargeable Camping Fan User Manual](#)

KITWLEMEN D13

KITWLEMEN D13 40000mAh Rechargeable Camping Fan User Manual

Model: D13

1. INTRODUCTION

Thank you for choosing the KITWLEMEN D13 40000mAh Rechargeable Camping Fan. This versatile device combines a powerful fan, bright LED light, and a portable power bank, making it an essential companion for outdoor activities, power outages, and various indoor uses. This manual provides detailed instructions for safe and efficient operation, maintenance, and troubleshooting.

2. SAFETY INSTRUCTIONS

- Read all instructions before use and retain for future reference.
- Do not insert fingers or any objects into the fan grille.
- Keep the fan away from water or excessive moisture.
- Do not attempt to disassemble or repair the unit yourself. Contact qualified service personnel.
- Use only the provided adapter for charging.
- Keep out of reach of children.
- Ensure the fan is placed on a stable, flat surface to prevent tipping.

3. PACKAGE CONTENTS

- KITWLEMEN D13 Camping Fan
- Power Adapter
- USB-C Charging Cable
- Remote Control
- User Manual

4. PRODUCT OVERVIEW

The KITWLEMEN D13 fan features a robust design with multiple functionalities for enhanced user experience.

Key Features:

- **40000mAh Rechargeable Battery:** Provides up to 136 hours of cooling on low speed and supports PD 22.5W fast charging.
- **Power Bank Functionality:** Equipped with Type-C and USB output ports to charge external devices like phones.
- **Super Bright LED Light:** 32 LED beads with 3 brightness settings and warm/white modes, offering up to 220 hours of lighting.
- **9-inch Triblade Design:** Delivers powerful airflow up to 16.1 ft/s.
- **Adjustable Airflow:** 4 fan speeds, 90°/45° auto oscillation, and 270° manual tilt.
- **Dual Control:** Operates via control panel buttons or remote control.
- **Smart Features:** LED indicators for fan speed and battery status, 1/2/4/8H timer, and sleep mode.
- **Portable Design:** Sturdy ABS material with a built-in silicone handle and a 360° rotatable/foldable hook for hanging.



Figure 1: KITWLEMEN D13 Camping Fan with remote control and a phone connected for charging.

5. SETUP

5.1 Initial Charging

Before first use, fully charge the fan. Connect the USB-C charging cable to the fan's Type-C port and the power adapter. Plug the adapter into a power outlet. The battery indicator lights on the control panel will show the charging progress. A full charge typically takes 9-10 hours.



Figure 2: Close-up of the fan's base showing the USB output port and Type-C input/output port.

5.2 Remote Control Setup

The remote control is pre-paired with the fan. Ensure the insulating sheet is removed from the remote's battery compartment before first use.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press the power button on the control panel or the remote control to turn the fan on or off.

6.2 Fan Speed Adjustment

Press the fan speed button on the control panel or remote to cycle through 4 different fan speeds (1-4). The LED indicators will show the current speed.



Figure 3: The fan operating outdoors, illustrating its four adjustable speeds.

6.3 Oscillation Control

Press the oscillation button on the control panel or remote to activate or deactivate the auto-oscillation feature (90° or 45°). The fan head can also be manually tilted 270° for precise airflow direction.

45/90-Degree Auto Oscillation & 270-Degree Tilt Adjustment

Easily changing air flow to meet your needs



Figure 4: Diagram illustrating the fan's 45/90-degree auto oscillation and 270-degree manual tilt capabilities.

6.4 LED Light Modes and Brightness

Press the light button on the control panel or remote to cycle through 3 brightness settings and warm/white light modes. The LED lights can provide illumination for various situations.

Powerful Fan & Long Battery Life



Figure 5: The fan's integrated LED lantern with various brightness levels and the hanging hook feature.

6.5 Timer Function

Press the timer button on the control panel or remote to set the fan to automatically shut off after 1, 2, 4, or 8 hours. The corresponding LED indicator will light up.

6.6 Sleep Mode

Activate sleep mode by pressing the moon icon button. In this mode, all indicator lights on the control panel will turn off to prevent light disturbance during sleep, while the fan continues to operate at a low, quiet setting.

Sleep Mode & Timer

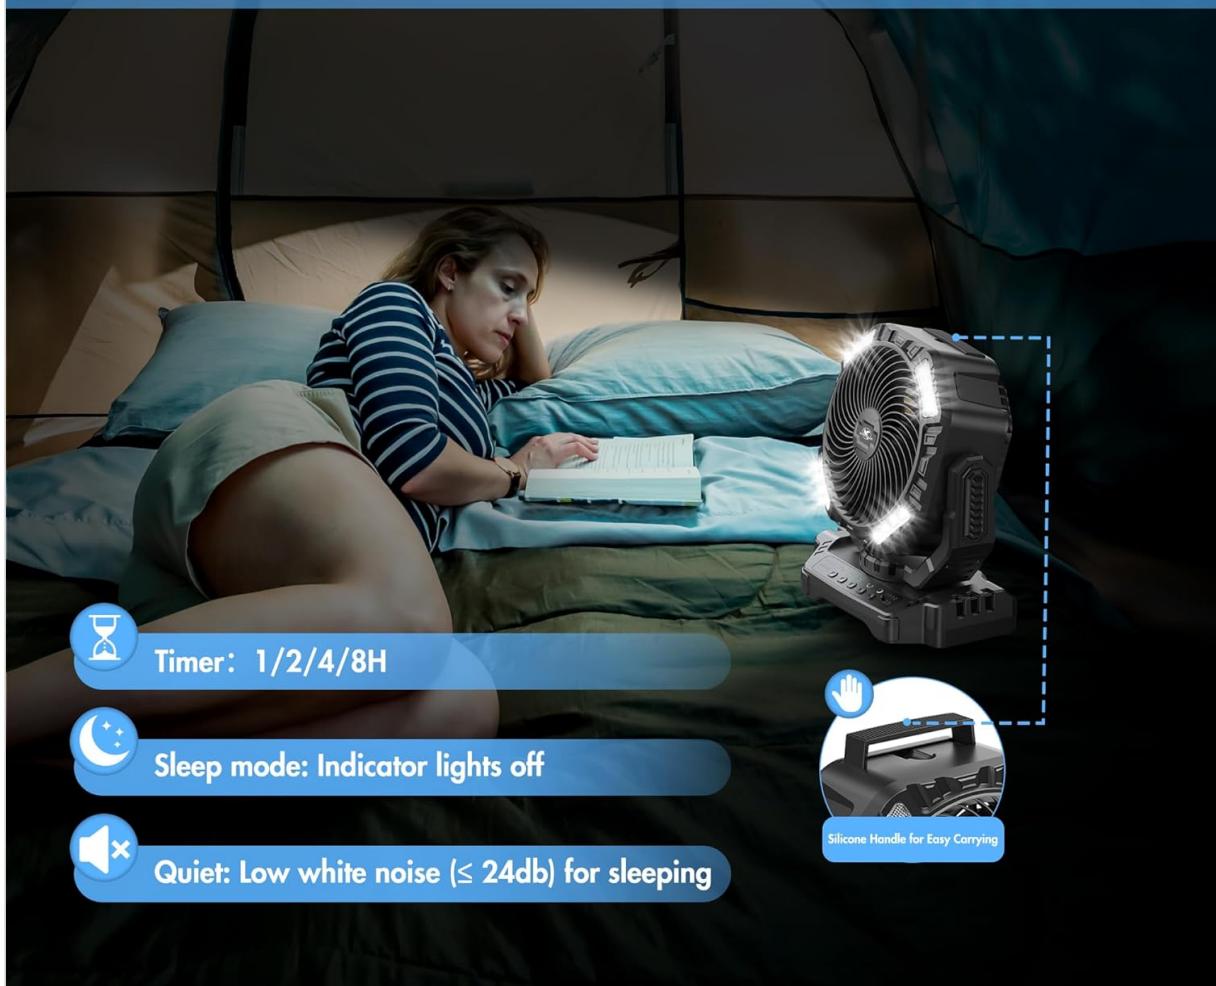


Figure 6: The fan demonstrating its sleep mode and timer settings for undisturbed rest.

6.7 Using as a Power Bank

Connect your device's charging cable to the fan's USB output port or Type-C output port to charge your devices. The fan's 40000mAh battery can serve as a reliable power source.



Figure 7: The fan charging a smartphone, highlighting its power bank capability.

6.8 Hanging the Fan

Utilize the 360° rotatable and foldable hook located at the bottom of the fan to hang it in tents, gazebos, or other suitable locations.



Figure 8: Illustration of the fan's versatile hanging hook.

6.9 Official Product Videos

Video 1: Demonstrates the KITWLEMEN 40000mAh Rechargeable Battery Operated Camping Fan in various outdoor scenarios, highlighting its portability, power bank function, and oscillation.

Video 2: Showcases the KITWLEMEN 40000mAh Rechargeable Battery Powered Fan for Outdoor Camping, emphasizing its features like LED lighting, remote control, and robust design.

7. MAINTENANCE

7.1 Cleaning

- Ensure the fan is turned off and unplugged before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces.
- For the fan blades, use a soft brush or compressed air to remove dust. Do not use water directly on the fan.

7.2 Storage

When not in use for extended periods, store the fan in a cool, dry place. It is recommended to charge the battery every 3-6 months to maintain its lifespan.

8. TROUBLESHOOTING

- **Fan not turning on:** Check battery level. Ensure the fan is charged.
- **Weak airflow:** Adjust fan speed to a higher setting. Ensure fan grilles are not obstructed.
- **LED lights not working:** Check if the light function is activated. Ensure battery has sufficient charge.
- **Remote control not working:** Check if the insulating sheet is removed. Replace remote battery if necessary.
- **Device not charging from fan:** Ensure the fan has sufficient battery charge. Check the charging cable and device connection.

9. SPECIFICATIONS

Feature	Specification
Brand	KITWLEMEN
Model Name	D13
Power Source	Battery Powered
Battery Capacity	40000mAh (Lithium Polymer)
Max Cooling Duration	136 hours (low speed)
Charging Time	9-10 hours (via 5V/3A Type-C)
Wattage	22.5 watts
Voltage	5 Volts
Fan Speeds	4 RPM
Air Flow Capacity	290 Cubic Feet Per Minute
Noise Level	24 Decibels

LED Light Beads	32
LED Light Modes	3 brightness settings, warm/white modes
Max Lighting Duration	220 hours (low setting)
Oscillation	90°/45° Auto Oscillation
Tilt Adjustment	270° Manual Tilt
Product Dimensions	7"D x 13"W x 14"H
Item Weight	6.9 Pounds
Control Method	Remote, Push Button

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official KITWLEMEN website. Keep your purchase receipt as proof of purchase.