

Philips QP2824/10

Philips OneBlade Face + Body QP2824/10

Instruction Manual

1. PRODUCT OVERVIEW

The Philips OneBlade is a revolutionary hybrid styler designed for trimming, edging, and shaving any length of hair on both face and body. It features a unique OneBlade technology with a fast-moving cutter and a dual protection system, providing an efficient and comfortable shave.

- Trims, edges, and shaves any length of hair.
- Includes a versatile 5-in-1 adjustable comb.
- Comes with a skin guard for sensitive areas.
- Features a 3 mm body comb for easy body trimming.
- Fully waterproof for wet and dry use.



Figure 1: Philips OneBlade Face + Body QP2824/10 with its included accessories, including the device, various combs, a replacement blade, and the charging cable.

Shave

it off



Figure 2: A detailed graphic illustrating the unique cutting technology of the Philips OneBlade, showing the fast-moving cutter behind a dual protection system.

2. SAFETY INFORMATION

Please read all safety instructions before using the Philips OneBlade. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Users should be cautious when trimming or shaving to avoid cuts.
- Always follow the manufacturer's instructions for cleaning and maintaining the device to prevent skin irritation and bacterial growth.
- Exercise caution when using the shaver near water or while charging the device.
- Do not use the device if it is damaged.
- Keep out of reach of children.

3. SETUP AND CHARGING

3.1 Initial Charge

Before first use, fully charge your Philips OneBlade. Connect the charging cable to the device and plug it

into a power source. A full charge takes approximately 8 hours and provides up to 45 minutes of constant shaving power.



Figure 3: The Philips OneBlade device being charged via its USB cable, illustrating its 45-minute run time after an 8-hour charge.

3.2 Attaching/Detaching Blades and Combs

- To attach a blade: Align the blade with the handle and push until it clicks into place.
- To detach a blade: Press the release button on the back of the handle and pull the blade away.
- To attach a comb: Slide the desired comb attachment over the blade until it locks securely.
- To detach a comb: Gently pull the comb attachment away from the blade.

4. OPERATING INSTRUCTIONS

The Philips OneBlade is designed for versatile grooming. Its dual-sided blade allows for precise control and easy maneuvering in any direction.

45 minutes of constant shaving

power after an 8 hour charge



Figure 4: A close-up view of the OneBlade's unique dual-sided blade, designed for precise trimming and edging.

4.1 Trimming

Attach the 5-in-1 adjustable comb or the 3 mm body comb to trim hair to your desired length. Move the OneBlade against the direction of hair growth for an even trim.

Dual-sided blade:

designed for precision
and control

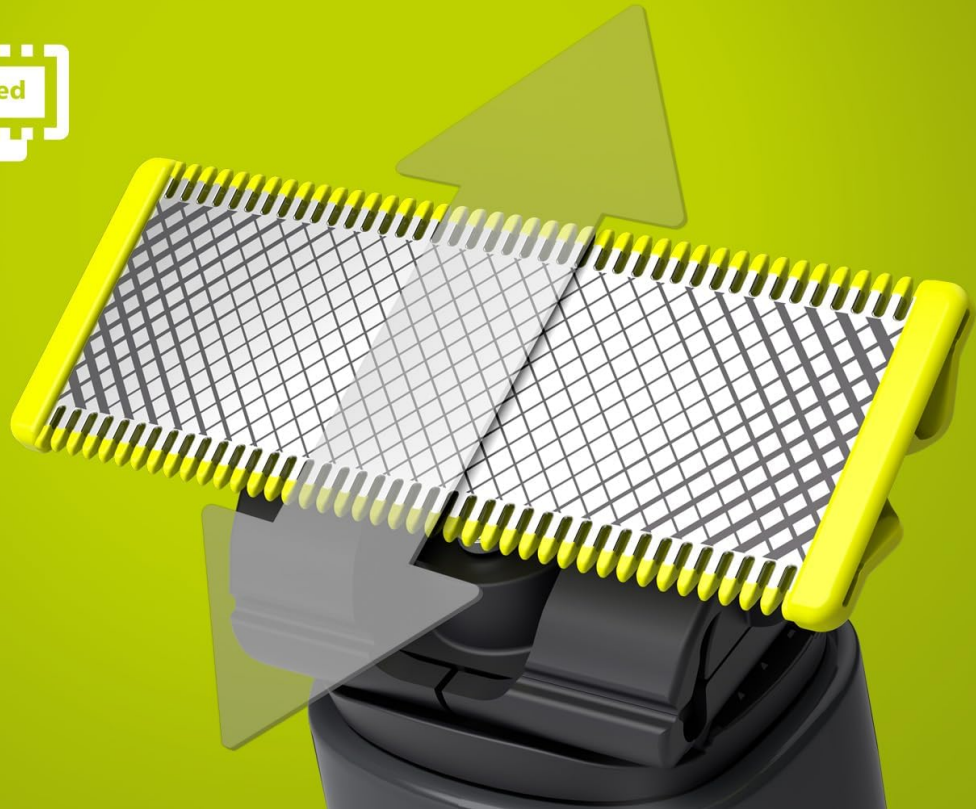


Figure 5: A person using the Philips OneBlade with a comb attachment to trim facial hair, demonstrating its capability to trim down hair length.

4.2 Edging

Use the OneBlade without a comb to create precise lines and sharp edges. Hold the blade flat against your skin and move it in the desired direction.

Trim it down

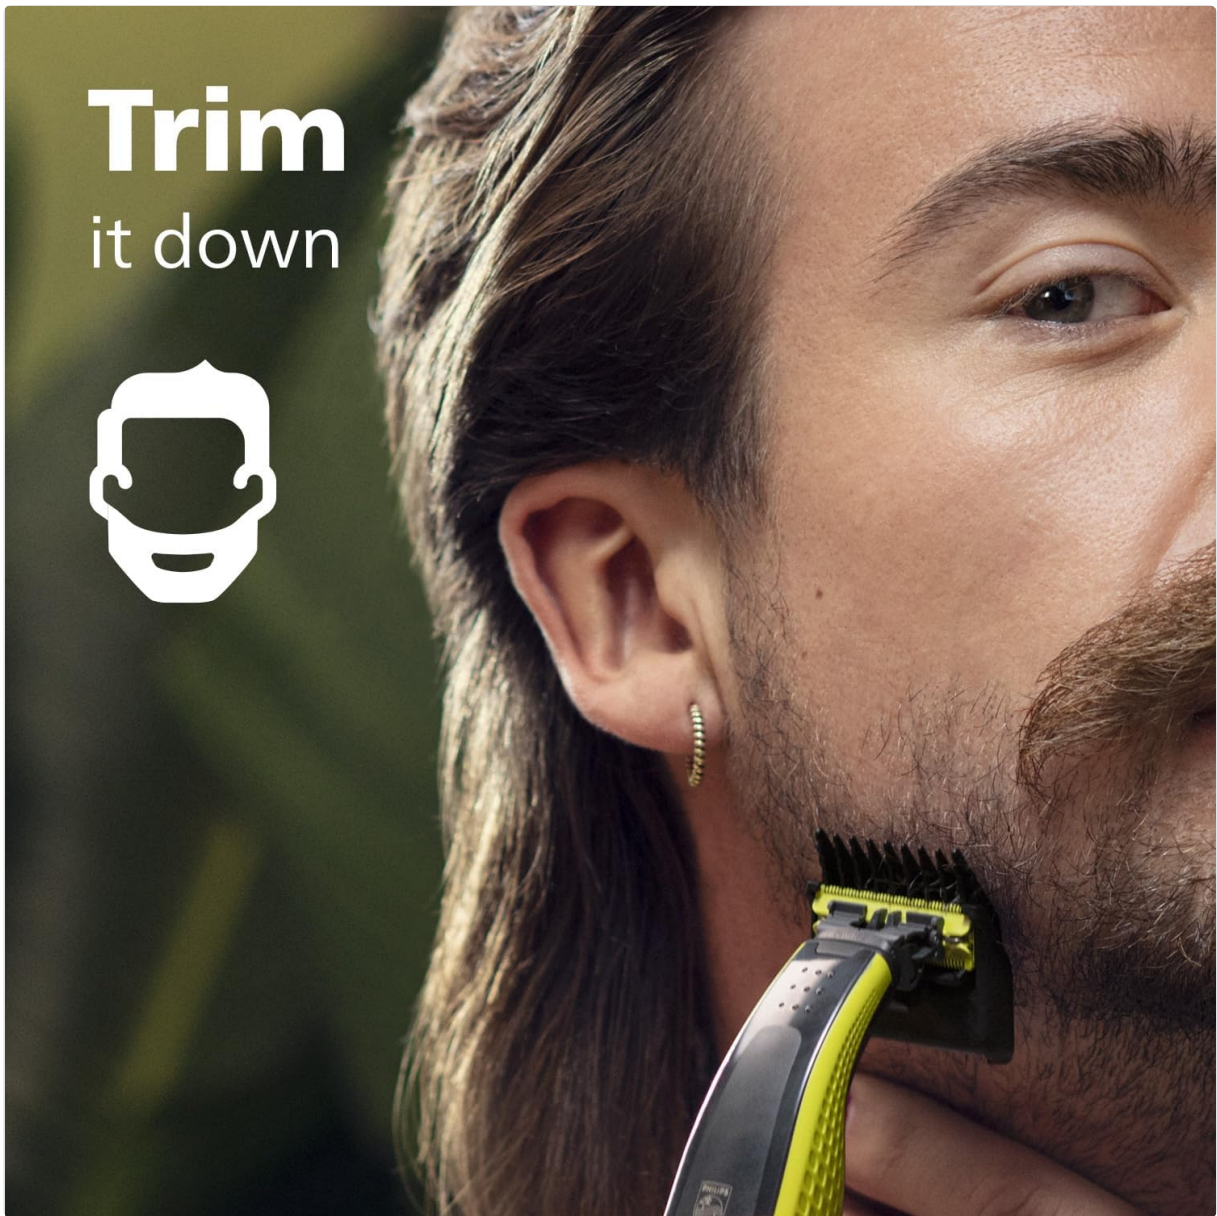


Figure 6: A person using the Philips OneBlade without a comb to create sharp lines and edges on their facial hair, showcasing its precision edging function.

4.3 Shaving

For a close shave, use the OneBlade without a comb. Move the blade against the direction of hair growth, keeping it flat against your skin. The dual protection system helps prevent nicks and cuts.

Edge

it up



Figure 7: A person using the Philips OneBlade directly on their skin to achieve a close shave, illustrating its ability to shave hair without irritation.

4.4 Body Grooming

For sensitive areas, attach the click-on skin guard for an extra layer of protection. Use the 3 mm body comb for easy and safe trimming of body hair in any direction.

Click-on skin guard

for sensitive areas

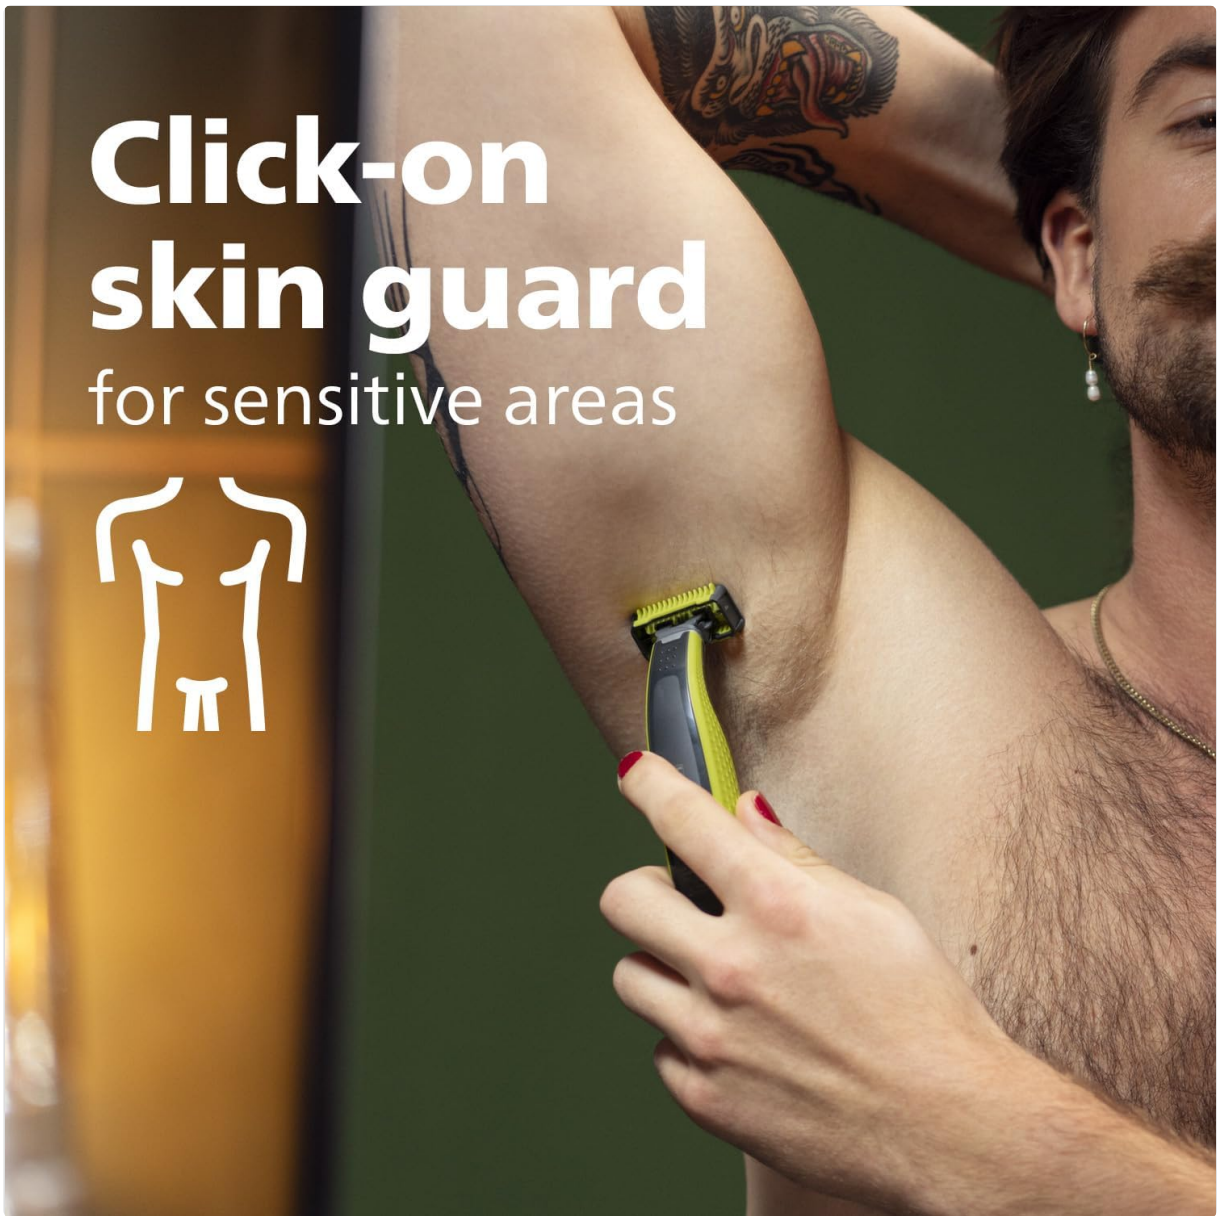 


Figure 8: The Philips OneBlade being used with the click-on skin guard attachment on a sensitive body area (underarm), emphasizing protection during grooming.

5. MAINTENANCE AND CLEANING

The Philips OneBlade is fully waterproof, making it easy to clean.

- After each use, rinse the blade and the device under running water.
- Ensure all hair residue is removed.
- Allow the device to air dry completely before storing or charging.
- For optimal performance, replace the blade every 4 months or when you notice reduced performance.

6. TROUBLESHOOTING

If you encounter issues with your Philips OneBlade, refer to the following common solutions:

- **Device not turning on:** Ensure the device is fully charged. Connect it to the charger for at least 8 hours.
- **Reduced cutting performance:** The blade may be dull. Replace the blade with a new Philips

OneBlade replacement blade.

- **Skin irritation:** Ensure the blade is clean and not dull. Use the skin guard for sensitive areas. Shave against the grain with light pressure.
- **Device not charging:** Check the charging cable and adapter for damage. Ensure the charging port on the device is clean and free of debris.

If problems persist, please contact Philips customer support.

7. SPECIFICATIONS

Feature	Specification
Model Name	QP2824/10
Brand	Philips
Power Source	Battery Powered
Battery Type	1 x 9V battery (included)
Charge Time	8 hours
Run Time	45 minutes
Special Features	Waterproof
Head Type	OneBlade
Blade Material	High-quality Steel
Color	Black
Item Weight	210 Grams
Product Dimensions	3.6 x 10 x 17.8 cm
Included Components	Comb, Layer (Skin Guard)

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Philips website. You can also visit the [Philips Store on Amazon](#) for additional product information and support resources.