

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Aresrora](#) /

› [Aresrora Mini Karaoke Machine C20 Plus User Manual](#)

Aresrora C20 Plus

Aresrora Mini Karaoke Machine C20 Plus User Manual

Model: C20 Plus

Brand: Aresrora

1. INTRODUCTION

The Aresrora Mini Karaoke Machine C20 Plus is a compact and portable entertainment system designed for both kids and adults. It features a high-fidelity Bluetooth speaker and a wireless microphone, offering superior sound quality with voice beautification and multiple voice-changing effects. Its retro design and lightweight construction make it ideal for various indoor and outdoor activities, allowing you to enjoy karaoke anytime, anywhere.

2. WHAT'S IN THE BOX

- 1 x Karaoke Speaker
- 1 x Wireless Microphone
- 1 x USB Type-C Charging Cable
- 1 x User Manual

ENDLESS FUN SIX SOUND CHANGING MODES

Fun magic voices



EFF KEY

One touch control
six voice changes



High-power microphone



Beautify your voice



Portable, take it anywhere



Gorgeous design, quality life



Magic voice effects

Image: All components included in the Aresora Mini Karaoke Machine C20 Plus package.

3. PRODUCT OVERVIEW

Key Features

- **Portable Design:** Compact size (4.3 x 3.1 x 2 inches) and lightweight for easy transport.
- **Superior Sound:** High-fidelity 5W speaker with DSP chip for adjustable treble, bass, and voice beautification.
- **Wireless Microphone:** Includes one wireless microphone for singing.
- **Bluetooth Connectivity:** Seamlessly connect to smartphones, tablets, and other Bluetooth-enabled devices.
- **Voice Changer:** Microphone features multiple voice-changing modes for added fun.
- **Multiple Playback Options:** Supports Bluetooth and TF card input.
- **Long Battery Life:** Built-in lithium polymer battery provides 2-4 hours of play time, depending on usage.

Controls

The karaoke machine consists of a main speaker unit and a wireless microphone, each with its own set of controls.

Speaker Controls:

- **Power Button:** Press and hold to turn the speaker on or off.
- **Volume Knob:** Rotate to adjust the overall volume of the music and microphone output.
- **Play/Pause Button:** Press to play or pause music.
- **Previous/Next Track Buttons:** Press to skip to the previous or next song.

Microphone Controls:

- **Power Button:** Press and hold to turn the microphone on or off.
- **Volume Buttons (+/-):** Adjust the microphone's input volume.
- **EFF Key (Voice Changer):** Press to cycle through different voice changing effects.



Image: Detailed view of the microphone controls.



Image: Front view of the speaker with visible controls.

4. SETUP

Charging the Device

Before first use, fully charge both the speaker and the microphone.

1. Connect the provided USB Type-C charging cable to the Type-C port on the back of the speaker.
2. Connect the other end of the cable to a compatible USB power adapter (not included) or a computer USB port.
3. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off.
4. Repeat the process for the wireless microphone using its dedicated Type-C charging port.

KARAOKE MACHINE FOR KIDS & ADULTS



YouTube



Starmaker



Spotify



Smule



Karaoke Life



Sing Karaoke

KEEP THE MUSIC NON-STOP



Image: Speaker's rear panel with Type-C charging port and TF card slot.

PORTABLE KARAOKE MACHINE



Image: Microphone with battery life indication, showing approximately 2-4 hours of play time.

Power On/Off

- **To Power On:** Press and hold the power button on both the speaker and the microphone until you hear a power-on prompt or see an indicator light.
- **To Power Off:** Press and hold the power button on both devices again until you hear a power-off prompt or the indicator light turns off.

Bluetooth Pairing

To connect your device to the karaoke machine:

1. Ensure both the speaker and the microphone are powered on.
2. On your smartphone, tablet, or other Bluetooth-enabled device, go to the Bluetooth settings.
3. Search for available devices and select "C20 Plus" from the list.
4. Once connected, you will hear a confirmation sound from the speaker. The microphone will automatically pair with the speaker when both are on.

KARAOKE MACHINE FOR KIDS & ADULTS



YouTube



Starmaker



Spotify



Smule



Karaoke Life



Sing Karaoke



KEEP THE MUSIC NON-STOP

Image: Bluetooth pairing process and available input options.

5. OPERATING INSTRUCTIONS

Playing Music

- **Via Bluetooth:** After successful Bluetooth pairing, open your preferred music or karaoke app on your connected device and start playing. Use the speaker's controls or your device to manage playback.
- **Via TF Card:** Insert a TF (MicroSD) card loaded with MP3 music files into the designated slot on the speaker. The speaker will automatically detect and begin playing music from the card.

Using the Microphone and Voice Changer

Once the microphone is powered on and automatically paired with the speaker, you can begin singing.

1. Speak or sing into the microphone. Your voice will be amplified through the speaker.
2. To adjust the microphone's volume, use the '+' and '-' buttons on the microphone.
3. To activate the voice changer, press the 'EFF KEY' button on the microphone. Each press will cycle through a different voice effect. There are six distinct voice modes available.

Video: Demonstration of the Aresrora Mini Karaoke Machine, including its voice changer features. This video is provided by the seller, Aresrora Direct.

6. SPECIFICATIONS

Specification	Detail
Item Weight	14 ounces
Product Dimensions	5.5 x 3 x 4 inches
Item Model Number	C20 Plus
Batteries	1 Lithium Polymer battery required (included)
Voltage	3.7 Volts
Speaker Count	1
Connector Type	USB Type C
Compatible Devices	Smartphones, TVs, iPads, Tablets, PCs
Power Source	Battery Powered

7. TROUBLESHOOTING

- **No Sound from Speaker:**

- Ensure the speaker is powered on and charged.
- Check the volume knob on the speaker and the volume level on your connected device.
- Verify that the Bluetooth connection is active.

- **Microphone Not Working:**

- Ensure the microphone is powered on and charged.
- Check the microphone's volume settings.
- If the microphone is not automatically pairing, try turning both the speaker and microphone off and then on again.

- **Bluetooth Disconnection:**

- Ensure your device is within the effective range (typically 10 meters) of the speaker.
- Check for any obstructions or interference that might affect the Bluetooth signal.
- Try disconnecting and re-pairing the device.

- **Charging Issues:**

- Use only the provided USB Type-C charging cable.
- Ensure the power adapter or USB port you are using is functional.
- Check for any debris in the charging port.

8. SAFETY INFORMATION

- Keep the device away from water, moisture, and extreme temperatures.
- Do not attempt to disassemble, repair, or modify the device. This will void the warranty.
- Use only the specified charging cable. Using incompatible chargers may damage the device or pose a safety risk.
- Avoid dropping or subjecting the device to strong impacts.
- **Battery Safety:** Do not expose the battery to fire, direct sunlight, or puncture it. Dispose of batteries according to local regulations.

9. WARRANTY AND SUPPORT

For any product-related inquiries, technical support, or warranty claims, please contact Aresrora customer service. Refer to your product packaging or the official Aresrora website for the most up-to-date contact information and warranty details.