

[Manuals.plus](#) /

› [Balay](#) /

› Balay 3TS3106B Front-Load Washing Machine User Manual

Balay 3TS3106B

Balay 3TS3106B Front-Load Washing Machine User Manual

Model: 3TS3106B

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new Balay 3TS3106B front-load washing machine. Please read these instructions carefully before using the appliance and keep them for future reference. Proper use ensures optimal performance and extends the lifespan of your washing machine.



Image 1.1: Front view of the Balay 3TS3106B washing machine, showcasing its white finish and large front-loading door.

2. SAFETY INFORMATION

Always adhere to the following safety guidelines to prevent accidents and damage to the appliance:

- Ensure the appliance is properly earthed.
- Do not allow children to play with or operate the washing machine.
- Never force the door open during operation.
- Unplug the appliance before cleaning or maintenance.
- Do not install the machine in areas prone to freezing temperatures.
- Only use detergents suitable for automatic washing machines.

3. SETUP AND INSTALLATION

3.1 Unpacking and Transport Bolts

Carefully remove all packaging materials. Before first use, it is crucial to remove the transport bolts located at the rear of the machine. Failure to do so will result in severe vibration and damage during operation. Store the bolts for future transport.

3.2 Positioning and Leveling

Place the washing machine on a firm, level surface. Adjust the feet to ensure the appliance is perfectly level and stable. This minimizes noise and vibration during cycles.

Dimensiones en mm

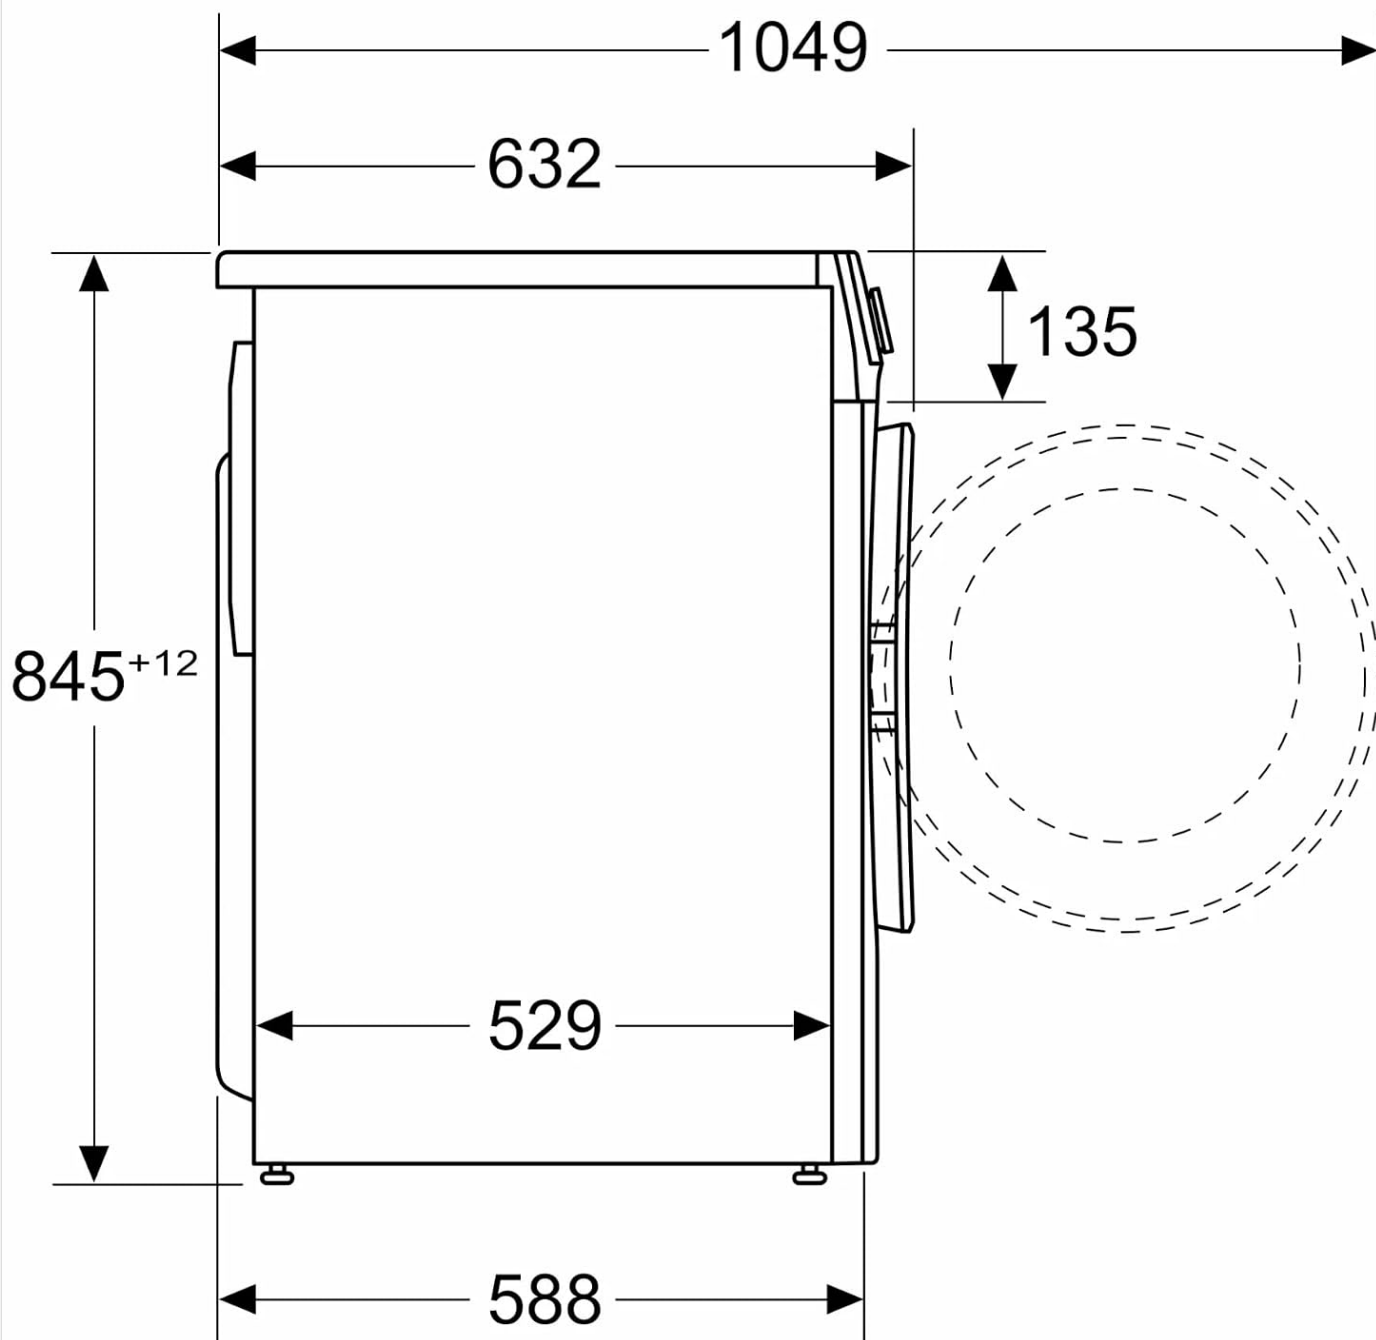


Image 3.1: Side view dimension diagram showing the washing machine's depth (588 mm), height (845 mm), and door opening clearance.

3.3 Water Connection

Connect the supplied filling hose to a cold water tap with a 3/4" thread. Ensure all connections are tight to prevent leaks. The drain hose should be securely placed into a standpipe or over the edge of a sink, ensuring it is not kinked.

Included in the box:

- Power cable
- Filling hose

3.4 Electrical Connection

Plug the power cable into a grounded electrical outlet. Ensure the voltage and frequency match the specifications on the appliance's rating plate.



Image 3.2: Rear view of the washing machine, highlighting the anti-vibration panel design for reduced noise.

4. OPERATING INSTRUCTIONS

4.1 Loading Laundry

Open the washing machine door and load laundry loosely into the drum. Do not overload the machine; refer to the program table for maximum load capacities. The Balay 3TS3106B has a 10 kg capacity.




Image 4.1: Close-up view of the washing machine's stainless steel drum interior, designed for gentle yet effective cleaning.

4.2 Adding Detergent and Softener

Pull out the detergent dispenser drawer. Add the appropriate amount of detergent to the main wash compartment and fabric softener to its designated compartment. Close the drawer gently.

4.3 Selecting a Program

Turn the program selector dial to choose the desired wash program. The LED display will show the recommended load, program status, and remaining time.

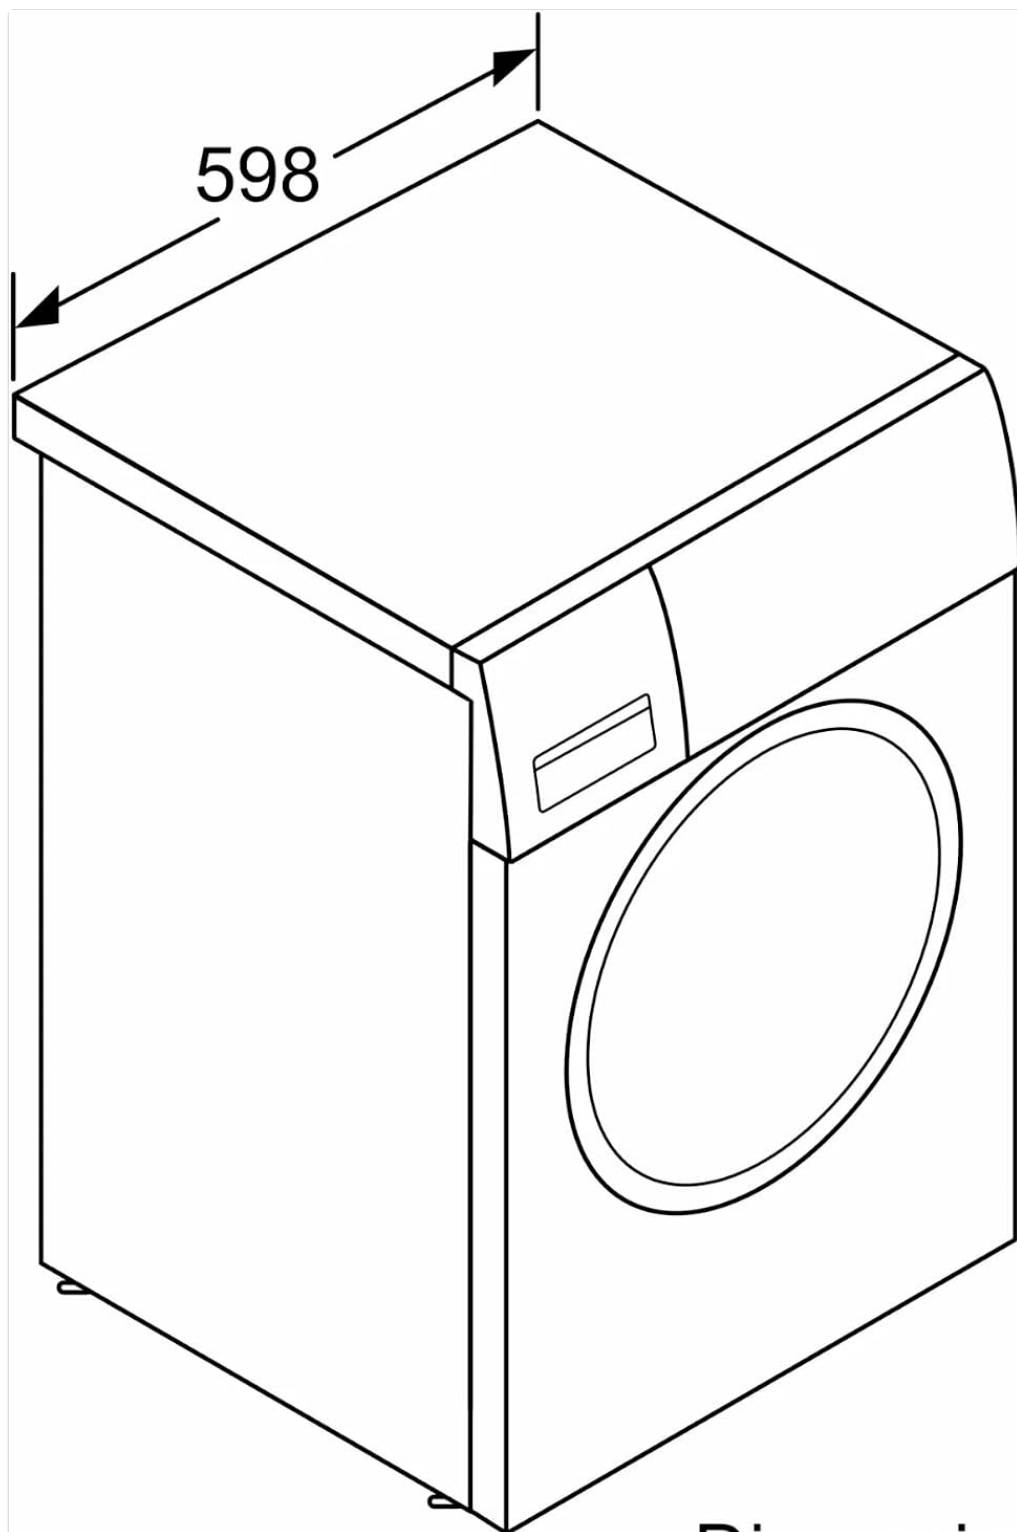

Dimensiones en mm

Image 4.2: Detailed view of the LED touch display and control panel, showing program options and time indicators.

4.4 Starting and Pausing a Cycle

Press the 'Start/Pause' button to begin the wash cycle. If you need to add forgotten items, use the **Pause+Load** function. Press the 'Start/Pause' button, wait for the door to unlock, add items, and then press 'Start/Pause' again to resume.



Image 4.3: The 'Pause+Load' icon, indicating the feature that allows adding laundry mid-cycle.

5. PROGRAMS AND FEATURES

Your Balay 3TS3106B washing machine offers a variety of programs and innovative features:

- **ExtraSilencio Motor:** Designed for quiet operation, even during the spin cycle, thanks to anti-vibration panels.
- **AquaControl Technology:** Automatically adjusts water intake based on the load size, optimizing water and energy consumption.
- **LED Touch Display:** Provides clear information on program status, recommended load, and remaining time.
- **Pause+Load Function:** Allows you to open the door and add forgotten items during a wash cycle without water spillage.
- **Multiple Wash Programs:** Includes programs for various fabric types and soil levels, such as Cotton, Synthetics, Delicates, Wool, and Quick Wash.

6. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and efficiency of your washing machine.

6.1 Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer to prevent residue buildup. Rinse it under running water and reinsert.

6.2 Cleaning the Drum

Run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) every few months to clean the drum and remove any odors or residue.

6.3 Cleaning the Drain Filter

The drain filter should be cleaned regularly to prevent blockages. Locate the filter at the bottom front of the machine, open the cover, drain any residual water, and then unscrew and clean the filter. Reassemble securely.

6.4 Exterior Care

Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents.

7. TROUBLESHOOTING

Before contacting customer service, consult the following table for common issues and their solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed, program not selected.	Check power connection, ensure door is latched, select a program and press start.
Excessive vibration/noise	Transport bolts not removed, machine not level, uneven load.	Remove transport bolts, adjust feet to level, redistribute laundry.
Water not draining	Drain hose kinked or blocked, drain filter clogged.	Check drain hose, clean drain filter.
Water leaks	Hose connections loose, detergent drawer overflowing.	Tighten hose connections, do not overfill detergent drawer.

8. SPECIFICATIONS

Feature	Specification
Model Number	3TS3106B
Brand	Balay
Type	Front-Load Washing Machine
Capacity	10 Kilograms
Energy Efficiency Rating	A
Dimensions (H x W x D)	84.5 cm x 59.8 cm x 58.8 cm
Weight	74.66 Kilograms
Special Functions	High efficiency, Vibration reduction, End of cycle signal, Remaining time display
Controls	Touch
Material	Metal, Plastic

9. WARRANTY AND SUPPORT

For warranty information, technical assistance, or to order spare parts, please refer to the warranty card provided with your appliance or contact Balay customer service. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0C28KKN67>

More documents and user manuals: <https://manuals.plus/>