

Orbegozo MIG 2320

Orbegozo MIG 2320 Microwave with Grill User Manual

Model: MIG 2320

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the appliance and keep them for future reference. Failure to follow these instructions may result in electric shock, fire, or injury.

- Do not operate the microwave oven if the door or door seals are damaged.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only use utensils suitable for microwave ovens.
- Regularly clean the oven and remove any food deposits.
- Do not allow children to use the oven without supervision.
- Ensure proper ventilation around the appliance.
- Do not use corrosive chemicals or vapors in this appliance.
- Always ensure the turntable and turntable ring are correctly positioned before use.

2. PRODUCT OVERVIEW

The Orbegozo MIG 2320 is a 23-liter microwave oven with a 900W microwave power and an integrated grill function. It features a white exterior and a stainless steel interior, designed for countertop installation.



Figure 1: Front view of the Orbegozo MIG 2320 Microwave with Grill, showing its overall dimensions (Width: 46.1 cm, Height: 45 cm, Depth: 38.4 cm). The control panel with two rotary dials is visible on the right side.

2.1 Components

- Microwave Oven Unit
- Glass Turntable
- Turntable Ring (included)
- Grill Rack (for grill function, if applicable and included)

2.2 Control Panel

The control panel consists of two rotary dials:

- **Upper Dial:** Power Level / Function Selector (Microwave, Grill, Combination modes).
- **Lower Dial:** Timer (for setting cooking duration).

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove the microwave oven and all packaging materials. Check the appliance for any damage. Do not operate if damaged.

3.2 Placement

- Place the oven on a stable, level surface capable of supporting its weight (approximately 15 kg).
- Ensure adequate ventilation: leave at least 20 cm of space above the oven, 10 cm at the rear, and 5 cm on each side. Do not block any ventilation openings.
- Keep the oven away from heat sources and strong magnetic fields.

3.3 Turntable Assembly

1. Place the turntable ring in the depression on the oven floor.
2. Position the glass turntable on top of the turntable ring, ensuring it sits securely on the central hub.

3.4 Electrical Connection

Plug the appliance into a properly grounded electrical outlet. Ensure the voltage matches the rating label on the appliance.

4. OPERATING INSTRUCTIONS

This microwave oven offers various cooking functions including microwave, grill, and combination modes.

4.1 Microwave Cooking

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. Turn the **Upper Dial** to select the desired microwave power level (e.g., High, Medium, Low). The available power levels are: High, Medium-High, Medium, Medium-Low, Low.
4. Turn the **Lower Dial** to set the cooking time.
5. The oven will start automatically. It will stop and chime when the set time expires.

4.2 Grill Function

The grill function is ideal for toasting and browning food.

1. Place food on the grill rack (if provided) directly on the glass turntable.
2. Close the oven door.
3. Turn the **Upper Dial** to the "Grill" setting.
4. Turn the **Lower Dial** to set the grilling time.
5. For best results, turn the food halfway through the grilling time.

4.3 Combination Cooking

Combination mode uses both microwave and grill functions for faster cooking and browning.

1. Place food in a suitable container on the turntable.

2. Close the oven door.
3. Turn the **Upper Dial** to select a combination setting (e.g., Combi 1, Combi 2). Refer to the markings on the dial for specific combinations.
4. Turn the **Lower Dial** to set the cooking time.

4.4 Defrost Function

The defrost function is used to thaw frozen foods.

1. Place frozen food directly on the glass turntable.
2. Close the oven door.
3. Turn the **Upper Dial** to the "Defrost" setting.
4. Turn the **Lower Dial** to set the defrosting time. The defrosting time will vary based on the weight and type of food.
5. Turn the food periodically during defrosting for even thawing.

5. MAINTENANCE AND CLEANING

Regular cleaning helps maintain the performance and longevity of your microwave oven.

5.1 Exterior Cleaning

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

5.2 Interior Cleaning

Clean the oven interior after each use. Wipe with a damp cloth and mild detergent. For stubborn food splatters, place a bowl of water with lemon juice inside and heat for a few minutes to loosen residue, then wipe clean.

5.3 Turntable and Ring

The glass turntable and turntable ring can be removed and washed in warm soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown.	Check power plug; Ensure door is fully closed; Check household fuse/circuit breaker.
Food not cooking evenly	Food not stirred or turned; Incorrect power level/time.	Stir or turn food during cooking; Adjust power level and time.
Light not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.

Problem	Possible Cause	Solution
Excessive steam inside oven	High moisture content in food.	This is normal for some foods. Wipe interior after use.

7. SPECIFICATIONS

Model: MIG 2320

Capacity: 23 Liters

Microwave Power: 900 W

Grill Power: Not specified (operates in conjunction with microwave)

Color: White

Material: Stainless Steel (interior), other materials for exterior.

Installation Type: Countertop

Dimensions (D x W x H): 46.1 cm x 45 cm x 38.4 cm (approx.)

Weight: 15 kg

Control Type: Rotary Dials

Special Features: Microwave with Grill, Turntable Ring

Cooking Programs: Auto Cook, Defrost, Grill, High/Medium/Low Power, Reheat

8. WARRANTY AND SUPPORT

This Orbegozo MIG 2320 Microwave with Grill comes with a **24-month warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical assistance, spare parts, or warranty service, please contact Orbegozo customer support or your local retailer. Do not attempt to repair the appliance yourself.

For more information, visit the official Orbegozo website: www.orbegozo.com