

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Sony](#) /
- › [Sony SRS-XB100 Wireless Bluetooth Portable Speaker User Manual](#)

Sony SRSXB100/B

Sony SRS-XB100 Wireless Bluetooth Portable Speaker User Manual

Brand: Sony | **Model:** SRSXB100/B

INTRODUCTION

The Sony SRS-XB100 is a super-compact wireless speaker designed to deliver powerful, clear sound with deep bass wherever you go. Featuring an updated IP67 waterproof and dustproof design, it offers up to 16 hours of battery life. Its small size and versatile strap make it an ideal companion for travel, outdoor activities, or simply enjoying music at home.



Front view of the Sony SRS-XB100 Wireless Bluetooth Portable Speaker.

WHAT'S IN THE BOX

Upon unboxing your Sony SRS-XB100, you will find the following components:

- Speaker
- USB Type-C Cable (A to C)
- Strap belt

SETUP

Charging the Speaker

Before initial use, fully charge your SRS-XB100 speaker using the provided USB Type-C cable. Connect the USB Type-C cable (A to C) to the speaker's charging port and the other end to a compatible USB power adapter (not included) or a computer's USB port. The charge indicator light will provide status updates.

WATERPROOF AND DUSTPROOF

- IP67 rating.*
- New UV coating for extra durability in the elements.



*The unit, with the cap fastened securely, has a waterproof specification of IPX7*1 as specified in "Degree of protection against water immersion" of the IEC60529 "Ingress Protection Rating (IP Code)", and a dust proof specification of IP6X*2 as specified in "Degrees of protection against solid foreign objects". IPX7 equivalency: The speaker has been tested to and maintains its operability when gently submerged in water to a depth of 1m and left for 30 minutes. IP6X equivalency: The speaker has been tested to and continues to block dust after stirring for 8 hours in a testing device which contains dust particles that are up to 75 µm in diameter.

Back view of the Sony SRS-XB100 speaker, highlighting the USB Type-C charging port.

Bluetooth Pairing

To connect your SRS-XB100 to a Bluetooth-enabled device (smartphone, tablet, laptop):

1. Turn on the speaker by pressing the power button.
2. The Bluetooth indicator will start flashing, indicating it's in pairing mode.
3. On your device, enable Bluetooth and search for available devices.
4. Select "SRS-XB100" from the list of devices.
5. Once connected, the Bluetooth indicator will stop flashing and remain lit.

LONG BATTERY LIFE

Listen longer with a battery that lasts up to 16 hours*



*Actual performance varies based on settings, environmental conditions, storage, and usage. Actual performance varies based on settings, environmental conditions, storage, and usage. Batteries are consumable products and their capacity degrades over time as they age. Sony does not guarantee the life span of the battery.

The Sony SRS-XB100 speaker ready for Bluetooth pairing with a mobile device.

Stereo Pair Function

For an enhanced audio experience, you can connect two SRS-XB100 speakers to create a stereo sound system. Refer to the detailed user guide for specific instructions on enabling the stereo pair function.

OPERATING THE SPEAKER

Controls and Indicators

The SRS-XB100 features intuitive controls located on its side for easy operation:

- **Power Button:** Turns the speaker on/off.
- **Bluetooth Button:** Initiates Bluetooth pairing mode.
- **Play/Pause Button:** Controls music playback.
- **Volume Buttons (+/-):** Adjusts the audio volume.
- **Call Button:** Manages hands-free calls.

CLEAR SOUND

Powerful sound with a deep bass



Side view of the Sony SRS-XB100, displaying the control buttons for power, Bluetooth, playback, volume, and calls.

Hands-Free Calling

With its built-in microphone and echo canceling technology, the SRS-XB100 allows for clear hands-free calls. Simply press the call button to answer or end a call when connected to your smartphone via Bluetooth.

Sound Diffusion Processor

The integrated Sound Diffusion Processor helps spread sound widely, creating a richer and more expansive audio experience, ideal for various listening environments.

SOUND DIFFUSION PROCESSOR

Expands sound far and wide



Diagram illustrating the sound diffusion capabilities of the Sony SRS-XB100 speaker.

KEY FEATURES

Durable IP67 Rating

The SRS-XB100 boasts an IP67 rating, making it both waterproof and dustproof. This robust design, coupled with a new UV coating, ensures the speaker can withstand various outdoor conditions, whether you're by the pool, at the beach, in the shower, or camping.



The Sony SRS-XB100 speaker in a water splash setting, demonstrating its IP67 waterproof rating.

Long Battery Life

Enjoy extended listening sessions with up to 16 hours of battery life on a single charge. A convenient indicator light helps you monitor the remaining power.



Image highlighting the 16-hour battery life of the Sony SRS-XB100 speaker.

Compact Design with Versatile Strap

The super-compact design of the XB100 makes it highly portable, easily fitting into a bag or cupholder. The specially engineered strap provides versatility, allowing you to carry or hang the speaker conveniently wherever you go.

COMPACT PORTABLE DESIGN

Versatile strap included



The compact Sony SRS-XB100 speaker with its versatile strap, shown attached to a backpack.

MAINTENANCE

To ensure the longevity and optimal performance of your Sony SRS-XB100 speaker, follow these general maintenance guidelines:

- Keep the USB Type-C port cover securely closed when not charging to maintain its waterproof and dustproof integrity.
- Clean the speaker with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- Do not expose the speaker to extreme temperatures or direct sunlight for prolonged periods.
- Store the speaker in a cool, dry place when not in use.

TROUBLESHOOTING

If you encounter any issues with your Sony SRS-XB100 speaker, consider the following basic troubleshooting steps:

- **No Power:** Ensure the speaker is fully charged. Connect it to a power source and check the charge indicator.
- **No Sound:** Check the volume levels on both the speaker and your connected device. Ensure the speaker is properly paired via Bluetooth.
- **Bluetooth Connection Issues:** Turn off and on the Bluetooth function on both the speaker and your device. Try re-pairing the devices. Ensure no other devices are interfering with the connection.
- **Distorted Sound:** Reduce the volume on both the speaker and your device. Ensure the speaker is not placed too close to other electronic devices that might cause interference.

For more detailed troubleshooting or persistent issues, please refer to the official user manual or contact Sony customer support.

SPECIFICATIONS

Feature	Detail
Model Name	SRSXB100/B
Speaker Type	Portable Wireless Speaker
Special Feature	Compact design with strap, Up to 16 hours of battery, Hands-free calling, IP67 waterproof and dustproof
Recommended Uses	For Computers, Outdoor activities, traveling, pool parties, general music listening
Compatible Devices	Smartphone, Tablet, Laptop
Battery Life	16 Hours
Charging Time	16 Hours (Full charge)
Is Waterproof	True (IP67)
Item Weight	9.7 Ounces
Product Dimensions	3.43"D x 4.41"W x 3.43"H
Connectivity Technology	Bluetooth
Bluetooth Range	10 Meters (33 Feet)
Speaker Maximum Output Power	5 Watts

WARRANTY AND SUPPORT

The Sony SRS-XB100 comes with a limited warranty. For detailed warranty information, product support, or to download the full user manual, please visit the official Sony support website or refer to the documents provided with your product.

You can also access the user manual directly via these links:

- [User Manual \(PDF\)](#)
- [User Guide \(PDF\)](#)