

JORLAI TUST407B-USWI

JORLAI Multifunction Record Player

MODEL: TUST407B-USWI

Instruction Manual

Introduction

Thank you for purchasing the JORLAI Multifunction Record Player. This versatile audio system combines a vintage turntable with modern playback options, including Bluetooth, AM/FM radio, CD, cassette, USB, and SD card playback. It is designed to provide a comprehensive audio experience. Please read this manual thoroughly before use to ensure proper operation and to maximize your enjoyment of the product.

Product Features

- **9-in-1 Playback System:** Enjoy music from 3-speed vinyl records, Bluetooth devices, AM/FM radio, USB/SD/MMC cards, CDs, and cassettes. Includes a 3.5mm headphone jack, remote control, and Aux-in/RCA Line Out.
- **Dual External Stereo Speakers:** Two separate wooden speakers deliver clear and powerful stereo sound. Additional speakers can be connected via the RCA line out.
- **3-Speed Turntable:** Supports 7", 10", and 12" records with adjustable speeds of 33 1/3, 45, and 78 RPM. An AUTO STOP feature helps reduce stylus wear.
- **Wireless Bluetooth Connectivity:** Stream audio wirelessly from your mobile phone, iPad, laptop, or other Bluetooth-enabled devices.
- **Multiple Music Formats:** Play vinyl records, CDs, and cassettes. Connect USB or SD cards for digital music playback. Record vinyl records or cassettes directly to USB or SD card.

Package Contents

Please ensure all items are present upon unpacking:

- JORLAI Multifunction Record Player Unit

- Two External Stereo Speakers
- Remote Control
- Power Adapter
- Instruction Manual

Product Overview

Familiarize yourself with the main components and controls of your record player.



Figure 1: Front view of the JORLAI Multifunction Record Player with external speakers.



Figure 2: Dimensions of the record player unit and speakers.



CD Player

Rediscover your CD collection with our turntable's built-in player, boasting superior sound quality and effortless usability.



Cassette Player

Revive your tape collection with our vintage turntable, delivering authentic analog sound and nostalgic music playback.

Figure 3: Control panel with various function buttons and knobs.

Setup Instructions

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future transport or storage.
2. **Speaker Connection:** Connect the two external stereo speakers to the RCA SPEAKER outputs on the rear of the main unit using the provided speaker cables. Ensure correct polarity (red to red, white to white).
3. **Power Connection:** Plug the power adapter into the DC IN port on the rear of the unit, then plug the adapter into a standard wall outlet.
4. **Dust Cover:** The unit comes with a hinged dust cover to protect the turntable. Ensure it is properly seated.

Operating Instructions

General Operation

- **Power On/Off:** Turn the VOLUME knob clockwise to power on the unit. Turn counter-clockwise to power off.
- **Mode Selection:** Press the MODE button on the control panel or remote control to cycle through available functions: PHONO (Turntable), CD, USB, SD, TAPE, AUX, BT (Bluetooth), AM, FM.

- **Volume Control:** Adjust the VOLUME knob to your desired listening level.

Turntable Operation (PHONO Mode)



Figure 4: Turntable with a record and tonearm.

1. Lift the dust cover.
2. Place a vinyl record on the turntable platter.
3. Select the appropriate speed (33 1/3, 45, or 78 RPM) using the speed selector switch located on the turntable deck. For 45 RPM records, place the included 45 RPM adapter on the center spindle.
4. Release the tonearm lock.
5. Gently lift the tonearm using the cue lever and position it over the desired track on the record.
6. Lower the tonearm slowly onto the record using the cue lever. Playback will begin.
7. At the end of the record, the tonearm will automatically return to its rest position if the AUTO STOP function is enabled. To enable/disable AUTO STOP, use the switch near the tonearm.
8. When finished, gently lift the tonearm, return it to its rest, and secure the tonearm lock.

CD Player Operation



Figure 5: CD player tray for disc insertion.


1. Press the MODE button to select CD mode.
2. Press the OPEN/CLOSE button to open the CD tray.
3. Place a CD with the label side facing up into the tray.
4. Press the OPEN/CLOSE button again to close the tray. The unit will read the disc.


5. Use the PLAY/PAUSE, NEXT, and PREVIOUS buttons for playback control.

Cassette Player Operation



$\frac{12''}{78 \text{ RPM}}$ $\frac{10''}{45 \text{ RPM}}$ $\frac{7''}{33 \text{ RPM}}$



 **3 Speeds Vinyl Player**

Supports playing at 33-1/3 RPM, 45 RPM, and 78 RPM.

Figure 6: Cassette player slot.

1. Press the MODE button to select TAPE mode.
2. Insert a cassette tape into the cassette slot on the side of the unit.
3. Use the playback controls (PLAY, STOP, FAST FORWARD, REWIND) for cassette operation.

USB/SD Playback

1. Insert a USB flash drive into the USB port or an SD/MMC card into the SD/MMC card slot.
2. Press the MODE button to select USB or SD mode. The unit will automatically detect and begin playing compatible audio files.
3. Use the PLAY/PAUSE, NEXT, and PREVIOUS buttons for playback control.

Bluetooth Connection (BT Mode)



Figure 7: Bluetooth connectivity with a mobile device.

1. Press the MODE button to select BT (Bluetooth) mode. The display will show "BT" and the unit will enter pairing mode.
2. Enable Bluetooth on your external device (e.g., smartphone, tablet) and search for available devices.
3. Select "JORLAI" from the list of devices to pair. Once connected, you will hear a confirmation sound.
4. You can now stream audio from your device to the record player.

AM/FM Radio Operation



Figure 8: Enjoying AM/FM radio.

1. Press the MODE button to select AM or FM radio mode.
2. Use the TUNING knob to manually scan for radio stations.
3. For FM reception, extend the FM wire antenna located at the back of the unit. For AM reception, rotate the unit for best signal.

Aux-in and RCA Line Out

- **Aux-in:** Connect an external audio device (e.g., MP3 player) to the 3.5mm AUX IN jack on the front panel using an audio cable. Select AUX mode to play audio from the connected device.
- **RCA Line Out:** Use the RCA LINE OUT jacks on the rear of the unit to connect to an external amplifier or powered speakers for enhanced audio output.

Recording Function (Encoding)

The unit supports recording from vinyl, CD, cassette, or Aux-in directly to a USB drive or SD card.

1. Insert a USB drive or SD card into the respective slot.
2. Select the desired source mode (PHONO, CD, TAPE, or AUX).
3. Begin playback of the source audio.
4. Press the REC button on the control panel. The unit will begin recording the audio to the USB drive or SD card.
5. Press the REC button again to stop recording.

Maintenance

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.

- **Stylus Care:** Handle the stylus gently. Clean it periodically with a soft brush designed for stylus cleaning. Replace the stylus when sound quality deteriorates.
- **Dust Cover:** Keep the dust cover closed when not in use to prevent dust accumulation on the turntable.

Troubleshooting

| Problem | Possible Cause | Solution |
|--------------------------|--|---|
| No power | Power cord not connected; unit not turned on. | Ensure power cord is securely plugged in; turn VOLUME knob clockwise to power on. |
| No sound | Volume too low; incorrect mode selected; speakers not connected. | Increase volume; select correct mode; check speaker connections. |
| Turntable not spinning | Power off; belt dislodged. | Ensure power is on; contact customer support if belt is dislodged. |
| Poor radio reception | Antenna not extended/positioned correctly. | Extend FM antenna; rotate unit for AM reception. |
| Bluetooth not connecting | Device not in pairing mode; unit too far from device. | Ensure unit is in BT mode and device Bluetooth is on; move device closer to unit. |

Specifications

- **Brand:** JORLAI
- **Model Name:** TUST407B-USWI
- **Material:** Engineered Wood, Plastic, Wood
- **Style:** Vintage
- **Color:** Black
- **Compatible Devices:** Headphone, Smartphone, Speaker
- **Motor Type:** AC Motor
- **Signal Format:** Digital
- **Power Source:** Corded Electric
- **Product Dimensions (L x W x H):** 17.32" x 15.74" x 14.96"

Warranty and Support

JORLAI is committed to providing excellent quality products. If you have any questions or encounter issues with your record player, please refer to the following:

- **After-sales Policy:** We are dedicated to solving any problems you may have with our products and services.
- **Contact Information:** For support, please visit the JORLAI store on Amazon or refer to the contact details provided in your product packaging.

Product Videos

JORLAI Multimedia Record Player with Dual External Speakers

This video demonstrates the JORLAI Multimedia Record Player, highlighting its features and the dual external speakers. It

shows the various playback options and overall design.

JORLAI Multimedia 10-in-1 Record Player

An overview video showcasing the 10-in-1 capabilities of the JORLAI Multimedia Record Player, including its turntable, CD, cassette, USB, SD, Bluetooth, and radio functions.