

SEYVUM LB-8192

SEYVUM LB-8192 40V Cordless Leaf Blower Instruction Manual

Model: LB-8192 | Brand: SEYVUM

[Safety Instructions](#) [What's in the Box](#) [Setup & Assembly](#) [Operating Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. SAFETY INSTRUCTIONS

Always read and understand all safety warnings and instructions before operating this product.

- **Battery Charging:** Before initial use, fully charge the battery. Always charge the battery pack timely before it is completely exhausted to extend battery life. Allow hot battery packs to cool down before charging.
- **Hearing Protection:** The tapered nozzle can produce louder noise levels. Wearing ear protection (earbuds or earmuffs) is recommended during operation.
- **Secure Assembly:** Ensure all components are securely attached before operation.
- **Clear Air Intake:** Regularly check and clear the air intake area to prevent blockages from leaves or debris, which can affect performance and motor lifespan.
- **Activated Blower:** Do not leave the blower activated. The blower will start up on battery installation if the trigger is engaged.
- **Proper Handling:** Use the adjustable shoulder strap to distribute weight and maintain balance during operation, reducing user fatigue.

2. WHAT'S IN THE BOX

Your SEYVUM LB-8192 40V Cordless Leaf Blower package includes the following items:

- 1 x Leaf Blower Unit
- 1 x Blow Tube
- 1 x Tapered Nozzle
- 2 x 20V 5.0Ah Lithium-Ion Batteries
- 1 x 2.4A Dual Port Charger
- 1 x Adjustable Shoulder Strap
- 1 x Base Support (for stability)
- 1 x Screwdriver (for base support attachment)
- 1 x User Manual
- 1 x Warranty Card

3. SETUP & ASSEMBLY

3.1 Attaching the Blower Tube and Nozzles

Align the blower tube with the air outlet of the main unit. Push until it clicks into place. For enhanced airflow control, attach the tapered nozzle to the end of the blower tube. The large-diameter nozzle is suitable for cleaning large areas, while the tapered nozzle is ideal for concentrated airflow in tight spaces or for moving heavier objects.

SEYVUM

40V

POWERFUL CORDLESS
LEAF BLOWER



Image: The SEYVUM LB-8192 Leaf Blower fully assembled with its tube and nozzle.

LARGE DIAMETER NOZZLE

Large diameter provides max air volume to 650CFM



INTEGRATED NOZZLE

Effectively enhance wind pressure to 1400Pa,
max wind speed 180MPH



Image: The two interchangeable nozzles provided with the blower: a large-diameter nozzle for broad coverage and a tapered nozzle for concentrated airflow.

3.2 Installing the Base Support

The base support provides additional stability when resting the blower on a flat surface. Align the base support with the designated slots on the bottom of the blower unit and secure it using the provided screws and screwdriver.

3.3 Attaching the Shoulder Strap

Attach the adjustable shoulder strap to the designated hook point on the blower unit. Adjust the strap length to a comfortable position that allows for balanced operation and reduces strain during extended use.

3.4 Inserting Batteries

The SEYVUM LB-8192 requires two 20V 5.0Ah batteries for operation. Slide one battery into each battery slot on either side of the blower until it clicks securely into place. Ensure both batteries are fully charged before use.

2 X 20V 5.0AH BATTERIES

UP TO 500+ MIN RUN TIME IN LOW SPEED



Image: The two 20V 5.0Ah batteries and the dual-port charger included with the SEYVUM LB-8192 Leaf Blower.

3.5 Charging the Batteries

Connect the dual-port charger to a power outlet. Insert the 20V 5.0Ah batteries into the charger slots. The indicator lights on the charger will show the charging status. A full charge typically takes 2.5 hours. The batteries also have a push-button indicator to check their charge level.

4. OPERATING INSTRUCTIONS

4.1 Variable Speed Trigger and Cruise Control

The blower features a variable speed trigger. Press the trigger to start the blower. The more you press, the higher the speed. For continuous operation at a desired speed, use the cruise control dial to lock the trigger in place. This allows you to maintain a consistent airflow without continuously holding the trigger.

VARIABLE SPEED TRIGGER WITH CRUISE CONTROL

FOR MAXIMUM POWER GREAT FOR MOVING HEAVIER OBJECTS

TURBO BUTTON

VARIABLE SPEED



Image: A close-up view of the ergonomic handle, showing the variable speed trigger and the yellow turbo button for instant maximum power.

4.2 Turbo Mode

For maximum power to tackle stubborn debris or wet leaves, press the yellow Turbo button located on top of the handle. This instantly boosts the wind pressure to 1400Pa and wind speed to 180 MPH. Turbo mode is most effective when the variable speed trigger is already engaged.

4.3 General Operation Tips

- Always wear appropriate personal protective equipment, including eye protection and, if necessary, ear protection.
- Direct the airflow towards the debris you wish to clear.
- Work in a sweeping motion to efficiently gather leaves and debris.
- Avoid operating the blower in wet conditions to prevent electrical hazards.

Your browser does not support the video tag.

Video: Official SEYVUM product video demonstrating the features and operation of the 40V Cordless Leaf Blower, including its power and ease of use.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your SEYVUM LB-8192 Leaf Blower.

- **Cleaning:** Keep the air intake and blower tube free from debris. Use a dry cloth to wipe down the exterior of the unit. Do not use harsh chemicals or abrasive cleaners.
- **Battery Care:** Store batteries in a cool, dry place away from direct sunlight and extreme temperatures. If not in use for extended periods, check the battery charge periodically and recharge as needed to maintain battery health.
- **Storage:** When not in use, store the blower in a secure, dry location, out of reach of children. Detach batteries for long-term storage.

6. TROUBLESHOOTING

If you encounter issues with your SEYVUM LB-8192 Leaf Blower, refer to the following common problems and solutions:

- **Blower does not start:**
 - Ensure both 20V batteries are correctly inserted and fully charged. The blower requires both batteries to operate.
 - Check if the variable speed trigger is engaged. If it is, the blower might start immediately upon battery insertion.
- **Reduced airflow/power:**
 - Check the air intake for any blockages (leaves, debris).
 - Ensure the blower tube and nozzle are securely attached.
 - Verify that the batteries are fully charged.
- **Excessive noise:**
 - The tapered nozzle can increase noise levels; consider wearing ear protection.
 - Check for any loose components or debris inside the blower.

7. SPECIFICATIONS

Feature	Specification
Brand	SEYVUM
Model Name	LB-8192

Power Source	Battery Powered (Cordless)
Voltage	40 Volts (2 x 20V batteries)
Motor Type	Brushless Motor
Air Flow Capacity	650 Cubic Feet Per Minute (CFM)
Speed	Up to 180 Miles per Hour (MPH)
Battery Capacity	2 x 5.0Ah 20V Batteries
Charger Type	2.4A Dual Port Charger
Charging Time	2.5 hours (for both batteries)
Run Time (Low Speed)	Up to 500+ minutes
Run Time (High Speed)	30 minutes
Run Time (Turbo Mode)	20 minutes
Item Weight	7.5 Pounds (including 2 batteries)
Special Feature	Variable Speed Trigger, Turbo Mode, Cruise Control, Ergonomic Design

8. WARRANTY & SUPPORT

The SEYVUM LB-8192 40V Cordless Leaf Blower comes with an **18-month warranty**. During this period, SEYVUM offers free replacement, not maintenance, for any non-human damage. Please contact SEYVUM customer service if you have any questions or require support.

For warranty claims or technical assistance, please refer to the contact information provided on your warranty card or visit the official SEYVUM website.