

RG57H2(B)/BG(C), EFU1-M, RG57H4(B)/BG(C), EFU1-B, RG57J2(B)/BGCE(U1),  
RG57H3(B)/BG(C), EFU1

## User Manual

### REPLACEMENT REMOTE CONTROL FOR ESATTO PORTABLE AIR CONDITIONERS

Brand: Generic | Models: RG57H2(B)/BG(C), EFU1-M, RG57H4(B)/BG(C), EFU1-B, RG57J2(B)/BGCE(U1),  
RG57H3(B)/BG(C), EFU1

## INTRODUCTION

---

This document provides instructions for the Generic replacement remote control designed for various Esatto portable air conditioner models, including RG57H2(B)/BG(C), EFU1-M, RG57H4(B)/BG(C), EFU1-B, RG57J2(B)/BGCE(U1), and RG57H3(B)/BG(C) EFU1. This remote functions as a direct replacement for your original unit.

**Important Note:** As a replacement unit, some advanced or specific functions of your original remote may not be fully supported. Please ensure your air conditioner model is listed as compatible before use. No instruction manual or batteries are included with the remote itself.

## SETUP

---

### 1. Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image: Back view of the remote control, illustrating the battery compartment location.

## 2. Initial Use

Once batteries are installed, the remote is ready for use. No pairing or complex setup is typically required. Simply point the remote at your air conditioner and press the desired function button.

## 3. Temperature Unit Conversion (Fahrenheit/Celsius)

The remote's default temperature display is in Fahrenheit. To switch between Fahrenheit (°F) and Celsius (°C):

- Press and hold the **Temperature Up (▲)** and **Temperature Down (▼)** buttons simultaneously for a few seconds.
- The display will switch to the alternate temperature unit. Repeat the process to switch back.



Image: Front view of the remote control, showing the display with a temperature reading.

## OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and their functions:



Image: Angled view of the remote control, highlighting the button layout.

Button	Function
<b>ON/OFF</b>	Powers the air conditioner on or off.
<b>MODE</b>	Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
<b>FAN</b>	Adjusts fan speed (e.g., Low, Medium, High, Auto).
<b>TEMP ▲/▼</b>	Increases or decreases the set temperature.
<b>SLEEP</b>	Activates or deactivates sleep mode, which adjusts temperature for comfortable sleep.
<b>SWING</b>	Controls the vertical swing of the air conditioner's louvers.
<b>TURBO</b>	Activates maximum cooling/heating for rapid temperature change.
<b>SHORT CUT</b>	Recalls preferred settings with a single press.
<b>TIMER ON</b>	Sets a timer for the air conditioner to turn on automatically.
<b>TIMER OFF</b>	Sets a timer for the air conditioner to turn off automatically.
<b>LED</b>	Turns the air conditioner's display LED light on or off.

*Note: Button labels and exact functions may vary slightly depending on the specific air conditioner model. Refer to your air conditioner's original manual for detailed function descriptions.*

## MAINTENANCE

### Battery Replacement

Replace batteries when the remote's display becomes dim or the remote no longer responds to button presses. Always replace both batteries at the same time with new AAA batteries.

## Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

## Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	<ul style="list-style-type: none"><li>• Dead or incorrectly installed batteries.</li><li>• Obstruction between remote and AC unit.</li><li>• Remote is out of range.</li></ul>	<ul style="list-style-type: none"><li>• Replace batteries with new AAA batteries, ensuring correct polarity.</li><li>• Remove any objects blocking the line of sight to the air conditioner's receiver.</li><li>• Move closer to the air conditioner.</li></ul>
Some functions do not work.	<ul style="list-style-type: none"><li>• This is a replacement remote.</li><li>• Incompatibility with specific air conditioner features.</li></ul>	<ul style="list-style-type: none"><li>• As a replacement, not all original functions may be supported. This is expected behavior for some replacement units.</li><li>• Ensure your air conditioner model is explicitly listed as compatible. If not, full functionality cannot be guaranteed.</li></ul>
Display is dim or blank.	Low battery power.	Replace batteries with new AAA batteries.

If issues persist after following these steps, consider contacting the seller for further assistance or verifying compatibility with your specific air conditioner model.

## SPECIFICATIONS

**Model Compatibility:** Esatto RG57H2(B)/BG(C), EFU1-M, RG57H4(B)/BG(C), EFU1-B, RG57J2(B)/BGCE(U1), RG57H3(B)/BG(C) EFU1 Portable Air Conditioners

**Power Source:** 2 x AAA Batteries (not included)

**Connectivity Technology:** Infrared (IR)

**Controller Type:** Button Control

**Max Number of Supported Devices:** 1 (controls one air conditioner unit)

**Special Feature:** Default display in Fahrenheit; can be switched to Celsius by holding Temp + and Temp - buttons simultaneously.

## WARRANTY AND SUPPORT

This product is a replacement remote control. Specific warranty details are typically provided by the seller at the time of purchase. For any issues or inquiries regarding this remote control, please contact the seller directly through the platform where it was purchased.

Please note that support for the air conditioner itself should be directed to the air conditioner's manufacturer.

© 2023 Generic. All rights reserved. This manual is for informational purposes only.