

Lefant M210PB

Lefant Robot Vacuum Cleaner Instruction Manual

MODEL: M210PB

Introduction

Thank you for choosing the Lefant M210PB Robot Vacuum Cleaner. This device is designed to provide efficient and convenient cleaning for your home, especially suitable for pet owners and hard floors. With its powerful suction, slim design, and smart features, the M210PB simplifies your daily cleaning routine.

The Lefant M210Pro is the third generation in a line of robot vacuums, featuring stronger suction, quieter operation, easier Wi-Fi connectivity, improved recharging rates, and more durable batteries compared to previous models.




The Lefant M210PB Robot Vacuum Cleaner, shown with its main unit and four side brushes.

Setup

Before first use, ensure the robot is fully charged and all protective films are removed. Install the side brushes by pressing them into their slots until they click.

Connecting to the Lefant App

1. Download the 'Lefant' App from your mobile device's app store.
2. Open the App and click 'Add equipment'. Ensure your device's Bluetooth is enabled.
3. Turn the robot's blue button switch to 'I'. Press and hold the start button for 6 seconds.
4. The App will automatically detect the M210P robot and navigate to the connection page.
5. Ensure you connect to a 2.4GHz Wi-Fi network. 5GHz networks are not supported.
6. Wait for the robot to pair successfully.

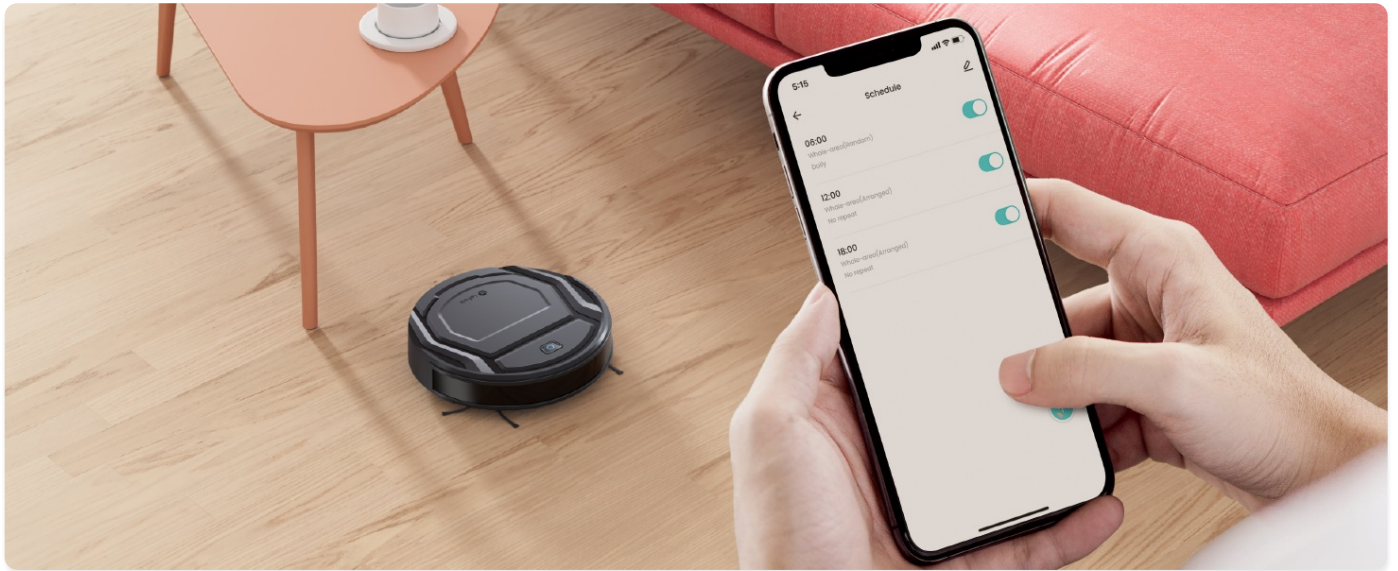

Visual guide for connecting your Lefant Robot to the mobile application.

Connecting to Alexa

1. Open the 'Lefant' App, then navigate to 'Mine' and select 'Voice third-party'.
2. Access the service.
3. Record your voice account and password. Open the 'Alexa' App, then go to 'More' and select 'Skills & Games'.
4. Search for 'Smart Life'.
5. Click 'ENABLE TO USE'.
6. Select your region and enter the voice account password from step 2.
7. Wait for Alexa to connect successfully.



Visual guide for connecting your Lefant Robot to Amazon Alexa for voice control.

Operating Instructions

The Lefant M210PB offers various cleaning modes and control options for a customized cleaning experience.

Cleaning Modes


The robotic vacuum can flexibly switch between different modes via the APP:

- **Zig-zag cleaning:** For systematic cleaning of open areas.
- **Random cleaning:** For general cleaning, covering areas randomly.
- **Spot cleaning:** Concentrates on a specific dirty area.
- **Cleaning along the wall:** Cleans edges and corners effectively.
- **Schedule cleaning:** Set specific times for automatic cleaning.
- **Manual cleaning:** Control the robot's movement manually via the app.

Different Cleaning Modes



Automatic Charging

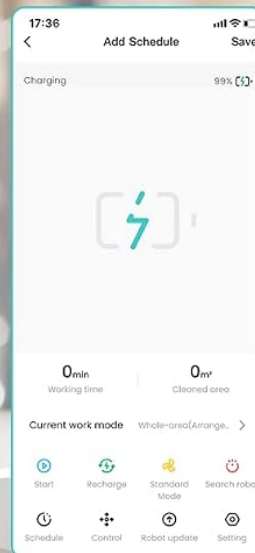

Timer Function



Random Mode

Edge Mode



Zigzag Mode

Spot Mode




The robot vacuum supports various cleaning modes and features automatic charging.

Control Methods

You can control your Lefant M210PB using the physical button on the device, the Lefant App, or voice commands via Alexa and Google Assistant. A remote control can also be purchased separately (search "B0BZYZN12Q").

No Entanglement Any More

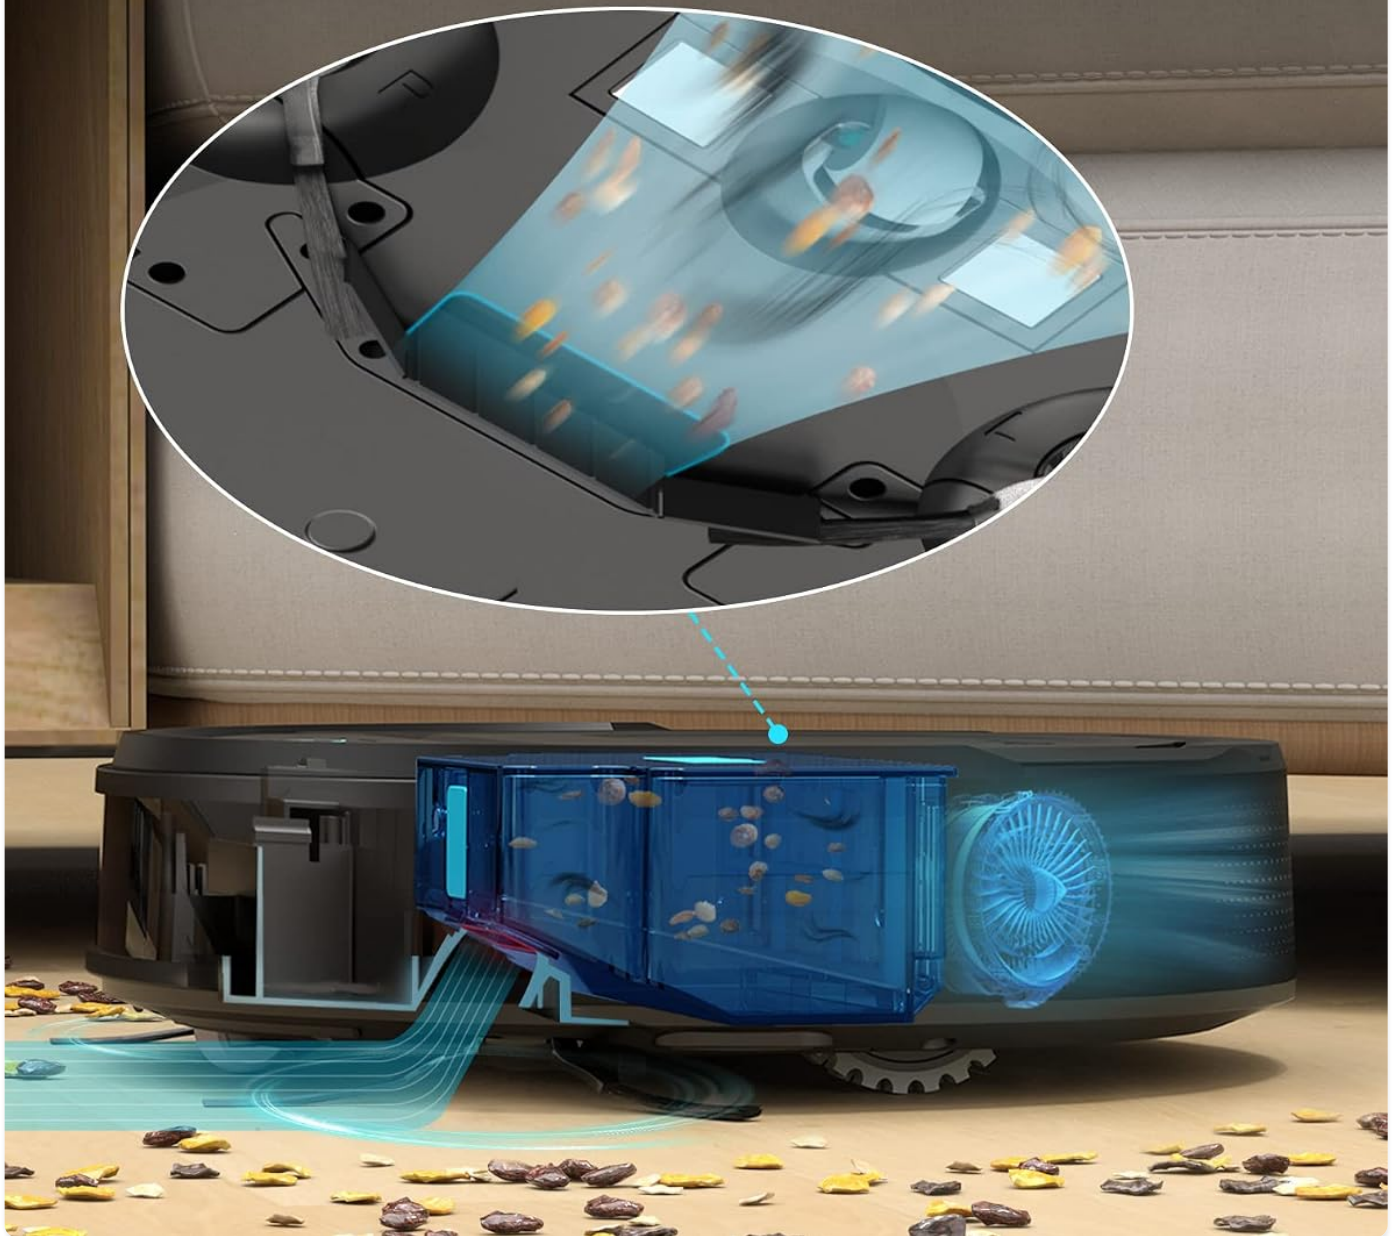

Control your robot vacuum conveniently through the Lefant mobile application.

Cleaning by Voice Command



Alexa, Turn on the M210P.

Hey Google, Turn on the M210P.



COMPATIBLE WITH
amazon alexa



COMPATIBLE WITH
Google Assistant

The robot vacuum supports voice control through Amazon Alexa and Google Assistant.

Key Features in Operation

- **Powerful Suction:** The M210PB offers up to 2200Pa suction power, effectively picking up dust, pet hair, and debris.
- **No Tangle Suction Port:** Its unique suction port design prevents hair entanglement, making it ideal for pet owners and reducing maintenance.
- **Slim Design:** At only 2.99 inches tall, the robot can easily clean under beds, sofas, and other low-clearance furniture.

- **Anti-collision & Anti-fall:** Equipped with 13 pairs of upgraded infrared sensors, the M210PB detects its environment to avoid obstacles and prevent falls from stairs.
- **Auto-recharge:** The robot automatically returns to its charging station when the battery is low or cleaning is complete.

Integrated forming technology vs traditional

Never gets stuck

Smaller

Gets stuck

Bigger & Heavier

The unique suction port design prevents hair from tangling, ensuring efficient cleaning.

Long Battery Life

120m²
120min

The slim profile of the M210PB allows it to clean effectively under low furniture.

Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your Lefant M210PB.

Cleaning the Dustbin and Filter

The 500ml dustbin and filter are designed for easy removal and cleaning. It is recommended to empty the dustbin after each cleaning cycle, especially if you have pets. Tap the white air filter gently to remove accumulated dust.



The robot vacuum features a 500ml dustbin for collecting debris.

Side Brushes

The double edge-sweeping brushes are easy to snap on and off for cleaning or replacement. Ensure they are free from tangled hair or debris for effective edge cleaning.

Troubleshooting

If you encounter issues with your Lefant M210PB, refer to the following common problems and solutions:

- **Robot spins in circles or stops working with a red light:** This may indicate a navigation sensor malfunction or an obstruction. Try cleaning the sensors on the robot's exterior. Ensure there are no loose cables or small objects on the floor that could interfere with its movement. Restart the robot.
- **Robot does not return to charging station:** Ensure the charging station is placed in an open area with sufficient clearance around it (at least 1.5 feet on either side and 5 feet in front). Check if the charging contacts on both the robot and the station are clean. Remove any obstacles blocking its path to the station.
- **Poor suction or missed debris:** Empty the dustbin and clean the filter thoroughly. Check the suction port for any blockages. Ensure the side brushes are clean and spinning correctly.
- **Gets stuck on rugs or obstacles:** The M210PB is designed for hard floors and low-pile carpets. It may struggle or get stuck on shaggier rugs or high thresholds. Clear small obstacles from the cleaning path.
- **Wi-Fi connectivity issues:** Ensure your Wi-Fi network is 2.4GHz. Verify your Wi-Fi password and router settings. Try restarting your router and the robot.

For persistent issues, please contact Lefant customer support.

Specifications

Feature	Detail
Brand	Lefant

Model Name	M210PB
Special Features	Anti-Collision, Anti-Fall, Auto-Docking, Low Noise, Pet Hair Pick Up
Color	Black
Product Dimensions	11"L x 11"W x 2.99"H
Included Components	Battery
Filter Type	Cartridge
Battery Life	Up to 120 minutes (Quiet mode)
Voltage	14.4 Volts
Dustbin Capacity	500 Milliliters
Power Source	Battery Powered
Control Method	App, Voice (Alexa, Google Assistant)
Item Weight	6.87 pounds
UPC	632793986508

Warranty and Support

For warranty information, technical support, or to purchase replacement parts, please visit the official Lefant store or contact their customer service directly. You can find more information at the [Lefant Brand Store on Amazon](#).

© 2024 Lefant. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question