

IKEA STRANDÖN

IKEA STRANDÖN Beach Chair Instruction Manual

Model: STRANDÖN

1. PRODUCT OVERVIEW

The IKEA STRANDÖN beach chair is designed for outdoor relaxation, offering a lightweight, foldable, and portable seating solution. Its practical design includes an integrated pocket for small items, making it ideal for trips to the beach or picnics.

Key Features:

- Foldable for easy transport and storage.
- Lightweight construction.
- Integrated storage pocket.
- Durable design for outdoor use.



Figure 1: The IKEA STRANDÖN beach chair in its fully unfolded state, featuring a blue metal frame and green and white striped fabric seat and backrest.

2. SAFETY INFORMATION

Please read and understand all safety instructions before using the STRANDÖN beach chair. Failure to follow these instructions may result in injury or damage to the product.

- **Maximum Weight Capacity:** Do not exceed the maximum weight recommendation of 150 kg (330 lbs).

- **Stable Placement:** Always place the chair on a flat, stable, and level surface to prevent tipping. Avoid uneven ground, slopes, or soft sand that could compromise stability.
- **Children:** Keep children away from moving parts during folding and unfolding to prevent pinching. Adult supervision is recommended when children are using the chair.
- **Sharp Objects:** Avoid contact with sharp objects that could tear or damage the fabric.
- **Inspection:** Regularly inspect the chair for any signs of wear, damage, or loose components. Do not use the chair if it is damaged.

3. SETUP INSTRUCTIONS

The STRANDÖN beach chair comes pre-assembled and is designed for quick and easy setup. Simply unfold it to prepare for use.

1. **Unpack:** Carefully remove the chair from its packaging.
2. **Unfold Frame:** Hold the chair by its frame and gently pull the front and back legs apart until the chair is fully extended and locked into its open position. Ensure all four legs are firmly on the ground.
3. **Verify Stability:** Before sitting, gently press down on the seat to ensure the chair is stable and fully locked open.



Figure 2: Detail of the chair's construction, highlighting the durable fabric and the blue metal frame connections, which should be securely engaged when unfolded.

4. OPERATING INSTRUCTIONS

Using your STRANDÖN beach chair is straightforward. It is designed for comfortable outdoor seating.

1. **Sitting:** Once the chair is fully unfolded and stable, sit gently on the seat. Avoid sudden movements or standing on the chair.
2. **Using the Storage Pocket:** The chair features a convenient pocket located beneath the seat. This pocket is suitable for storing small, lightweight items such as keys, a phone, or sunscreen. Do not overload the pocket.



Figure 3: Demonstrating the use of the integrated storage pocket, located conveniently under the seat for personal items.

To fold the chair for storage or transport:

3. **Clear Pocket:** Ensure the storage pocket is empty before folding.
4. **Collapse Frame:** Gently push the front and back legs towards each other until the chair collapses into its flat, folded position.
5. **Secure:** If applicable, use any integrated straps or fasteners to keep the chair securely folded.

5. MAINTENANCE AND CARE

Proper care will extend the life of your STRANDÖN beach chair.

- **Cleaning:** Wipe clean with a damp cloth. For stubborn dirt, use a mild soap solution and rinse thoroughly. Allow to air dry completely before folding and storing.
- **Storage:** Store the chair in a dry, cool place when not in use, especially during off-season periods, to protect it from

prolonged exposure to harsh weather conditions.

- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, bleach, or strong detergents, as these can damage the fabric and frame finish.

6. TROUBLESHOOTING

If you encounter any issues with your STRANDÖN beach chair, refer to the following common solutions:

- **Chair feels unstable:**
 - Ensure the chair is fully unfolded and all frame joints are locked into place.
 - Verify that the chair is placed on a flat, firm, and level surface.
 - Check for any bent or damaged frame components. If damaged, discontinue use.
- **Difficulty folding/unfolding:**
 - Check for any obstructions in the folding mechanism, such as sand or debris.
 - Ensure no items are left in the storage pocket that could prevent folding.

7. SPECIFICATIONS

Attribute	Detail
Brand	IKEA
Model Name	STRANDÖN
Color	Green/White stripes with blue frame
Maximum Weight Recommendation	150 kg (330 lbs)
Special Features	Foldable, Lightweight, Portable
Product Care Instructions	Wipe Clean
Recommended Uses	Outdoor Relaxation
Indoor/Outdoor Usage	Outdoor
Approximate Dimensions (Unfolded)	Width: 46 cm (18 1/8"), Height: 74 cm (29 1/8"), Depth: 63 cm (24 3/4"), Seat Height: 31 cm (12 1/4")
Frame Material	Metal
Fabric Material	Polyester

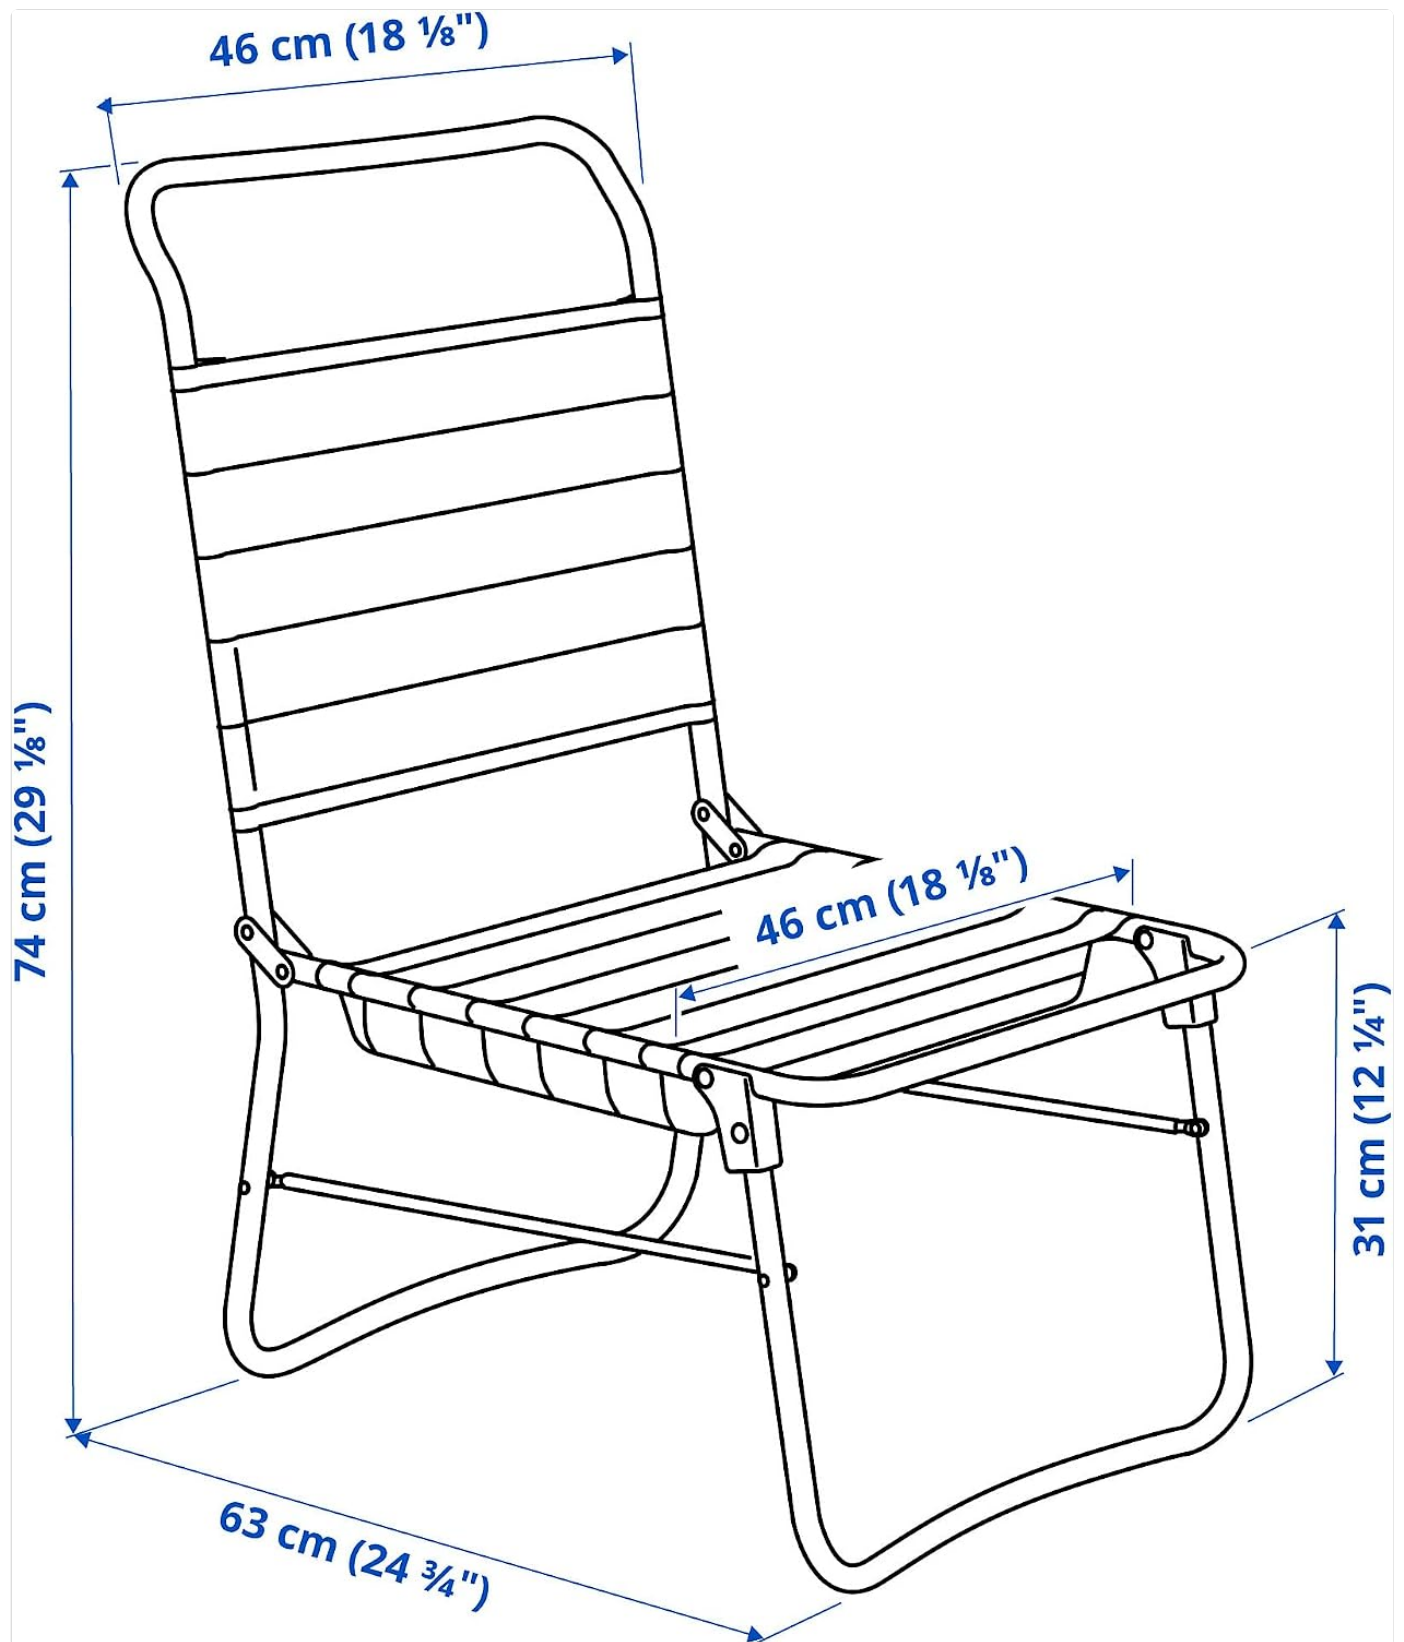


Figure 4: Detailed dimensions of the STRANDÖN beach chair, including width, height, depth, and seat height.

8. WARRANTY INFORMATION

IKEA products are typically covered by a limited warranty. For specific warranty terms and conditions applicable to your STRANDÖN beach chair, please refer to the warranty documentation provided at the time of purchase or visit the official IKEA website.

9. CUSTOMER SUPPORT

If you have any questions, require assistance, or need to report a problem with your IKEA STRANDÖN beach chair, please contact IKEA Customer Service through their official website or the contact information provided in your purchase documentation.

For more information, visit: www.ikea.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question