

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [Ikea](#) /

› IKEA HAVSTEN Armchair User Manual

Ikea IK.305.424.97

IKEA HAVSTEN Armchair

USER MANUAL

Introduction

Welcome to the user manual for your new IKEA HAVSTEN armchair. This manual provides essential information for the safe assembly, use, and maintenance of your armchair. The HAVSTEN armchair is designed for comfort and versatility, suitable for both outdoor and indoor environments.

Its generous seating, comfortable cushions, and elastic mesh fabric contribute to a relaxing experience. Please read this manual thoroughly before assembly and use to ensure proper handling and longevity of your product.



This image displays the IKEA HAVSTEN armchair, featuring its light beige fabric and sturdy metal frame, designed for comfortable seating.

Safety Information

To ensure safe use of your HAVSTEN armchair, please observe the following guidelines:


- **Weight Limit:** Do not exceed the maximum recommended weight of 110 kilograms (approximately 242 pounds). Overloading can cause damage to the armchair and potential injury.
- **Stable Surface:** Always place the armchair on a flat, stable, and level surface to prevent tipping.
- **Outdoor Use:** While designed for outdoor use, protect the armchair from extreme weather conditions such as heavy rain, snow, or strong winds to prolong its lifespan. Consider storing it indoors or covering it during off-season.
- **Children:** Supervise children when they are near or using the armchair to prevent accidents.
- **Modifications:** Do not modify the armchair in any way. Unauthorized modifications can compromise its structural integrity and void any warranty.

Setup

The IKEA HAVSTEN armchair requires assembly. Please follow the detailed assembly instructions provided in the separate manual included with your purchase. Ensure all components are present before beginning assembly.

1. **Unpack:** Carefully unpack all parts and hardware from the packaging.

2. **Identify Components:** Refer to the parts list in the assembly manual to identify each component.
3. **Assembly Steps:** Follow the step-by-step diagrams and instructions precisely. It is recommended to assemble the armchair with two people for ease and safety.
4. **Tighten Fasteners:** Ensure all screws and fasteners are securely tightened. Periodically check and re-tighten fasteners as needed to maintain stability.
5. **Fabric Attachment:** Secure the fabric components to the frame using the provided straps and buckles as indicated in the assembly guide.

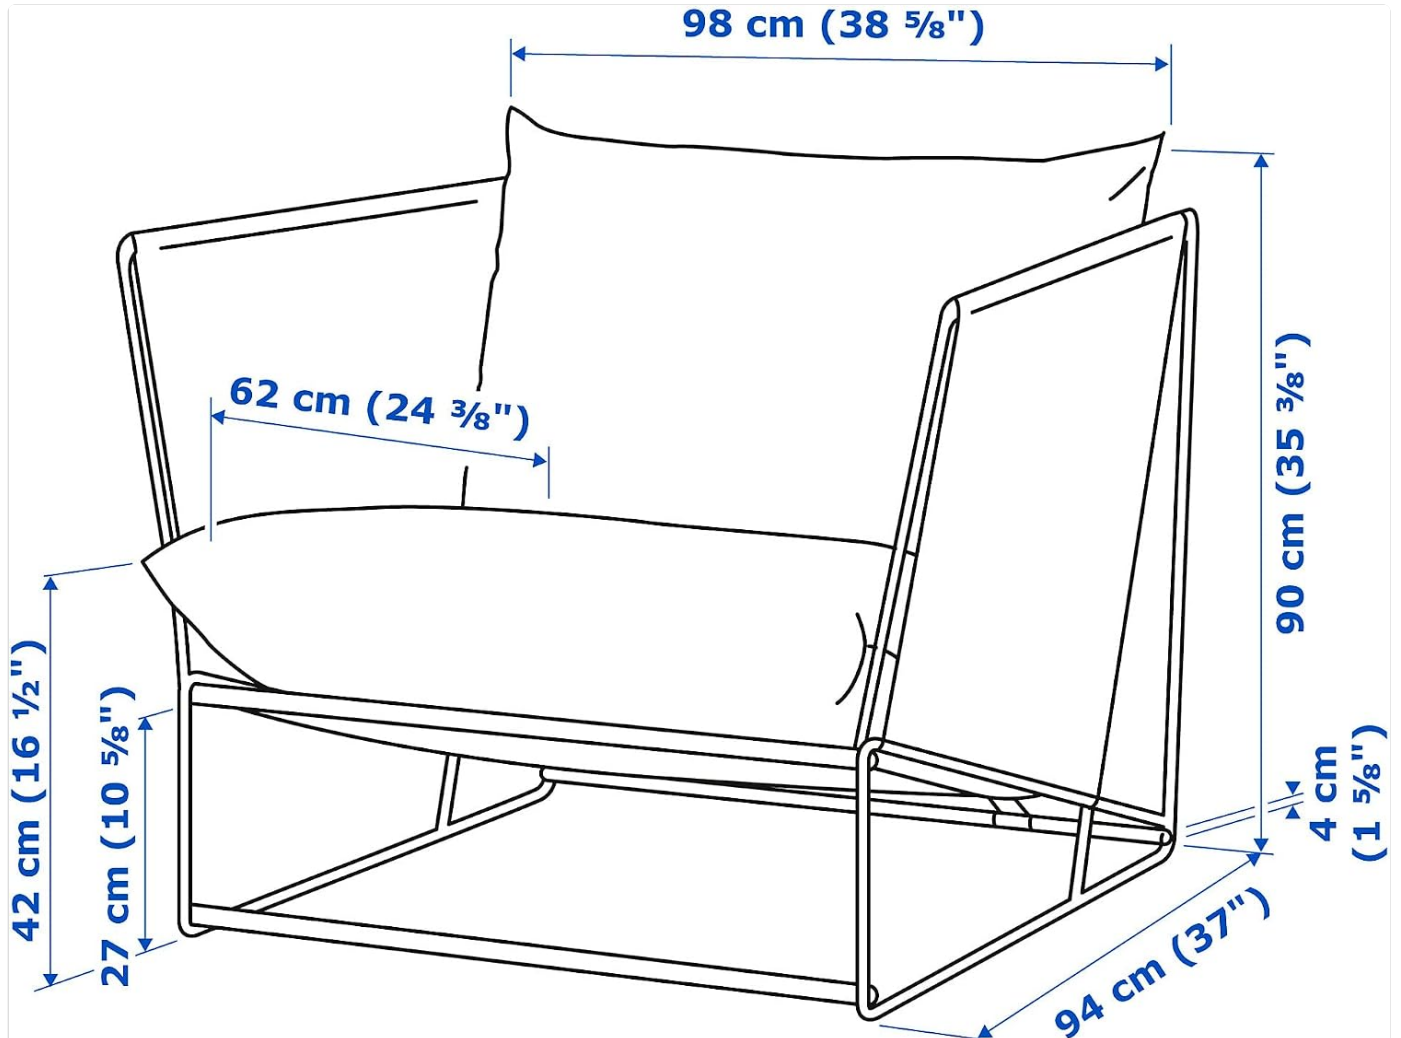

This diagram provides key measurements for the HAVSTEN armchair, including height, width, depth, and seat dimensions, useful for planning placement and assembly.



A detailed view of the strap mechanism used to secure the fabric components to the armchair's frame, ensuring stability and proper fit.

Operating (Usage)

The HAVSTEN armchair is designed for comfortable seating in various settings.

- **Placement:** Position the armchair in your desired outdoor or indoor area. Ensure adequate space around the chair for comfortable movement.
- **Comfort:** The generous seat, fluffy cushions, and elastic mesh fabric are designed to provide optimal comfort. Adjust cushions as needed for personal preference.
- **Versatility:** This armchair is suitable for patios, balconies, gardens, or even as an extra seating option indoors.



The HAVSTEN armchair is shown here in an outdoor balcony setting, demonstrating its suitability for patio and garden spaces. It is paired with other outdoor furniture and plants.



Another view of the HAVSTEN armchair, styled with cushions and a throw, situated on an outdoor patio, highlighting its versatility and comfort.

Maintenance

Proper care and maintenance will extend the life of your HAVSTEN armchair.

- **Cleaning Frame:** Wipe the alloy steel frame with a damp cloth and a mild cleaner. Dry thoroughly. Avoid abrasive cleaners or scouring pads.
- **Cleaning Fabric:** The fabric components can typically be cleaned with a mild soap solution and a soft brush or sponge. Rinse thoroughly with water. Refer to any specific care labels on the fabric for detailed instructions.
- **Cushion Care:** Fluff cushions regularly to maintain their shape and comfort. If cushions are removable, follow their specific washing instructions.
- **Storage:** During off-season or periods of prolonged non-use, store the armchair in a cool, dry place, preferably indoors. If stored outdoors, use a waterproof cover to protect it from elements.
- **Inspection:** Periodically inspect the armchair for any loose screws, damaged parts, or wear and tear. Tighten loose fasteners immediately.

Troubleshooting

Here are some common issues and their solutions:

- **Armchair feels wobbly:** Check all assembly screws and bolts. Tighten any that are loose. Ensure the armchair is on a flat, even surface.
- **Fabric appears stained:** Refer to the cleaning instructions in the Maintenance section. For stubborn stains, a specialized fabric cleaner for outdoor furniture may be required. Test on an inconspicuous area first.
- **Cushions losing shape:** Fluff and rotate cushions regularly. If cushions are removable, ensure they are inserted correctly.
- **Rust spots on frame:** While the alloy steel frame is durable, prolonged exposure to moisture can cause surface rust. Clean with a rust remover suitable for metal, then wipe dry. Consider applying a protective metal sealant if used in very humid environments.

Specifications

Feature	Detail
Brand	Ikea
Model Number	IK.305.424.97
Material	Alloy Steel (Frame)
Item Weight	16.3 kg (35.9 lbs)
Parcel Dimensions	96.52 x 78.74 x 10.16 cm (38 x 31 x 4 inches)
Maximum Weight Recommendation	110 Kilograms (242 lbs)
Pattern	Solid
ASIN	B0C2C4RJ7W
Date First Available	June 19 2023

Warranty and Support

For information regarding the warranty for your IKEA HAVSTEN armchair, please refer to the warranty documentation provided with your original purchase or visit the official IKEA website. Warranty terms and conditions may vary by region. If you require further assistance, have questions about assembly, or need to report a missing or damaged part, please contact IKEA customer service through their official channels. Have your model number (IK.305.424.97) and purchase details ready when contacting support.

You can find contact information for IKEA customer support on their official website:[IKEA Customer Service](#)

© 2024 IKEA. All rights reserved. Model: IK.305.424.97

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question