



Manuals.plus /

- › Ikea /
- › IKEA UPPFYLLD Rotary Grater User Manual

Ikea IK.205.219.66

# IKEA UPPFYLLD Rotary Grater User Manual

Model: IK.205.219.66

## INTRODUCTION

---

The IKEA UPPFYLLD rotary grater is a practical kitchen tool designed for efficient and easy grating of various food items such as cheese, nuts, and chocolate. This set includes two graters, offering versatility for different kitchen tasks. Crafted from durable plastic and stainless steel, it combines functionality with ease of use and cleaning.



Figure 1: The IKEA UPPFYLLD rotary grater set, showcasing its compact design.

## SETUP AND FIRST USE

---

The IKEA UPPFYLLD rotary grater comes largely pre-assembled. Before using it for the first time, it is essential to clean all parts that will come into contact with food.

1. **Unpack:** Carefully remove the grater from its packaging.
2. **Disassemble for Cleaning:** To ensure thorough cleaning, gently pull the handle away from the main body to separate the grating drum. The plunger can also be removed.
3. **Wash:** Wash all components (main body, grating drum, handle, plunger) with warm water and dish soap. Rinse thoroughly. The grater is also dishwasher safe.

4. **Dry:** Allow all parts to air dry completely or dry with a clean cloth.
5. **Reassemble:** Insert the desired grating drum back into the main body, ensuring it clicks securely into place. Reattach the handle and plunger.



Figure 2: Components of the rotary grater, showing how it can be disassembled for cleaning.

## OPERATING INSTRUCTIONS

---

Using the IKEA UPPFYLLD rotary grater is straightforward. Follow these steps for optimal results:

1. **Prepare Food:** Cut the food item (e.g., cheese, nuts, chocolate) into pieces that fit comfortably into the grater's chamber.
2. **Insert Food:** Open the grater's chamber and place the food item inside.
3. **Position Plunger:** Place the plunger on top of the food item.
4. **Grate:** Hold the grater firmly with one hand over a bowl or plate. With the other hand, turn the handle clockwise while applying gentle pressure on the plunger. The food will be grated and dispensed from the bottom of the grater.

5. **Continue Grating:** Continue turning the handle and applying pressure until the desired amount of food is grated.



Figure 3: Demonstrating the rotary grater in action, showing how to hold and operate it.



Figure 4: A close-up view of the grater's mechanism during operation, showing grated food exiting.

## CARE AND MAINTENANCE

---

Proper care ensures the longevity and hygiene of your IKEA UPPFYLLD rotary grater.

- **Cleaning After Each Use:** For best results, clean the grater immediately after use to prevent food residue from drying and hardening.
- **Dishwasher Safe:** The IKEA UPPFYLLD rotary grater is dishwasher safe, making cleaning convenient. Place all disassembled parts on the top rack of your dishwasher.
- **Hand Washing:** If hand washing, disassemble the grater as described in the "Setup and First Use" section. Use warm, soapy water and a brush to clean the grating drum thoroughly, as sharp edges can be present. Rinse well.
- **Drying:** Ensure all parts are completely dry before reassembling and storing to prevent water spots or potential rust on stainless steel components.
- **Storage:** Store the grater in a dry place, away from direct sunlight or extreme temperatures.



Figure 5: Detailed view of the grating drum, highlighting the surfaces that require thorough cleaning.

## **TROUBLESHOOTING**

---

If you encounter any issues while using your rotary grater, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Food not grating effectively.	Food piece is too large or too small; Grating drum is clogged; Incorrect pressure applied.	Cut food into appropriate sizes. Disassemble and clean the grating drum thoroughly. Apply consistent, firm pressure on the plunger while turning the handle.
Handle is difficult to turn.	Food residue stuck in mechanism; Grating drum not properly seated.	Disassemble the grater and clean all parts, paying special attention to the rotating mechanism. Ensure the grating drum is correctly inserted and locked into place.
Grater feels unstable during use.	Improper grip; Surface is slippery.	Ensure you have a firm grip on the grater's body. Use on a stable, non-slip surface or place a damp cloth underneath for added stability.

## PRODUCT SPECIFICATIONS

---

- **Brand:** Ikea
- **Model Number:** IK.205.219.66
- **Colour:** White
- **Product Dimensions:** 17 x 12 x 9 cm (approximately 6.7 x 4.7 x 3.5 inches)
- **Material:** Plastic, Stainless Steel
- **Dishwasher Safe:** Yes
- **ASIN:** B0C2C5Q925
- **Date First Available:** Aug. 15 2024
- **Set Includes:** 2 rotary graters

## WARRANTY AND SUPPORT

---

For detailed information regarding warranty coverage, product returns, or technical support for your IKEA UPPFYLLD rotary grater, please refer to the official IKEA website or contact IKEA customer service directly. Keep your proof of purchase for any warranty claims.

**IKEA Official Website:** [www.ikea.com](http://www.ikea.com)

