

[Manuals.plus](#) /

› [WOWOW](#) /

› WOWOW Pot Filler Faucet Instruction Manual - Model 2311100GB-AMUS

WOWOW 2311100GB-AMUS

WOWOW Pot Filler Faucet Instruction Manual

Model: 2311100GB-AMUS

1. PRODUCT OVERVIEW

The WOWOW Pot Filler Faucet is a wall-mounted kitchen fixture designed for convenient pot filling over a stove. It features a solid brass construction with a black and gold finish, a 360-degree rotatable swing arm, and dual handles for precise water control. This faucet is intended for cold water use only.

FOLDABLE WHEN NOT IN USE SPACE-SAVING!



A better faucet for a better life with family



Image: The WOWOW Pot Filler Faucet in black and gold, installed above a stove in a kitchen setting.

2. INCLUDED COMPONENTS

Verify that all components are present before beginning installation:

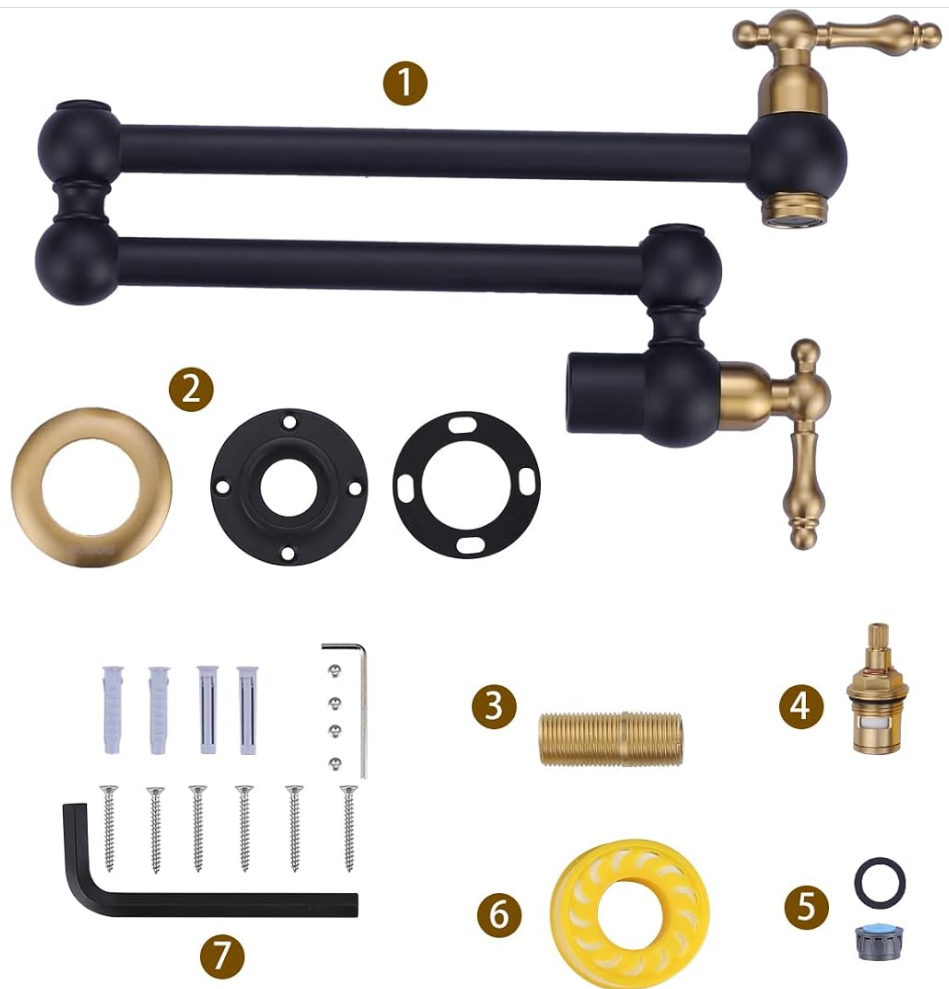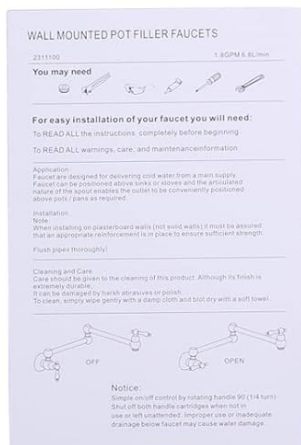

- | | |
|-------------------------------------|--|
| ① <i>Pot filler</i> | ⑥ <i>Teflon tape</i> |
| ② <i>Cover & Gaskets</i> | ⑦ <i>Screws and Hex wrench</i> |
| ③ <i>Brass connector</i> | ⑧ <i>A pair of gloves</i> |
| ④ <i>Spare brass valve</i> | ⑨ <i>Installation instruction</i> |
| ⑤ <i>3 GPM spare aerator</i> | |

Image: A visual representation of all parts included in the package, such as the pot filler unit, cover, gaskets, brass connector, spare brass valve, spare aerator, Teflon tape, screws, hex wrench, and instruction manual.

- Pot Filler Faucet Unit
- Cover & Gaskets
- Brass Connector
- Spare Brass Valve (1 pc)
- 3 GPM Spare Aerator (1 pc)
- Teflon Tape
- Screws and Hex Wrench
- Pair of Gloves
- Instruction Manual

3. SETUP AND INSTALLATION

This pot filler faucet is designed for single-hole wall mount installation. Ensure you have the necessary tools and plumbing knowledge before proceeding. If unsure, consult a professional plumber.

3.1 Pre-Installation Checks

- Confirm that your water supply line is 1/2" NPT for compatibility with the faucet's 1/2" NPS threads.
- Ensure the wall mounting location is structurally sound and can support the faucet's weight and operation.
- Turn off the main water supply before starting installation.

3.2 Installation Steps

1. Prepare the wall: Drill a single hole at the desired height above your stove.
2. Install the mounting flange: Secure the installation flange to the wall using the provided screws and anchors for stability.
3. Connect the brass connector: Apply Teflon tape to the threads of the brass connector and screw it into the wall's water supply line.
4. Attach the pot filler unit: Connect the pot filler faucet to the brass connector, ensuring a tight, leak-free seal.
5. Secure the cover and gaskets: Place the decorative cover and gaskets over the mounting area.
6. Test for leaks: Slowly turn on the main water supply and check all connections for any leaks.

 
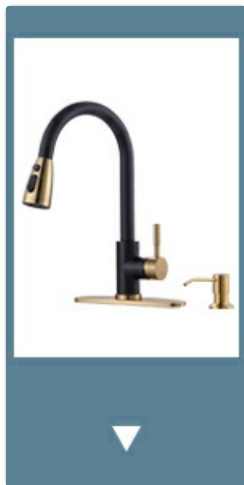 


Image: A German Fischer Nylon Anchor, illustrating its four-sided expansion and anti-slip features for secure mounting.

3.3 Dimensions

Refer to the diagram below for detailed product dimensions to ensure proper fit and placement.

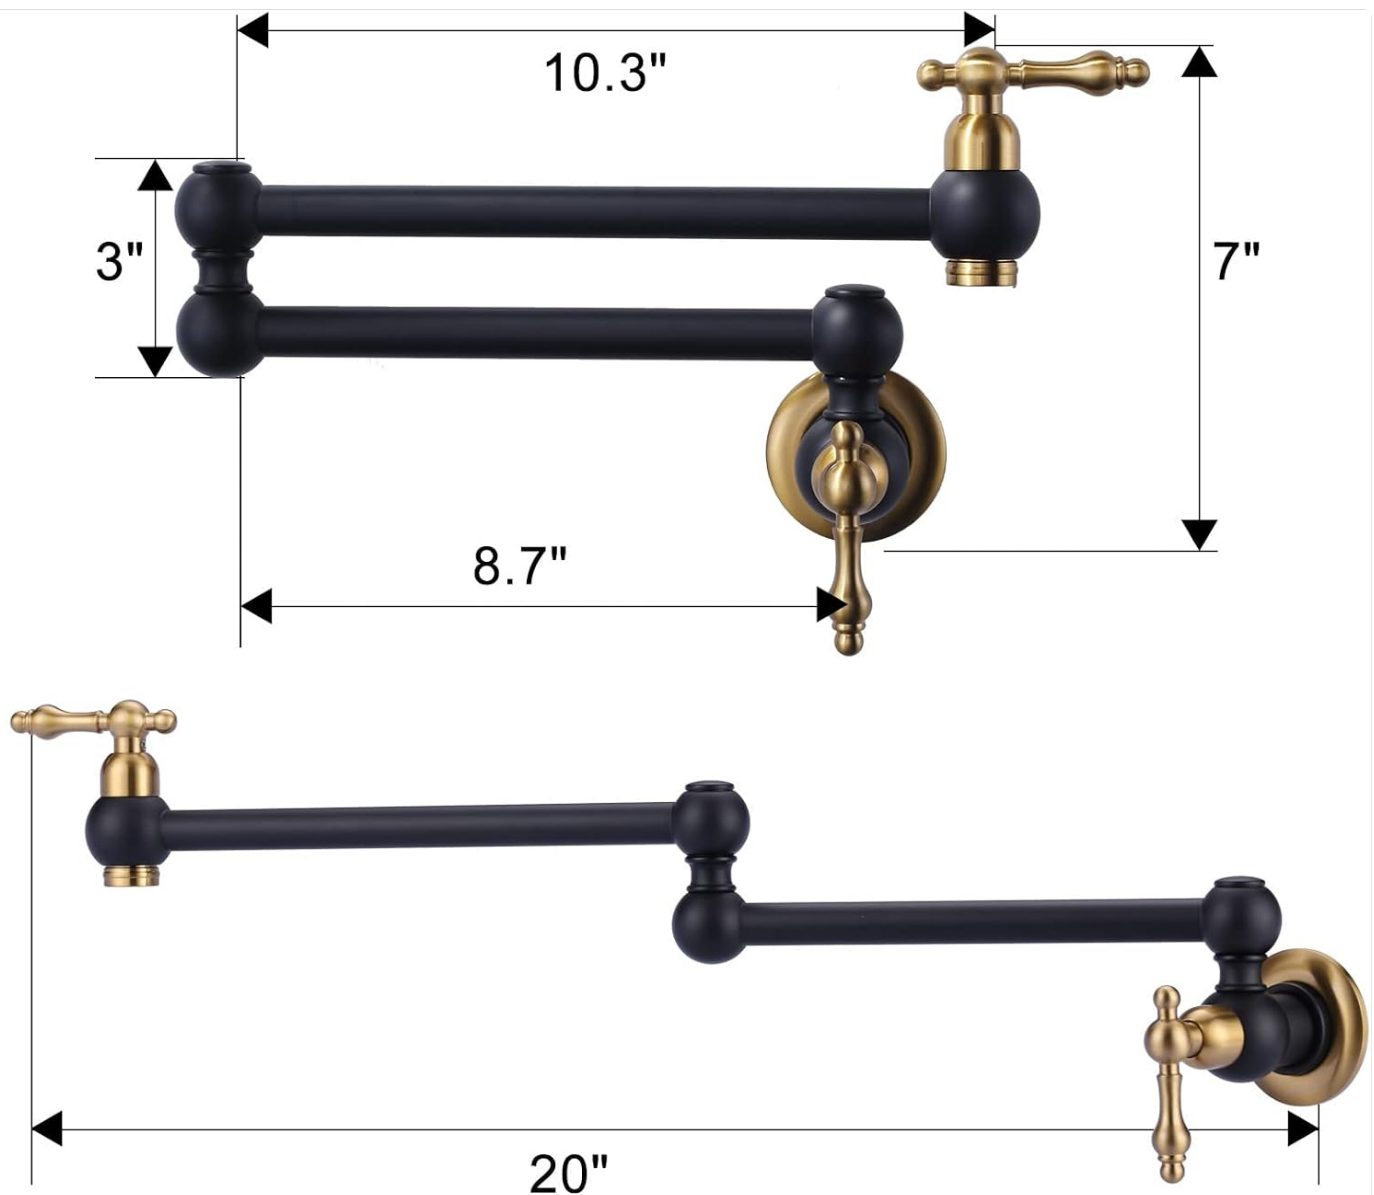

unit: inch

Image: A technical drawing showing the spout reach (23.8 inches), spout height (6.3 inches), and other key measurements of the faucet in inches.

4. OPERATING INSTRUCTIONS

The pot filler faucet is designed for ease of use with its flexible swing arm and dual handle control.

4.1 Water Flow Control

- The faucet features two handles for controlling water flow. Turn both handles to the 'ON' position to activate water flow.
- To stop water flow, turn both handles to the 'OFF' position. For longevity and to prevent drips, ensure both handles are fully closed when not in use.
- This faucet is designed for cold water supply only.

4.2 Swing Arm Functionality

The faucet's double-jointed swing arm allows for 360-degree rotation, providing flexible positioning over your stove. When not in use, the arm can be retracted against the wall to save kitchen space.

DUAL 360°

SWING JOINTS FOR FLEXIBLE POSITIONING

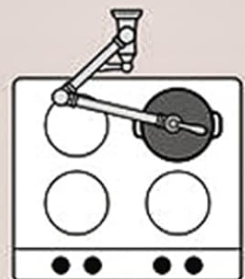
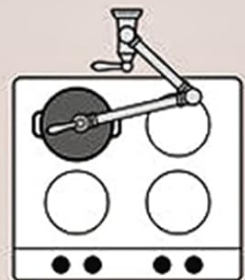
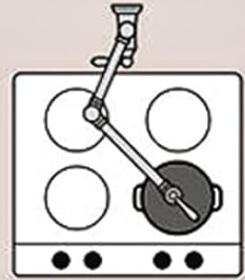
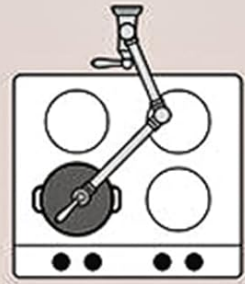


Image: The pot filler faucet with arrows indicating the 360-degree swivel capability of its two joints, allowing for flexible reach over the stove.

4.3 Aerator Function

The faucet is equipped with a removable water-saving aerator providing a steady 1.8 GPM flow. A spare high-flow 3 GPM aerator is included for faster pot filling if desired.

Video: An official WOWOW Faucet video demonstrating the features and operation of the brass pot filler faucet, including its swing arm and water flow.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pot filler faucet.

5.1 Cleaning the Faucet

- Clean the faucet regularly with a soft cloth and mild soap. Avoid abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the black and gold finish.
- The multi-layer finish is designed to resist scratches and fingerprints, but gentle cleaning is recommended.



Image: A detailed view highlighting the multi-layer black and gold finish of the faucet, designed for durability and resistance to wear.

5.2 Aerator Maintenance

If water flow becomes restricted, the aerator may need cleaning. Unscrew the aerator from the spout, rinse any debris, and reattach. The aerator is removable for easy maintenance.



SOLID BRASS MATERIAL

- Ensure water safety, escort for your health.
- Anti-corrosion & rust-proof, durable



M24 NEOPERL AERATOR

- Removable, easy to clean.
- Equipped with 1.8GPM aerator, gentle & water-saving.
- A spare 3 GPM aerator is also provided.

Image: A cutaway view showing the solid brass construction, the drip-free brass valve, and the M24 Neoperl aerator with air infusion for steady flow.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your pot filler faucet.

6.1 Leaks or Drips

- **Issue:** Water dripping from the spout when handles are closed.
Solution: The faucet features dual brass cartridges designed for drip-free operation. If dripping occurs, ensure both handles are fully closed. A spare brass valve is provided for replacement if a cartridge issue is suspected.
- **Issue:** Leaks at connection points.

Solution: Ensure all connections are tightened properly. If a leak persists, disassemble the connection, reapply Teflon tape, and re-tighten.

6.2 Low Water Flow

- **Issue:** Reduced water pressure or flow from the spout.
Solution: The aerator may be clogged with sediment. Remove and clean the aerator as described in the Maintenance section. Ensure the main water supply valve is fully open.

7. SPECIFICATIONS

Feature	Specification
Brand	WOWOW
Model Name	2311100GB-AMUS
Mounting Type	Wall Mount
Finish Type	Black and Gold
Material	Brass
Number of Handles	2
Hole Count	1
Special Feature	360° Swivel
Flow Rate	1.8 Gallons Per Minute (GPM), 3 GPM (with spare aerator)
Spout Height	6.3 Inches
Spout Reach	23.8 Inches
Installation Method	Wall Mount
Recommended Use	Kitchen

8. WARRANTY INFORMATION

The WOWOW Pot Filler Faucet is covered by a **5-year limited warranty**. This warranty covers manufacturing defects and material flaws under normal use and service. Please retain your proof of purchase for warranty claims.

9. SUPPORT

For further assistance, technical support, or warranty inquiries, please contact WOWOW Faucet directly. You can find more information and contact details on the official WOWOW store page:

[Visit the WOWOW Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question