

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Panasonic](#) /

› [Panasonic MK-F310 800W Food Processor User Manual](#)

Panasonic MK-F310

Panasonic MK-F310 800W Food Processor User Manual

Model: MK-F310 | Brand: Panasonic

INTRODUCTION

Thank you for purchasing the Panasonic MK-F310 800W Food Processor. This appliance is designed to simplify your food preparation tasks with its powerful motor and versatile attachments. This manual provides essential information for safe operation, proper assembly, maintenance, and troubleshooting to ensure optimal performance and longevity of your food processor.

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Failure to follow these safety guidelines may result in injury or damage to the appliance.

- Always unplug the appliance from the power outlet before assembling, disassembling, or cleaning.
- Keep hands and utensils away from moving blades during operation to prevent injury.
- Blades are sharp. Handle with extreme care when cleaning or assembling.
- Do not immerse the motor base in water or any other liquid. Clean with a damp cloth only.
- Ensure the lid is securely locked in place before operating the food processor.
- Do not process hot liquids or ingredients that are too hard, as this may damage the blades or bowl.
- Supervise children when the appliance is in use. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities unless supervised.

PRODUCT COMPONENTS

The Panasonic MK-F310 Food Processor comes with the following main components and attachments:

- Motor Base with Control Dial
- 2.4 Liter Processing Bowl
- Lid with Food Pusher
- Main Chopping Blade (S-blade)
- Whisk Blade
- Slicing Blade
- Shredding Blade
- French Fry Blade
- Blade Holder/Spindle







Image: The main unit of the Panasonic MK-F310 Food Processor, showing the motor base, processing bowl, and lid.



Image: A collection of the 5 versatile attachments included with the Panasonic MK-F310 Food Processor, including the main blade, whisk, slicing, shredding, and French fry blades.

SETUP

Before first use, unpack all components and wash the processing bowl, lid, and all attachments in warm, soapy water. Rinse thoroughly and dry. The motor base should only be wiped with a damp cloth.

Assembly Steps:

1. Place the motor base on a stable, flat, and dry surface.
2. Carefully place the processing bowl onto the motor base, aligning the bowl handle with the safety lock mechanism on the base. Twist clockwise until it locks into place.
3. Select the desired blade or attachment. For chopping, place the main chopping blade onto the spindle inside the bowl. For slicing/shredding/French fry, place the blade holder first, then the chosen disc blade on top.
4. Add your ingredients to the bowl. Do not fill above the maximum fill line.
5. Place the lid onto the processing bowl, aligning the lid tab with the safety lock on the bowl handle. Twist clockwise until it locks securely. The appliance will not operate if the bowl and lid are not correctly locked.
6. Insert the food pusher into the feed tube on the lid.

OPERATING INSTRUCTIONS

Ensure the food processor is correctly assembled and locked before plugging it into a power outlet.

Control Dial Settings:

- **0 (Off):** The appliance is off. Always return the dial to '0' before changing attachments or unplugging.
- **P (Pulse):** Provides short bursts of power at maximum speed. Turn the dial to 'P' and hold for desired duration, then release. Ideal for coarse chopping or when precise control is needed.
- **1 (Low Speed):** Continuous operation at a lower speed. Suitable for mixing, light dough, or softer ingredients.

- **2 (High Speed):** Continuous operation at a higher speed. Ideal for chopping harder ingredients, pureeing, or whisking.



Image: A hand adjusting the control dial of the Panasonic MK-F310 Food Processor, which features settings for High, Low, and Pulse functions.

Using Attachments:

- **Main Chopping Blade:** Use for chopping vegetables, nuts, meat, mixing batters, or pureeing soups. Place ingredients directly into the bowl.
- **Slicing/Shredding/French Fry Blades:** After assembling the blade holder and desired disc blade, place ingredients into the feed tube on the lid. Use the food pusher to guide ingredients down. Apply even, gentle pressure.
- **Whisk Blade:** Use for whipping cream, egg whites, or light batters. Ensure the bowl is clean and dry for best results.

Do not operate the appliance continuously for more than 1 minute. Allow it to rest for a few minutes between cycles to prevent overheating.

MAINTENANCE AND CLEANING

Regular cleaning ensures hygiene and extends the life of your food processor. Always unplug the appliance before cleaning.

Cleaning Steps:

1. Turn the control dial to '0' and unplug the appliance.
2. Carefully remove the lid, then the blade/attachment, and finally the processing bowl from the motor base.
3. The processing bowl, lid, and all attachments (blades, food pusher) are dishwasher safe. Alternatively, wash them by hand in warm, soapy water. Use a brush for blades to avoid direct contact with sharp edges.
4. Wipe the motor base with a damp cloth. Do not immerse it in water.
5. Ensure all parts are completely dry before reassembling or storing.

TROUBLESHOOTING

If you encounter issues with your food processor, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Bowl/Lid not locked; Power outage.	Check power connection; Ensure bowl and lid are securely locked; Check household power.
Motor struggles or stops.	Overloaded bowl; Ingredients too hard; Continuous operation for too long.	Reduce ingredient quantity; Cut hard ingredients into smaller pieces; Allow appliance to cool down.
Ingredients not processed evenly.	Incorrect blade; Too many ingredients; Ingredients not cut to uniform size.	Ensure correct blade for task; Process in smaller batches; Pre-cut ingredients to similar sizes.
Leakage from bowl.	Bowl not properly seated; Overfilled bowl; Damaged seal.	Re-seat bowl correctly; Do not exceed max fill line; Inspect seal for damage.

SPECIFICATIONS

Detailed technical specifications for the Panasonic MK-F310 Food Processor:

Model: MK-F310WTN

Power: 800 Watts

Capacity: 2.4 Liters

Speeds: 3 (Pulse, Low, High)

Material: Plastic, Stainless Steel

Color: White

Dimensions (L x W x H): 25.5 x 23.5 x 40.7 cm

Weight: 3.6 kg

Special Features: 18 functions, 5 attachments, Dishwasher safe parts, French fry blade.

Recommended Uses: Chopping, mixing, mashing, slicing, dough making, French fry cutting.

Care Instructions: Dishwasher safe parts.

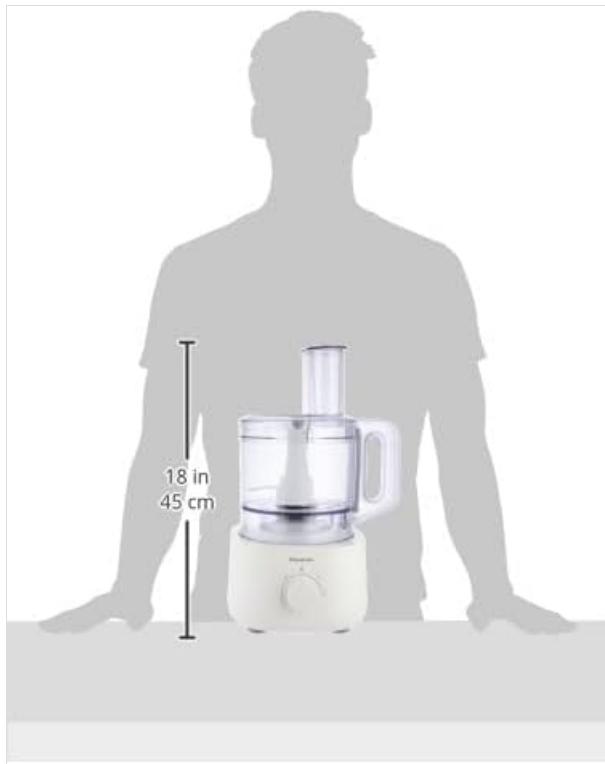


Image: A diagram illustrating the dimensions of the Panasonic MK-F310 Food Processor, indicating its height and width for placement reference.

WARRANTY AND SUPPORT

Your Panasonic MK-F310 Food Processor is covered by a **One-Year Warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use.

For warranty claims, technical support, or service inquiries, please contact Panasonic customer service through their official website or the retailer where the product was purchased. Please have your proof of purchase and model number (MK-F310) ready when contacting support.