

[Manuals.plus](#) /

› [IKEA](#) /

› IKEA PAX/BERGSBO Wardrobe User Manual

IKEA PAX/BERGSBO

IKEA PAX/BERGSBO Wardrobe User Manual

Model: PAX/BERGSBO | Dimensions: 200x60x201 cm

INTRODUCTION

This user manual provides comprehensive instructions for the assembly, operation, maintenance, and troubleshooting of your IKEA PAX/BERGSBO wardrobe. Please read this manual carefully before beginning assembly or use to ensure proper installation and longevity of your product.

The IKEA PAX/BERGSBO wardrobe is designed to offer a simple and customizable storage solution for your clothing and accessories. Its dark grey finish and robust engineered wood construction provide a durable and aesthetically pleasing addition to any bedroom.

SAFETY INFORMATION

Always prioritize safety during assembly and use. Adhere to the following guidelines:

- Always follow assembly instructions precisely, especially regarding the order of steps.
- Secure the wardrobe to the wall using the provided anti-tip hardware. This is a critical step to prevent tipping accidents, particularly in households with children.
- Do not overload shelves or hanging rails. Distribute weight evenly to maintain stability and prevent damage.
- Keep all small parts and hardware out of reach of children during assembly.
- Use appropriate tools as specified in the assembly guide to avoid damaging components or causing injury.

PACKAGE CONTENTS

Before starting assembly, verify that all components listed below are present and undamaged. Refer to the separate assembly instruction booklet included with your purchase for a detailed list of specific hardware and panel components.

- PAX Wardrobe Frames (Engineered Wood)
- BERGSBO Doors (Dark Grey, Painted Finish)
- Shelves (Quantity: 3, as per standard configuration)
- Hinges, Handles (Metal), and various assembly hardware

- Anti-tip fastening hardware for wall attachment

SETUP AND ASSEMBLY

Assembly of the IKEA PAX/BERGSBO wardrobe typically requires two people. Ensure you have ample space and a clean, flat surface for assembly. Tools commonly required include a hammer, Phillips screwdriver, and a drill for wall mounting.

1. **Unpack Components:** Carefully unpack all boxes and lay out components on a protective surface to prevent scratches. Group similar parts together for easier identification.
2. **Assemble Frame:** Follow the step-by-step diagrams in the dedicated IKEA assembly instruction booklet to construct the wardrobe frame. Ensure all cam locks and dowels are securely fastened.
3. **Install Interior Fittings:** Insert shelves, clothes rails, and any other interior organizers (e.g., drawers, baskets) according to your desired configuration. The PAX system is highly customizable.
4. **Attach Doors:** Mount the BERGSBO doors using the provided hinges. Adjust hinges as needed to ensure doors are aligned and close properly without gaps.
5. **Secure to Wall:** This is a critical safety step. Use the included anti-tip hardware to secure the wardrobe to a wall stud. If a wall stud is not available, use appropriate wall anchors for your specific wall type (e.g., drywall anchors). Failure to secure the wardrobe can result in serious injury.



Image: The IKEA PAX/BERGSBO wardrobe with its doors open, revealing the customizable interior. The left section features multiple shelves, while the right section includes a hanging rail and drawers, demonstrating the versatile storage options.

OPERATING INSTRUCTIONS

The IKEA PAX/BERGSBO wardrobe is designed for straightforward daily use.

- **Opening/Closing Doors:** Gently pull or push the BERGSBO doors using the installed handles. Avoid slamming doors to prevent unnecessary wear on hinges and the wardrobe frame.
- **Adjusting Shelves:** Shelves can be repositioned by lifting them off their support pins and placing them into different pre-drilled holes within the wardrobe frame. Ensure shelves are level and securely seated before placing items on them.
- **Weight Distribution:** Distribute the weight of your clothing and items evenly across shelves and hanging rails. Avoid concentrating heavy items in one area to maintain the wardrobe's stability and structural integrity.



Image: An IKEA PAX/BERGSBO wardrobe integrated into a bedroom, showcasing its functionality. The doors are open, revealing neatly organized clothes, shoes, and accessories, highlighting the wardrobe's capacity and interior organization possibilities.

MAINTENANCE AND CARE

Proper care will help maintain the appearance and extend the lifespan of your wardrobe.

- **Cleaning:** Wipe surfaces clean with a damp cloth and a mild, non-abrasive cleaner. Dry immediately with a clean, soft cloth. Avoid harsh chemicals, abrasive cleaners, or excessive moisture, which can damage the painted finish and engineered wood.
- **Dusting:** Regularly dust the interior and exterior surfaces to prevent dust buildup and maintain a clean appearance.
- **Hardware Check:** Periodically check all screws, bolts, and fittings to ensure they remain tight. Retighten if necessary. Pay particular attention to the wall fasteners to ensure the wardrobe remains securely anchored.
- **Door Alignment:** If doors become misaligned over time, adjust the hinges using a screwdriver to restore proper alignment. Refer to the hinge adjustment section in your original assembly guide for detailed instructions.
- **Environmental Conditions:** Protect the wardrobe from extreme temperature fluctuations, excessive humidity, and

direct prolonged sunlight, which can cause warping, fading, or other damage to the materials.



Image: A detailed close-up of the dark grey BERGSBO door panel and the base of the IKEA PAX wardrobe. This image highlights the painted finish and the subtle design details of the door, as well as the integrated base structure.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Doors do not close properly or are misaligned.	Hinges are loose or require adjustment.	Tighten hinge screws. Adjust hinge screws to align doors vertically and horizontally. Refer to the hinge adjustment section in the assembly guide.

Problem	Possible Cause	Solution
Wardrobe feels wobbly or unstable.	Not properly secured to the wall; assembly screws are loose; uneven floor.	Ensure the wardrobe is securely fastened to the wall using the anti-tip hardware. Check and tighten all assembly screws. If the floor is uneven, use shims to level the wardrobe.
Drawers (if installed) stick or do not slide smoothly.	Runners are misaligned or dirty; drawer is overloaded.	Check that drawer runners are correctly installed and aligned. Clean runners of any debris. Reduce the weight in the drawer.

SPECIFICATIONS

- Brand:** IKEA
- Model:** PAX/BERGSBO
- Product Type:** Wardrobe / Cabinet
- Dimensions (Depth x Width x Height):** 23.62"D x 78.74"W x 79.13"H (approx. 60cm x 200cm x 201cm)
- Color:** Dark Grey
- Frame Material:** Engineered Wood
- Door Style:** Slab, Painted Finish
- Included Components:** Shelves (3), Doors, Handles (Metal), Assembly Hardware, Anti-tip Hardware
- Assembly Required:** Yes
- Mounting Type:** Floor Mount, Wall Anchored
- Customizable:** Yes (Interior fittings and layout)
- Number of Levels:** 2 (internal sections)

WARRANTY AND SUPPORT

IKEA products typically come with a limited warranty. Please refer to your purchase receipt or visit the official IKEA website for specific warranty terms and conditions applicable to your region and product. It is recommended to keep your proof of purchase for any warranty claims.

For further assistance, missing parts, or detailed assembly instructions, please contact IKEA Customer Service. You can find contact information on the official IKEA website (www.ikea.com) or by referring to the documentation included with your purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question