



[Manuals.plus](#) /

> [EZISE](#) /

> EZISE Studless TV Wall Mount Instruction Manual for 32-75 inch TVs

EZISE TA3105-62.5CM

EZISE Studless TV Wall Mount Instruction Manual

Model: TA3105-62.5CM

1. INTRODUCTION

This manual provides detailed instructions for the safe and proper installation and use of the EZISE Studless TV Wall Mount. This mount is designed for televisions ranging from 32 to 75 inches, offering a secure, low-profile solution without the need for drilling into studs. Please read all instructions carefully before beginning installation.

2. SAFETY INFORMATION

- Ensure the wall surface is suitable for mounting. This mount is designed for drywall installation.
- Do not exceed the maximum weight capacity of 150 lbs (68 kg).
- Verify that your TV's VESA pattern is compatible with the mount (200x100mm to 600x400mm).
- Always use appropriate safety gear during installation, such as eye protection.
- If you are unsure about any part of the installation process, seek professional assistance.
- Keep small parts away from children to prevent choking hazards.

3. PACKAGE CONTENTS

Please verify that all components are present and undamaged before proceeding with installation. Refer to the image below for a visual guide to the included parts.

Packing List

Wall Plate



TV Bracket



20mm foot pad



20mm foot pad



10mm
cylinder pad



6mm
gasket



10mm Bolt Washers



Bolt Washers
for 4mm bolts



x30
Nails



Level



M8 (8mm)
x35mm bolts



M8 (8mm)
x25mm bolts



M8 (8mm)
x20mm bolts



M8 (8mm)
x16mm bolts



M6 (6mm)
x35mm bolts



M6 (6mm)
x25mm bolts



M6 (6mm)
x20mm bolts



M6 (6mm)
x12mm bolts



M5 (5mm)
x35mm bolts



M5 (5mm)
x12mm bolts



M4 (4mm)
x35mm bolts



M4 (4mm)
x12mm bolts

Image: Detailed view of all components included in the EZISE Studless TV Wall Mount package, such as the wall plate, TV bracket, various bolts, washers, nails, foot pads, and a bubble level.

- Wall Plate (1)
- TV Bracket (1)
- 20mm Foot Pads (various quantities)
- 10mm Cylinder Pads (various quantities)
- 6mm Gaskets (various quantities)
- 10mm Bolt Washers (various quantities)
- Bolt Washers for 4mm bolts (various quantities)
- Nails (x30)
- Bubble Level (1)
- Various M8, M6, M5, M4 bolts of different lengths (e.g., M8x35mm, M6x25mm, etc.)

4. SPECIFICATIONS

Feature	Detail
Compatible TV Size	32-75 inches
VESA Compatibility	200x100mm to 600x400mm
Maximum Weight Capacity	150 lbs (68 kg)
Material	Aluminum Alloy
Profile from Wall	0.8 inches (2 cm)
Mounting Type	Wall Mount (Drywall)
Movement Type	Fixed
Model Number	TA3105-62.5CM
Item Weight	1.4 pounds (0.64 kg)
Package Dimensions	25.25 x 2 x 1.75 inches

Fit All Brand 32-75 inch TV



VESA= H x V

200x100mm	200x200mm	300x200mm
200x300mm	300x300mm	400x200mm
400x300mm	400x400mm	600x400mm

Image: Illustrates VESA compatibility (H x V) ranging from 200x100mm to 600x400mm, and lists various compatible TV brands such as Samsung, LG, Sony, VIZIO, and more.

5. SETUP AND INSTALLATION

The EZISE Studless TV Wall Mount is designed for quick and easy installation on drywall, typically within 10 minutes, without the need for a stud finder or power drill.

5.1 Before You Begin

- Unpack all components and verify against the package contents list.
- Ensure your TV's weight and VESA pattern are within the mount's specifications.
- Gather necessary tools: a hammer and a screwdriver.

It can be done in **10 minutes**



NO Drill



NO Stud

Image: Demonstrates the simplicity of installation, highlighting 'No Drill' and 'No Stud' requirements, and indicating a 10-minute installation time using only a hammer.

150 LBS

Max Weight Capacity



Image: A person hanging from the wall mount, illustrating its robust 150 lbs (65 kg) maximum weight capacity.

5.2 Installation Steps

Follow these steps for a secure and efficient installation:

Easy & Fast Installation


Step 1

Install Wall Bar



Step 2

Attach Brackets to TV Back

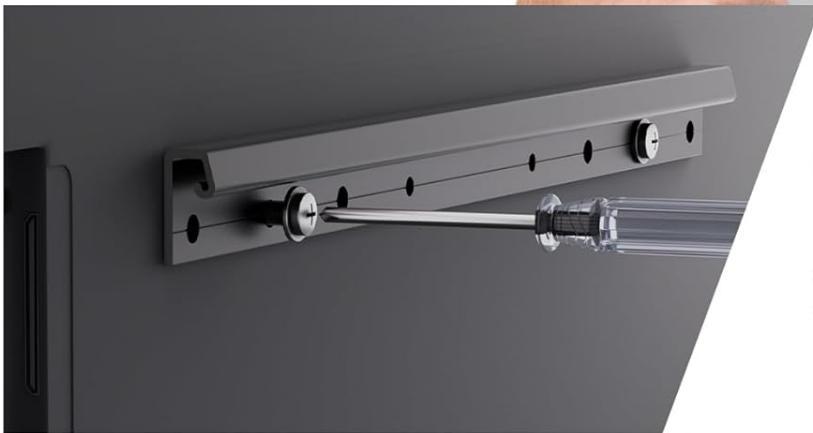

Step 3

Hang TV onto Wall Bar



Image: A visual guide showing the three main steps for installation: Step 1 - Install Wall Bar, Step 2 - Attach Brackets to TV Back, Step 3 - Hang TV onto Wall Bar.

1. Step 1: Install the Wall Bar

Position the wall bar at your desired height on the drywall. Use the included bubble level to ensure it is perfectly horizontal. Using a hammer, gently tap the nails through the designated holes in the wall bar until it is securely fastened to the wall. Ensure all nails are fully inserted.

2. Step 2: Attach Brackets to TV Back

Carefully place your TV face down on a soft, clean surface. Identify the VESA mounting holes on the back of your TV. Select the appropriate screws (M8, M6, M5, or M4) and washers from the package that fit your TV's mounting holes. Attach the TV bracket to the back of your TV using a screwdriver, ensuring it is centered and securely tightened. If needed, use the included spacers to ensure proper clearance and prevent damage to the TV's back panel.

3. Step 3: Hang TV onto Wall Bar

With assistance, carefully lift your TV. Align the TV bracket with the installed wall bar and gently lower the TV,

allowing the bracket to hook onto the wall bar. Ensure the TV is securely seated and level. The low-profile design will keep your TV approximately 0.8 inches from the wall.



Image: Illustrates the final step of mounting the TV onto the wall bar, showing the wall bar, the TV bracket, and the included bubble level for precise alignment.

0.8 Inch

Low Profile Space-Saving

Top-Quality
Aluminum
Alloy



Image: Shows a TV mounted with a low profile, approximately 0.8 inches from the wall, highlighting the space-saving design and the aluminum alloy construction of the mount.

6. OPERATING INSTRUCTIONS

Once installed, the EZISE Studless TV Wall Mount securely holds your television in a fixed, low-profile position. No further operational adjustments are required. Ensure the TV is firmly seated on the wall bar after installation.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe dust from the mount. Avoid abrasive cleaners or solvents.
- **Periodic Checks:** Periodically inspect the mount and TV for any signs of loosening or damage. Ensure all connections remain secure.
- Do not attempt to modify the mount or its components.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
TV is not level after installation.	Wall bar was not installed perfectly horizontal.	Remove the TV, re-check the wall bar's level with the bubble level, and adjust its position if necessary before re-hanging the TV.
TV feels unstable on the mount.	TV bracket not properly seated on the wall bar, or screws on TV bracket are loose.	Carefully re-seat the TV onto the wall bar, ensuring the bracket hooks securely. Check and tighten all screws attaching the bracket to the TV. Verify wall bar is firmly attached to the wall.
Mounting screws do not fit TV.	Incorrect screw size selected for TV's VESA holes.	Refer to your TV's manual for correct VESA screw specifications. Use the appropriate M4, M5, M6, or M8 screws provided in the package.

9. WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your EZISE Studless TV Wall Mount, please contact EZISE customer service. Refer to the product packaging or the EZISE official website for contact information.

While specific warranty details are not provided in this manual, EZISE is committed to customer satisfaction. Please retain your proof of purchase for any warranty claims.