

[Manuals.plus](#) /

> [Aprxuvot](#) /

> Aprxuvot Digital Key Lock Box Instruction Manual

Aprxuvot Digital Key Lock Box

Aprxuvot Digital Key Lock Box Instruction Manual

Model: Digital Key Lock Box

1. INTRODUCTION

Thank you for choosing the Aprxuvot Digital Key Lock Box. This security safe is designed to protect your valuables such as sensitive documents, electronic storage drives, spare credit cards, medicine, or other precious items from unauthorized access. It features a durable steel construction with an electronic keypad and includes spare keys for emergency access. Please read this manual carefully before operating the safe to ensure proper use and maximum security.




Image 1: Aprxuvot Digital Key Lock Box, showing its compact design and electronic keypad.

2. PACKAGE CONTENTS

Please check the package contents to ensure all items are present:

- 1 x Aprxuvot Digital Key Lock Box
- 2 x Emergency Override Keys
- 4 x Mounting Bolts
- 4 x Wall Anchors
- 1 x Instruction Manual
- 1 x Carpeted Floor Mat

Product Size

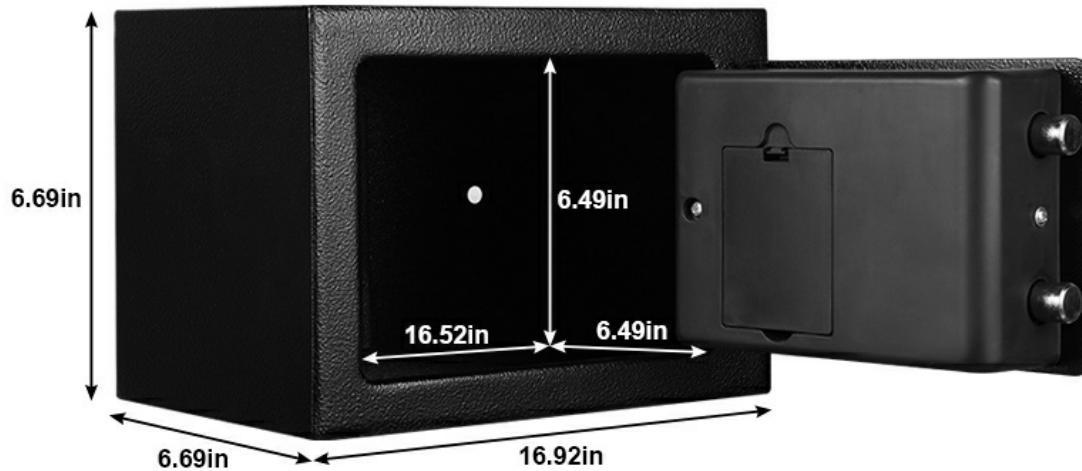

• Package Includes •



Image 2: Visual representation of the safe box and its included accessories, such as keys, mounting hardware, and manual.

3. SETUP AND INSTALLATION

3.1 Battery Installation

The electronic keypad requires 4 AA batteries (not included). To install the batteries:

1. Open the safe using the emergency override key (refer to Section 4.3).
2. Locate the battery compartment on the inside of the door.
3. Insert 4 new AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover.

3.2 Wall Mounting (Optional)

For enhanced security, the safe can be mounted to a wall or floor using the pre-drilled holes and included hardware.

1. Choose a suitable location for mounting.
2. Mark the drilling points on the wall or floor through the pre-drilled holes at the back or bottom of the safe.
3. Drill pilot holes at the marked points.
4. Insert the wall anchors into the drilled holes.
5. Align the safe with the holes and secure it using the mounting bolts.

WALL MOUNTED INSTALLATION

4 Mounting Bolts Included Pre-Drilled Holes For Wall Mounting



Image 3: Step-by-step guide for securely mounting the safe box to a wall using the provided hardware.

4. OPERATING INSTRUCTIONS

4.1 Setting/Changing the Passcode

To set your personal passcode:

1. With the safe door open, press the red reset button located on the inside of the door (usually near the hinge). The yellow light on the keypad will illuminate.
2. Enter your desired 3-8 digit passcode on the keypad.
3. Press the "E" button to confirm. The yellow light will turn off, indicating the new passcode is set.
4. Test the new passcode with the door open to ensure it works correctly before closing the safe.

4.2 Opening the Safe with Passcode

1. Enter your 3-8 digit passcode.
2. Press the "E" button. The green light will illuminate.
3. Within 5 seconds, turn the knob clockwise to open the door.

4.3 Opening the Safe with Emergency Override Key

In case of forgotten passcode or dead batteries, use the emergency override key:

1. Remove the small cover plate located on the keypad panel to reveal the keyhole.
2. Insert the emergency key into the keyhole and turn it counter-clockwise.
3. Simultaneously turn the knob clockwise to open the door.
4. Keep emergency keys in a secure location away from the safe.

5. MAINTENANCE

- **Cleaning:** Wipe the safe's exterior with a soft, damp cloth. Avoid abrasive cleaners.
- **Battery Replacement:** Replace batteries promptly when the low battery indicator lights up or if the keypad becomes unresponsive. Always use 4 new AA batteries.
- **Key Storage:** Store emergency override keys in a secure, separate location, not inside the safe.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with passcode.	Incorrect passcode entered, dead batteries, or knob not turned within 5 seconds.	Re-enter passcode carefully. Replace batteries. Ensure knob is turned promptly after entering code. Use emergency key if necessary.
Keypad is unresponsive.	Dead or low batteries.	Replace all 4 AA batteries.
Forgotten passcode.	Passcode was not recorded or remembered.	Use the emergency override key to open the safe. Reset the passcode (refer to Section 4.1).

7. PRODUCT SPECIFICATIONS

- **Brand:** Aprxuvot
- **Model Name:** Digital Key Lock Box
- **Material:** Alloy Steel
- **Color:** 17 Black
- **Exterior Dimensions:** 6.69"D x 9.05"W x 6.69"H
- **Interior Dimensions:** 6.49"D x 8.90"W x 6.49"H
- **Item Weight:** 6.35 Pounds
- **Lock Type:** Combination, Electronic, Key
- **Special Feature:** Fireproof
- **Mounting Type:** Freestanding, Tabletop, Wall Mountable
- **Recommended Uses:** Home, Hotel, Office

SAFE CABINET SECURITY BOX

FIREPROOF AND WATERPROOF



Image 4: The safe box highlighting its fire prevention and waterproof features.



Image 5: Close-up of the safe box, emphasizing its steel structure and durability.

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official Aprxuvot website. Keep your purchase receipt as proof of purchase.

