



[Manuals.plus](#) /

> [Petra](#) /

> Petra PT5395BGRYVDE Cordless Hand Mixer User Manual

Petra PT5395BGRYVDE

Petra PT5395BGRYVDE Cordless Hand Mixer User Manual

Model: PT5395BGRYVDE

INTRODUCTION

Thank you for choosing the Petra PT5395BGRYVDE Cordless Hand Mixer. This appliance is designed for efficient mixing and beating tasks in your kitchen. Please read this manual thoroughly before first use to ensure safe and optimal operation. Keep these instructions for future reference.

Safety Information

- Always ensure the appliance is switched off before attaching or removing accessories, or before cleaning.
- Do not immerse the main unit in water or any other liquid.
- Keep hands, hair, clothing, and other utensils away from moving parts during operation.
- This appliance is for household use only.
- Do not operate the mixer with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

PRODUCT OVERVIEW

The Petra PT5395BGRYVDE Cordless Hand Mixer is equipped with a 7.2V rechargeable battery, offering cordless convenience. It features three speed settings and comes with two types of stainless steel attachments for various mixing needs.



SINCE 1968

CORDLESS HAND MIXER



3 YEAR GUARANTEE



MAKE 100 COOKIES
ON A SINGLE CHARGE*



UP TO 20 MINUTES
RUN TIME**

3

3 SPEED
SETTINGS

Image: The Petra PT5395BGRYVDE Cordless Hand Mixer displayed with its non-slip charging base, two stainless steel beaters, and one stainless steel whisk. Blueberries are scattered around the base, highlighting its use for baking. The mixer itself is dark grey with gold accents.

Components

- Main Mixer Unit (with integrated rechargeable battery)
- 2 Stainless Steel Beaters
- 1 Stainless Steel Whisk
- Non-slip Charging and Storage Base
- USB-C Charging Cable (power adapter not always included)

SETUP

Initial Charging

1. Before first use, fully charge the hand mixer. Connect the USB-C charging cable to the charging port on the mixer and plug the

- other end into a suitable USB power adapter (not always included) or a powered USB port.
2. The LED indicator on the mixer will illuminate to show charging status. It will change or turn off when fully charged.
 3. A full charge provides up to 20 minutes of operating time, depending on the application.



Image: A close-up top view of the Petra Cordless Hand Mixer, showing the USB-C charging port located at the rear of the unit. The mixer is placed on a kitchen counter next to eggs and a broken eggshell.

Attaching Accessories

1. Ensure the mixer is switched off (speed selector set to '0').
2. Insert the desired beaters or whisk into the openings on the front of the mixer. Push firmly until they click into place.
3. For beaters, ensure they are inserted correctly into their respective slots (one with a collar, one without, if applicable).



Image: The Petra Cordless Hand Mixer positioned on a kitchen counter with the stainless steel beaters attached. The mixer is tilted slightly, showing its ergonomic design. Various baking ingredients are visible in the background.

OPERATING INSTRUCTIONS

Mixing

1. With the desired accessories attached, immerse them into the ingredients to be mixed.
2. Slide the speed selector switch to the desired speed setting (1, 2, or 3). Start with a lower speed and increase as needed to prevent splashing.
3. Move the mixer slowly through the ingredients until the desired consistency is achieved.



Image: The Petra Cordless Hand Mixer in action, mixing a bowl of cream with its stainless steel beaters. The cream is visibly whipped and fluffy. Eggs in a carton are in the background.

Speed Settings

- **Speed 1:** For gentle mixing, folding, and combining dry ingredients.
- **Speed 2:** For general mixing, creaming butter and sugar, or mixing batters.
- **Speed 3:** For whipping cream, beating egg whites, or heavy batters.



Image: A side view of the Petra Cordless Hand Mixer, highlighting the speed selector switch with settings '0', '1', '2', '3' and the 'EJECT' button located above it. The mixer's dark grey body and gold accents are clearly visible.

Ejection Function

To remove the beaters or whisk, ensure the mixer is switched off (speed selector at '0'). Press the 'EJECT' button firmly, and the accessories will release from the mixer.

MAINTENANCE AND CLEANING

Cleaning the Main Unit

- Always unplug the mixer from its charging cable before cleaning.
- Wipe the exterior of the main mixer unit with a damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- Ensure the unit is completely dry before storing or recharging.

Cleaning Accessories

- The stainless steel beaters and whisk are dishwasher safe for easy cleaning.
- Alternatively, wash them in warm, soapy water, rinse thoroughly, and dry immediately.

Storage

After cleaning, store the mixer and its accessories in the provided non-slip charging and storage base. This keeps all components organized and ready for the next use.



Image: The Petra Cordless Hand Mixer neatly stored in its dark grey non-slip charging base. The beaters and whisk are also stored in designated slots within the base, showcasing the compact storage solution. Baking ingredients are visible in the background.

TROUBLESHOOTING

- **Mixer does not turn on:**

Ensure the battery is charged. Connect the mixer to the charging cable and check the LED indicator. If the battery is fully charged and the mixer still doesn't turn on, contact customer support.

- **Attachments do not eject:**

Ensure the mixer is switched off (speed '0'). Press the 'EJECT' button firmly. If they still do not release, gently pull them out while pressing the button.

- **Reduced mixing power:**

The battery might be low. Recharge the mixer fully. For very thick mixtures, ensure you are using the appropriate speed setting.

- **LED indicator not working:**

Check the charging cable connection. If the cable is properly connected and the LED still doesn't light up during charging, there might be an issue with the charging cable, power source, or the mixer itself.

SPECIFICATIONS

Model Number	PT5395BGRYVDE
Brand	Petra
Voltage	7.2V
Power	50W
Number of Speeds	3
Item Weight	1.2 Kilograms
Product Dimensions (L x W x H)	8.22 x 8.22 x 13.7 cm
Body Material	Carbon Steel
Accessory Material	Stainless Steel
Dishwasher Safe Accessories	Yes
Special Features	Battery Operated, Ejection Function, LED Indicator

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Petra website. For technical support or further assistance, please contact Petra customer service.

Additional product information and support may be available at: <http://fqct.com/t/001e70b>