

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Kenwood](#) /

› [KENWOOD 2-in-1 25L Toaster Oven + Air Fryer - MOA25.600BK User Manual](#)

## Kenwood MOA25.600BK

# KENWOOD 2-in-1 25L Toaster Oven + Air Fryer - MOA25.600BK User Manual

Model: MOA25.600BK

## INTRODUCTION

---

This manual provides essential information for the safe and efficient operation of your KENWOOD 2-in-1 25L Toaster Oven + Air Fryer, model MOA25.600BK. Please read all instructions carefully before first use and retain this manual for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk

of electric shock.

- A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

## PRODUCT OVERVIEW

The KENWOOD 2-in-1 25L Toaster Oven + Air Fryer combines the functionalities of a toaster oven and an air fryer, offering versatile cooking options. It features a 25-liter capacity, rotisserie function, and various cooking modes.



**Figure 1:** Front view of the KENWOOD 2-in-1 25L Toaster Oven + Air Fryer, showing a pizza cooking inside. The control panel with function, temperature/time, and power buttons is visible at the top.

### Components and Controls:

- **Digital Display:** Shows temperature, time, and selected function.
- **Function Knob:** Selects cooking modes (Preheat, Airfry, Bake, Toast, Rotis, Defrost, Cake, Bagel, Pizza, Broil, Dehydrate, Proof, Keep Warm).
- **Temp/Time Knob:** Adjusts temperature and cooking time.

- **Power/Start/Pause Button:** Initiates or pauses cooking.
- **Shake Reminder Button:** For air frying, reminds to shake contents.
- **Internal Light Button:** Turns the interior light on/off.
- **Glass Door:** Transparent door for viewing food.
- **Removable Crumb Tray:** Collects crumbs for easy cleaning.

#### Included Accessories:

- Drip Pan
- Wire Rack
- Air Fryer Basket
- Rotating Air Fryer Basket
- Rotisserie Spit
- Removable Crumb Tray



**Figure 2:** Overview of the KENWOOD 2-in-1 25L Toaster Oven + Air Fryer, highlighting its features and listing the included accessories such as drip pan, wire rack, air fryer basket, rotating air fryer basket, rotisserie, and removable crumb tray.

## SETUP

1. **Unpacking:** Carefully remove all packaging materials and accessories. Ensure all parts are present and

undamaged.

2. **Placement:** Place the appliance on a stable, heat-resistant, and level surface. Ensure there is adequate clearance (at least 10-15 cm) on all sides and above for proper ventilation. Do not place near flammable materials.
3. **Initial Cleaning:** Before first use, wipe the interior and exterior with a damp cloth. Wash all removable accessories (drip pan, wire rack, baskets, rotisserie spit) in warm, soapy water. Rinse and dry thoroughly.
4. **First Use Burn-Off:** It is recommended to run the oven empty for approximately 15 minutes at 200°C (400°F) to burn off any manufacturing residues. A slight odor or smoke may be present during this process; ensure good ventilation.
5. **Power Connection:** Plug the power cord into a grounded electrical outlet.

## OPERATING INSTRUCTIONS

---

This appliance offers multiple cooking functions. Refer to the specific instructions below for each mode.

### General Operation:

1. Place food on the appropriate accessory (wire rack, air fryer basket, rotisserie spit) and insert into the oven.
2. Close the oven door.
3. Turn the **Function Knob** to select the desired cooking mode (e.g., Airfry, Bake, Toast).
4. Turn the **Temp/Time Knob** to adjust the temperature and cooking time. The display will show the selected settings.
5. Press the **Power/Start/Pause Button** to begin cooking.
6. To pause cooking, press the **Power/Start/Pause Button** again. Press it once more to resume.
7. When cooking is complete, the oven will beep, and the heating elements will turn off.
8. Carefully remove cooked food using oven mitts.

### Air Frying Function:

The air frying function uses rapid hot air circulation to cook food with little to no oil, resulting in a crispy texture.



**Figure 3:** The rotating air fryer basket inside the oven, filled with french fries during the cooking process.

1. Place food in the Air Fryer Basket or Rotating Air Fryer Basket. Do not overcrowd the basket to ensure even cooking.
2. Select the "Airfry" function.
3. Set the desired temperature and time.
4. Press Start. For best results, press the **Shake Reminder Button** if your recipe requires shaking or tossing the food halfway through cooking.



**Figure 4:** The air fryer basket positioned inside the oven, containing various fried items such as chicken pieces and shrimp.

**Rotisserie Function:**

Ideal for roasting whole chickens or larger cuts of meat, ensuring even cooking and browning.



**Figure 5:** A whole chicken rotating on the rotisserie spit inside the oven, with roasted potatoes in a pan below.

1. Secure the food onto the Rotisserie Spit according to the instructions provided with the accessory.
2. Insert the Rotisserie Spit into the designated slots inside the oven.
3. Select the "Rotis" function.
4. Set the desired temperature and time.
5. Press Start. The rotisserie will begin to rotate.

#### **Other Functions:**

- **Bake:** For general baking of cakes, cookies, and casseroles.
- **Toast:** For toasting bread, bagels, and waffles.
- **Broil:** For grilling and browning the top of food.
- **Defrost:** For thawing frozen foods.
- **Dehydrate:** For drying fruits, vegetables, and meats.
- **Keep Warm:** Maintains food at a warm temperature after cooking.

## **MAINTENANCE AND CLEANING**

Regular cleaning and maintenance will ensure the longevity and optimal performance of your appliance.

1. **Always unplug** the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Exterior:** Wipe the exterior surfaces with a damp cloth and mild detergent. Do not use abrasive cleaners or scouring pads.
3. **Interior:** Wipe the interior walls with a damp cloth. For stubborn stains, use a non-abrasive cleaner. Avoid spraying cleaners directly into the oven.
4. **Crumb Tray:** The removable crumb tray should be emptied and cleaned after each use. Slide it out from the front, discard crumbs, and wash with warm, soapy water. Rinse and dry thoroughly before reinserting.



**Figure 6:** The removable crumb tray being pulled out from the bottom of the oven for cleaning.

5. **Accessories:** All removable accessories (wire rack, drip pan, air fryer baskets, rotisserie spit) can be washed in warm, soapy water. Rinse and dry thoroughly. They are generally not dishwasher safe unless specified.
6. **Do not immerse** the main unit, power cord, or plug in water or any other liquid.

## TROUBLESHOOTING

If you encounter any issues with your appliance, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet not working; fuse blown.	Ensure the plug is securely in a working outlet. Check your household fuse/circuit breaker.

Problem	Possible Cause	Solution
Food is not cooking evenly.	Overcrowding the basket/rack; incorrect temperature/time settings.	Do not overcrowd. Ensure food is spread in a single layer. Adjust temperature and time as needed. For air frying, shake or flip food halfway.
Smoke or unusual odor during operation.	Food residue on heating elements; initial burn-off; excessive oil/grease.	This is normal during first use. For subsequent uses, clean the interior and crumb tray thoroughly. Reduce oil if using. If smoke persists, unplug and contact support.
Rotisserie not rotating.	Rotisserie spit not properly installed; food too heavy or unbalanced.	Ensure the spit is correctly seated in the drive and support slots. Balance the food on the spit. Do not exceed maximum weight capacity.

If the problem persists after trying these solutions, please contact customer support.

## SPECIFICATIONS

Feature	Detail
Brand	Kenwood
Model Number	MOA25.600BK
Capacity	25 Liters
Power / Wattage	1700 watts
Voltage	240 Volts
Material	Aluminum, Plastic
Color	Black
Product Dimensions (D x W x H)	35D x 30W x 40H centimeters
Item Weight	5 Kilograms
Special Features	Temperature Control, Rotisserie Function, Air Fryer Function



**Figure 7:** Diagram illustrating the approximate dimensions of the KENWOOD 2-in-1 25L Toaster Oven + Air Fryer: 43cm depth, 52cm width, and 44cm height.

## WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Kenwood website. Keep your purchase receipt as proof of purchase for warranty claims.

If you require technical assistance or have questions not covered in this manual, please contact Kenwood customer service.