

AKOYU AKOYU Wireless Door/Window Alarm

AKOYU Wireless Door/Window Alarm User Manual

Model: AKOYU Wireless Door/Window Alarm

1. INTRODUCTION

Thank you for choosing the AKOYU Wireless Door/Window Alarm. This device is designed to enhance the security of your home or property by providing immediate alerts when a protected door or window is opened. Its simple installation and versatile operating modes make it an effective solution for various security needs.

2. PRODUCT FEATURES

- **120dB Loud Siren:** Emits a powerful alarm sound to deter intruders and alert occupants.
- **Wireless Design:** No complex wiring required, ensuring easy and flexible placement.
- **Easy Installation:** Utilizes strong 3M double-sided adhesive for quick, tool-free setup.
- **Four Operating Modes:** Includes Intruder Alarm Mode, Entry Doorbell Mode, Open Alarm Mode (stops when door closes), and Unclosed Reminder Mode.
- **Versatile Application:** Suitable for doors, windows, drawers, and other entry points in homes, offices, garages, and apartments.
- **Battery Powered:** Operates on 2 AAA batteries (not included) for convenient use.

3. PACKAGE CONTENTS

Please check the package contents upon opening to ensure all items are present:

- AKOYU Wireless Door/Window Alarm Unit (2x)
- Magnetic Strip (2x)
- 3M Double-Sided Adhesive Pads
- User Manual (this document)

Note: 2 AAA batteries per alarm unit are required and are not included in the package.



Image: Contents of the AKOYU Wireless Door/Window Alarm 2-pack.

4. SPECIFICATIONS

Feature	Specification
Brand	AKOYU
Color	Black
Power Source	Battery Powered
Battery Type	2 x AAA batteries (not included)
Voltage	3 Volts (DC)
Noise Level	120 dB
Mounting Type	Door Mount / Window Mount (Adhesive)
Sensor Technology	Contact Sensor

Feature	Specification
Product Dimensions	3.6 x 1 x 0.6 inches (Alarm Unit)
Item Weight	3.52 ounces



Image: Product dimensions of the alarm unit and magnetic strip.

5. SAFETY INFORMATION

Please read and follow these safety guidelines to ensure proper operation and prevent damage or injury:

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Keep the device away from water and other liquids.
- Do not attempt to disassemble or repair the device yourself. Refer to qualified personnel for service.

- Ensure batteries are inserted with correct polarity (+/-).
- Replace all batteries at the same time; do not mix old and new batteries.
- Dispose of used batteries according to local regulations.
- The 120dB alarm is very loud. Avoid prolonged exposure to the sound at close range.

6. SETUP AND INSTALLATION

6.1 Battery Installation

Each alarm unit requires 2 AAA batteries. Follow these steps:

1. Gently slide the battery cover off the back of the main alarm unit.
2. Insert 2 AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the battery compartment.
3. Replace the battery cover, ensuring it clicks securely into place.



Image: Battery installation steps for the alarm unit.

6.2 Mounting the Alarm

The alarm unit and magnetic strip must be mounted on the same plane (e.g., both on the door frame or both on the window frame) and aligned correctly for proper function. The gap between the two parts should be no more than 0.4 inches (10mm) when the door/window is closed.

1. Clean the surface where you intend to install the alarm and magnetic strip. Ensure it is dry and free of dust or grease.
2. Peel off the protective film from one side of the 3M adhesive pad and apply it to the back of the main alarm unit. Repeat for the magnetic strip.
3. Identify the alignment marks (arrows or triangles) on both the alarm unit and the magnetic strip. These marks must face each other and be aligned when the door/window is closed.

4. Attach the main alarm unit to the door/window frame.
5. Attach the magnetic strip to the door/window itself, ensuring it aligns with the alarm unit and the gap is within 0.4 inches (10mm) when closed.
6. Press firmly for a few seconds to ensure strong adhesion.

Easy To Install

When the alarm and the magnetic strip are separated more than 0.4 inch, the alarm will keep beeping.

 
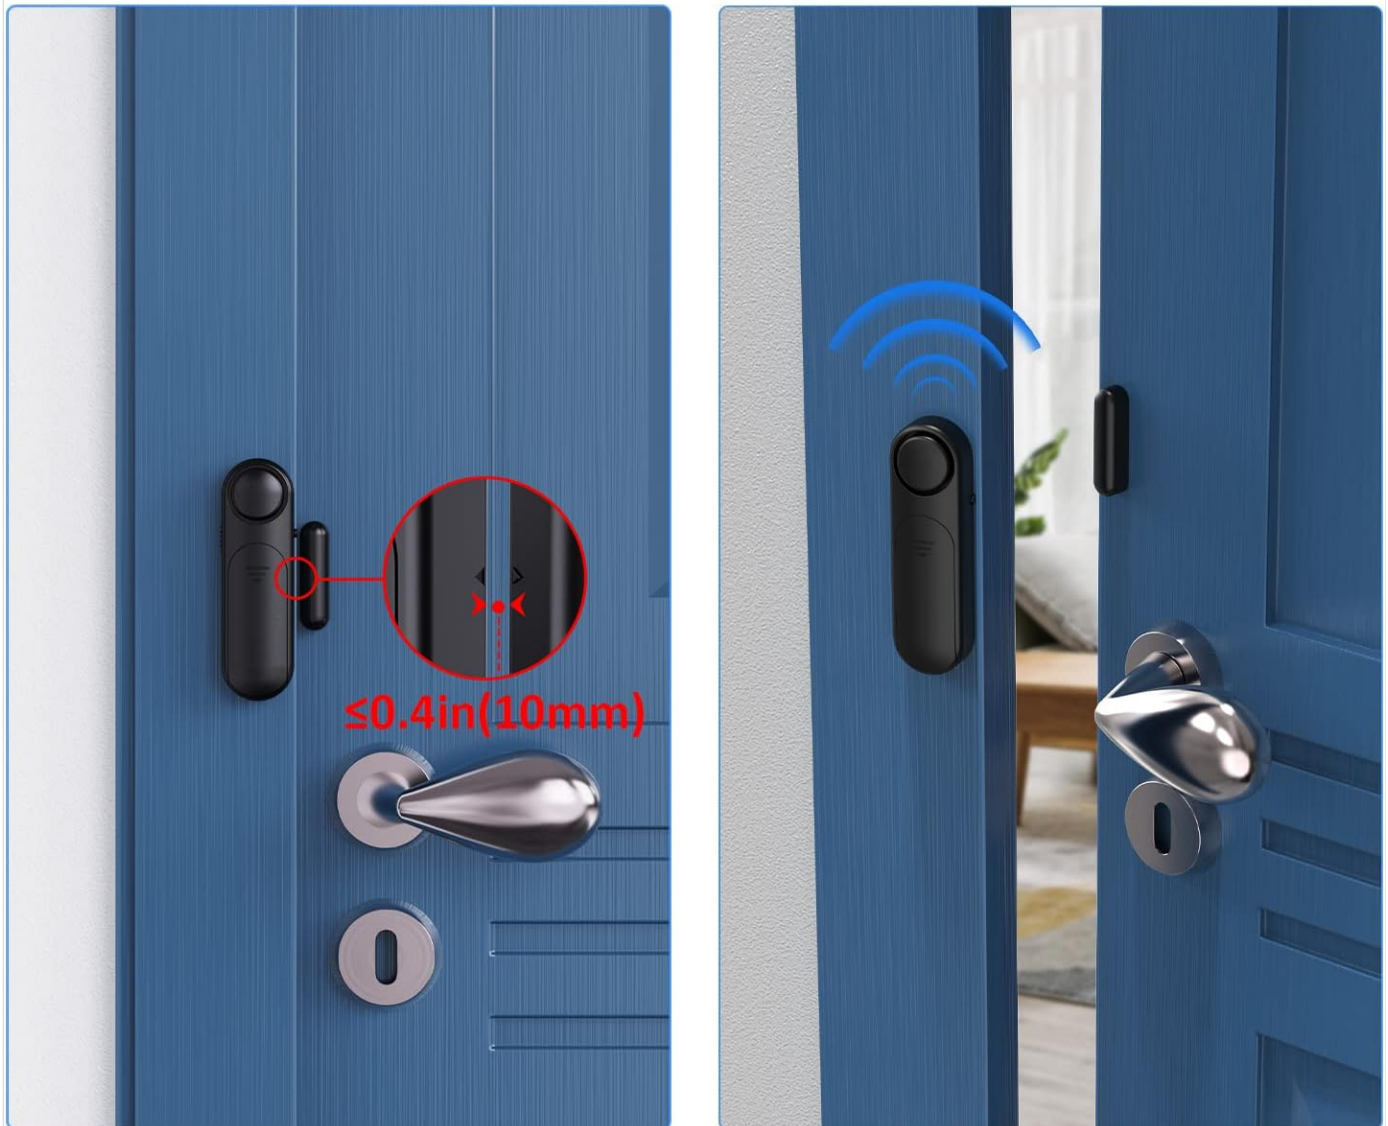 


Image: Proper alignment and gap for installation.

Easy to Install

Battery Installation Method

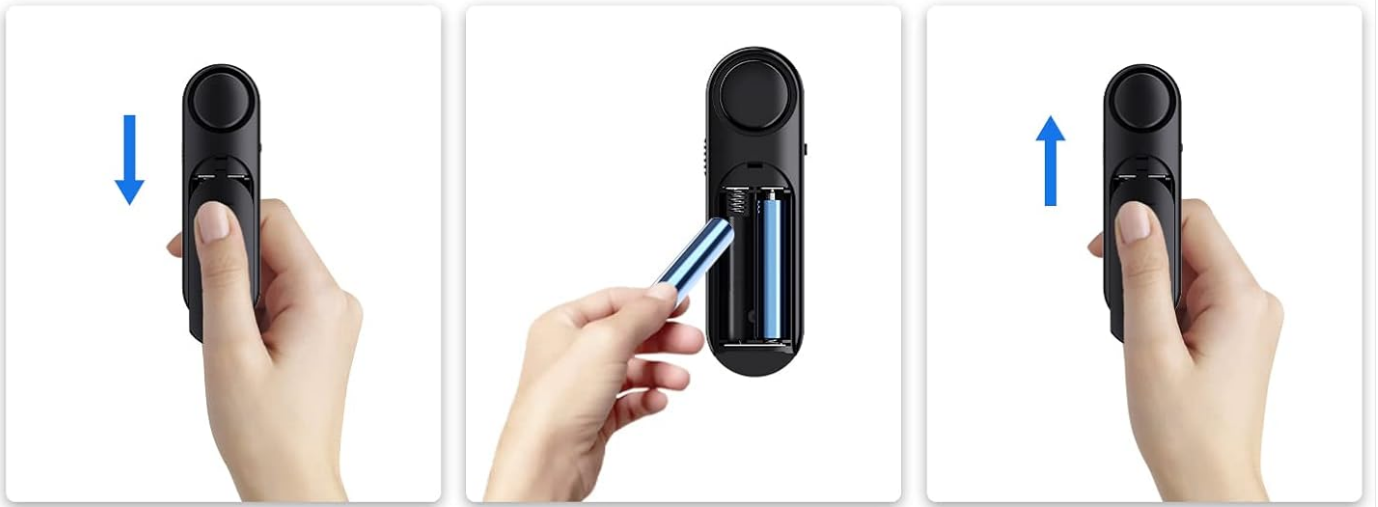

Installation Instruction



Image: Detailed installation instructions.

7. OPERATING MODES

The AKOYU Wireless Door/Window Alarm features four distinct operating modes, selectable via the switch on the side of the unit:

- **Intruder Alarm Mode:** When the door/window is opened, the 120dB siren will sound continuously for 1 minute. This mode is ideal for security against unauthorized entry.
- **Entry Doorbell Mode:** When the door/window is opened, the alarm will emit a pleasant "Ding Dong" sound. This mode is suitable for welcoming guests or monitoring entry/exit in a business setting.
- **Open Alarm Mode:** The alarm will sound when the door/window is opened and will continue to sound until the door/window is closed again. This is useful for situations where you need a persistent alert until the entry point is secured.
- **Unclosed Reminder Mode:** If the door/window remains open, the alarm will emit a "beep beep" sound, with the volume gradually increasing. This mode serves as a reminder to close the door or window, preventing energy loss or accidental access.

4 Working Modes

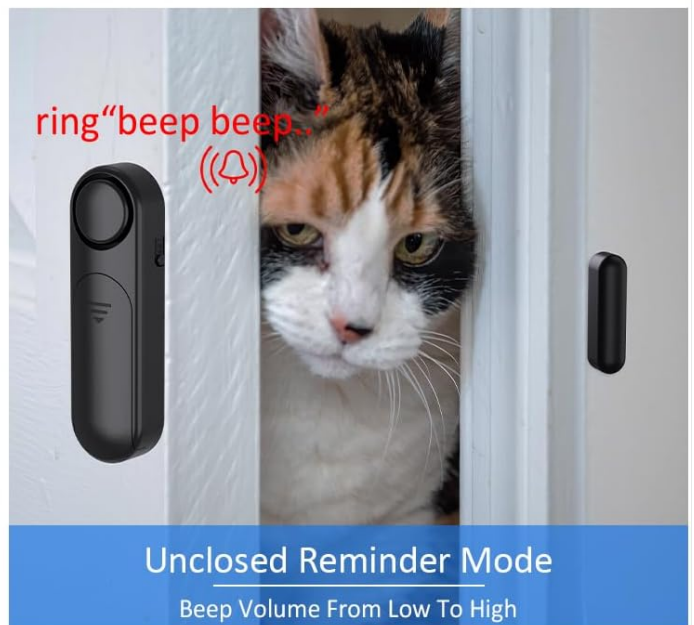 
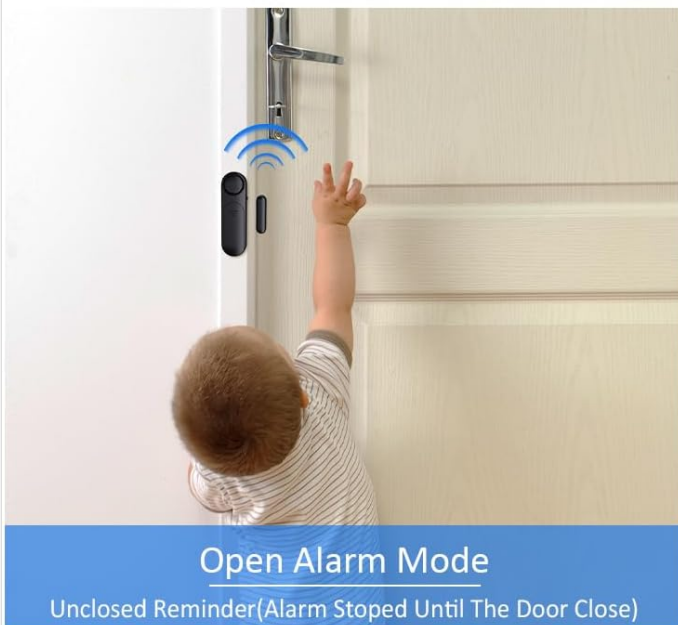 
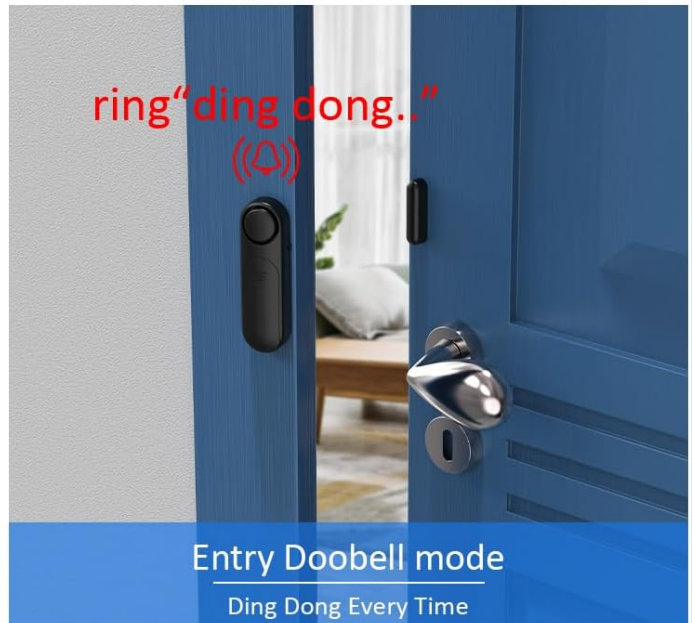 


Image: Overview of the four working modes.

120dB Louder Alarm, Deters Crime



Image: The 120dB alarm in action, deterring intruders.

Multi Purpose Application

Never Miss Alarm, Never Error Alarm

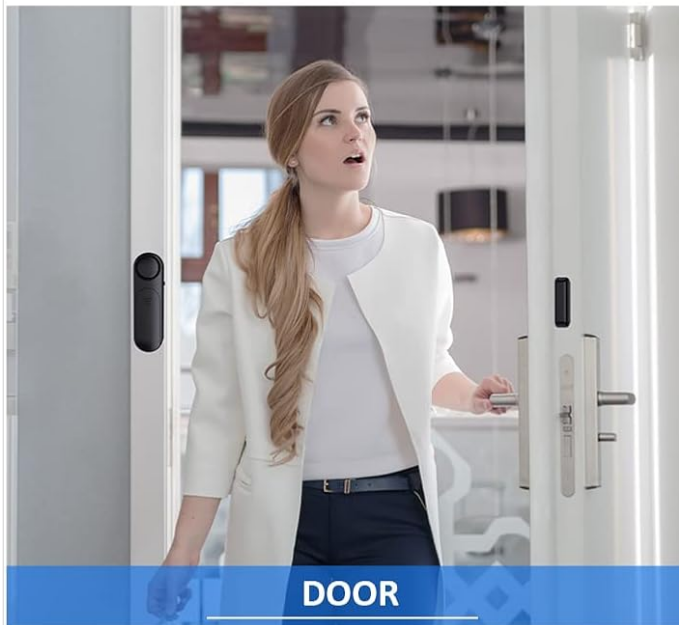 


Image: Multi-purpose application of the alarm.

8. TROUBLESHOOTING

If you encounter issues with your AKOYU Wireless Door/Window Alarm, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Alarm does not sound when opened.	<ol style="list-style-type: none">1. Batteries are dead or incorrectly inserted.2. Alarm and magnetic strip are misaligned or too far apart.3. Alarm is switched off.	<ol style="list-style-type: none">1. Replace batteries, ensuring correct polarity.2. Realign the alarm unit and magnetic strip, ensuring the gap is less than 0.4 inches (10mm) when closed.3. Ensure the ON/OFF switch is in the 'ON' position.

Problem	Possible Cause	Solution
Alarm sounds intermittently or gives false alarms.	1. Alarm and magnetic strip are too close or vibrating. 2. Loose mounting. 3. Low battery.	1. Ensure the gap is stable and within the recommended range (0.4 inches max). Check for vibrations. 2. Re-secure the alarm and magnetic strip with fresh adhesive if needed. 3. Replace batteries.
Alarm sound is weak or distorted.	Low battery.	Replace batteries.
Adhesive not holding.	Surface was not clean or dry during installation.	Clean the surface thoroughly with rubbing alcohol, let it dry completely, and apply new 3M adhesive pads.

9. MAINTENANCE


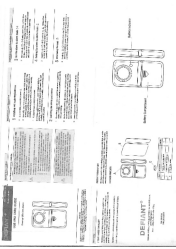
To ensure the longevity and optimal performance of your AKOYU Wireless Door/Window Alarm, follow these maintenance tips:


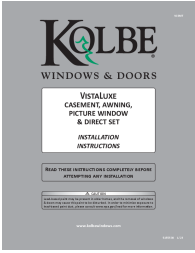


- **Cleaning:** Wipe the alarm unit and magnetic strip with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the alarm sound becomes weak or if the low battery indicator (if present) activates. Always replace both batteries at the same time.
- **Adhesive Check:** Periodically check the adhesive pads to ensure the units are securely attached. Reapply new adhesive if they become loose.

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact AKOYU customer service directly. Contact details can typically be found on the manufacturer's official website or through your point of purchase.

Related Documents - AKOYU Wireless Door/Window Alarm

	<p>AKOYU Wireless Door Open Chime Kit User Manual</p> <p>User manual for the AKOYU Wireless Door Open Chime Kit (Model D121x2+RC533) by Shenzhen Kerui Smart Technology Co., Ltd. Provides instructions on product introduction, functions, operation, installation, low-battery indication, technical specifications, and FCC compliance.</p>
	<p>Defiant Door and Window Alarm Use and Care Guide</p> <p>This guide provides instructions for the Defiant Door or Window Alarm system, covering safety precautions, installation procedures, operation modes (alarm, chime, disarm), battery replacement, and warranty information.</p>

	<p>MC-05 Door/Window Alarm User Manual - Airuize</p> <p>User manual for the Airuize MC-05 Door/Window Alarm, a 130DB wireless security sensor. Details include material, size, version, and manufacturing information.</p>
	<p>Kolbe VistaLuxe Casement, Awning, Picture & Direct Set Window Installation Instructions</p> <p>Comprehensive installation guide for Kolbe VistaLuxe windows, covering preparation, various installation techniques (clips, screw-through-frame), exterior finishing, direct set support, hinge adjustments, insulation, and maintenance. Includes safety warnings and product care information.</p>
	<p>SmartKitchen Alarms Management Guide</p> <p>A comprehensive guide to managing alarms within the SmartKitchen service, covering alarm triggers, setting recipients, temperature limit configurations, and notification acknowledgments.</p>
	<p>SECRUI D12 Wireless Door and Window Alarm User Manual and Specifications</p> <p>This document provides the user manual and technical specifications for the SECRUI D12 wireless door and window alarm system. It details installation, features, and product details for home security.</p>