

[Manuals.plus](#) /

> [IPIDIPI TOYS](#) /

> IPIDIPI TOYS Fishing Game for Kids Instruction Manual

IPIDIPI TOYS LED (B0C2CWFJ7J)

IPIDIPI TOYS Fishing Game for Kids

Model: LED (B0C2CWFJ7J)

Instruction Manual

INTRODUCTION

This manual provides essential information for the safe and proper use of your IPIDIPI TOYS Light Up Magnetic Fishing Game. Please read these instructions carefully before assembly and operation. Keep this manual for future reference.

SAFETY INFORMATION

- **Age Recommendation:** This product is suitable for children aged 3 years and up.
- **Battery Safety:** Requires 3 x 1.5V AA batteries (not included). Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Insert batteries with correct polarity. Remove exhausted batteries promptly. Remove batteries if the product is not used for an extended period.
- **Small Parts:** The game contains small fish. Adult supervision is recommended, especially for younger children, to prevent choking hazards.
- **Electrical Components:** Keep the game board away from water and moisture to prevent damage to electrical components.
- **Supervision:** Always supervise children during play.

WHAT'S IN THE BOX

The IPIDIPI TOYS Fishing Game set includes the following components:

- 1x Motorized Spinning Game Board with LED Lights
- 45x Colorful Magnetic Fish
- 8x Fishing Poles (including magnetic and hook types)



Image: The complete IPIDIPI TOYS Fishing Game set, showing the game board, various fishing poles, and the box packaging.

SETUP

1. **Unpack Components:** Carefully remove all items from the packaging.
2. **Install Batteries:** Locate the battery compartment on the underside of the game board. Using a screwdriver, open the compartment. Insert 3 x 1.5V AA batteries, ensuring correct polarity (+/-). Close the compartment securely.
3. **Place Fish:** Distribute the 45 colorful magnetic fish into the designated slots on the game board.
4. **Prepare Fishing Poles:** The set includes 8 fishing poles, some with magnets and others with hooks. Choose the desired pole type for play.

OPERATING INSTRUCTIONS

1. **Power On:** Locate the power switch on the side of the game board. Slide it to the 'ON' position. The board will begin to rotate, and the LED lights will illuminate.

2. **Music Control:** The game features a music switch. You can choose to play with or without sound by toggling this switch.
3. **Start Fishing:** As the board rotates and the fish open and close their mouths, use the fishing poles to catch them.
 - **Magnetic Poles:** Lower the magnetic tip of the pole into an open fish mouth to attract and lift the fish.
 - **Hook Poles:** Carefully hook the fish as their mouths open.
4. **Multiplayer Fun:** The game is designed for up to 4 players, allowing multiple children to play simultaneously using the provided poles.
5. **Power Off:** When finished playing, slide the power switch to the 'OFF' position to conserve battery life.



Image: A child actively engaged in playing the IPIDIPI TOYS Fishing Game, demonstrating the light-up feature of the board.

FUN MULTIPLAYER FISHING GAME

4 FISHING POLES ENSURE EVERYONE CAN JOIN IN FOR QUALITY FAMILY TIME.



Image: Three children enjoying the multiplayer aspect of the fishing game, each with a fishing pole.

MAINTENANCE

- **Cleaning:** Wipe the game board and fish with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners. Avoid submerging the board in water.
- **Battery Replacement:** Replace batteries when the lights dim, the music becomes distorted, or the board rotation slows down. Follow the battery installation steps in the Setup section.
- **Storage:** Store the game in a cool, dry place away from direct sunlight when not in use. Ensure all components are clean and dry before storage.

SAFE AND SECURE

CRAFTED WITH SAFETY IN MIND, OUR FISHING GAME SET IS MADE FROM HIGH-QUALITY MATERIALS.



DURABLE FOR
WORRY-FREE
PLAY!



Image: A top-down view of the IPIDIPI TOYS Fishing Game board, highlighting its construction and design for durability.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Game does not turn on.	Batteries are dead or incorrectly installed.	Check battery polarity. Replace with fresh AA batteries.
Board rotation is slow or inconsistent.	Low battery power.	Replace with fresh AA batteries.
Fish are difficult to catch with magnetic poles.	Fish mouths may not be opening fully or magnets are misaligned.	Ensure fish are properly seated in their slots. Try adjusting the angle of the fishing pole.

Problem	Possible Cause	Solution
No sound or distorted music.	Music switch is off or low battery power.	Toggle the music switch. Replace with fresh AA batteries.

SPECIFICATIONS

- **Product Dimensions:** 10 x 10 x 1.5 inches
- **Item Weight:** 1.61 pounds
- **Model Number:** B0C2CWFJ7J
- **Manufacturer Recommended Age:** 3 years and up
- **Power Source:** 3 x 1.5V AA batteries (not included)
- **Manufacturer:** Ipidipi Toys

WARRANTY AND SUPPORT

Specific warranty information is not provided in the product details. For any questions, concerns, or support regarding your IPIDIPI TOYS Fishing Game, please contact the retailer or the manufacturer directly through their official channels.



© 2025 IPIDIPI TOYS. All rights reserved.