

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Kenwood](#) /

› **KENWOOD MWA30.000BK 30L 4-in-1 Microwave Oven with Air Fryer, Grill, and Convection User Manual**

Kenwood MWA30.000BK

KENWOOD MWA30.000BK 30L 4-in-1 Microwave Oven User Manual

Model: MWA30.000BK

This manual provides essential instructions for the safe and efficient operation of your Kenwood 4-in-1 Microwave Oven.

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or injury.

- Do not operate the oven if the door or door seals are damaged. Contact qualified service personnel for repair.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only use utensils suitable for microwave ovens.
- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- If smoke is observed, switch off or unplug the appliance and keep the door closed to stifle any flames.
- Do not overcook food.
- Clean the oven regularly and remove any food deposits.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Ensure the appliance is properly grounded.

2. PRODUCT OVERVIEW

The Kenwood MWA30.000BK is a versatile 30-liter appliance combining a microwave oven with air fryer, grill, and convection functions. It features a digital display, 5 power levels, 19 preset programs, defrost function, 95-minute timer, and a clock function.

Components

- Oven Cavity
- Control Panel with Digital Display
- Door Handle
- Glass Turntable
- Turntable Ring
- Grill Rack
- Air Fry Pan (or similar accessory for air frying)



Figure 2.1: Front view of the Kenwood MWA30.000BK oven, highlighting its multi-function capabilities.



Figure 2.2: The oven in operation, demonstrating its capacity for cooking a whole chicken with the convection or air fry function.



Figure 2.3: Interior view of the oven with the door open, showcasing the air fry function with french fries.



Figure 2.4: Included accessories: glass turntable, turntable ring, grill rack, and air fry pan, designed for various cooking methods.

3. SETUP

- 1. Unpacking:** Carefully remove the oven and all packing materials. Check for any damage.
- 2. Placement:** Place the oven on a flat, stable surface strong enough to hold its weight. Ensure there is adequate ventilation (at least 20 cm above, 10 cm at the rear, and 5 cm on each side).
- 3. Power Connection:** Plug the power cord into a grounded electrical outlet.
- 4. Initial Cleaning:** Wipe the interior and exterior with a damp cloth. Wash the turntable, turntable ring, and other accessories in warm, soapy water.
- 5. Assemble Turntable:** Place the turntable ring in the center of the oven cavity, then place the glass turntable securely on top of the ring.
- 6. Set Clock (Optional):** Refer to the 'Clock Function' section in Operating Instructions to set the current time.

4. OPERATING INSTRUCTIONS

This appliance offers multiple cooking functions. Familiarize yourself with the control panel and its buttons.

4.1 Microwave Function

1. Place food in a microwave-safe container on the glass turntable.

2. Close the oven door.
3. Select the Microwave function.
4. Adjust the power level (e.g., 1000W for high power).
5. Set the cooking time using the timer dial or buttons.
6. Press Start.

4.2 Air Fryer Function

1. Place food on the air fry pan or a suitable air fry accessory.
2. Insert the accessory into the oven cavity.
3. Close the oven door.
4. Select the Air Fryer function.
5. Adjust temperature and cooking time as required, or select a preset program.
6. Press Start.

4.3 Grill Function

1. Place food on the grill rack.
2. Insert the grill rack into the oven cavity.
3. Close the oven door.
4. Select the Grill function.
5. Set the grilling time.
6. Press Start.

4.4 Convection Function

1. Place food in an oven-safe dish.
2. Insert the dish into the oven cavity.
3. Close the oven door.
4. Select the Convection function.
5. Set the desired temperature and cooking time.
6. Press Start.

4.5 Preset Programs

The oven includes 19 preset programs for common dishes. Consult the appliance's internal menu or a quick guide (if provided) for specific program details.

1. Place food in the oven.
2. Select the 'Preset Programs' button.
3. Rotate the dial or press buttons to select the desired program number.
4. Confirm the selection and press Start.

4.6 Defrost Function

Use the defrost function to thaw frozen foods by weight or time.

1. Place frozen food in a microwave-safe container.

2. Select the 'Defrost' function.
3. Choose defrost by weight or time, and adjust accordingly.
4. Press Start.

4.7 Timer and Clock Function

- **Setting the Clock:** When the oven is first plugged in or after a power interruption, the display will show '0:00'. Press the 'Clock' button, then use the dial to set the hour and minutes. Press 'Clock' again to confirm.
- **Using the Timer:** The timer can be used independently for up to 95 minutes. Press the 'Timer' button, set the desired time, and press Start. This will count down without activating any cooking function.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your appliance.

- **Before Cleaning:** Always unplug the oven from the power outlet and allow it to cool completely.
- **Oven Interior:** Wipe the interior cavity with a damp cloth after each use. For stubborn stains, use a mild detergent and then wipe with a clean, damp cloth. Do not use abrasive cleaners.
- **Oven Exterior:** Clean the exterior surface with a soft, damp cloth. Avoid getting water into the ventilation openings.
- **Door and Door Seals:** Clean the door, door seals, and adjacent parts carefully with a damp cloth to remove any spills or splatters.
- **Glass Turntable and Ring:** These can be washed in warm, soapy water or in a dishwasher. Ensure they are completely dry before placing them back in the oven.
- **Grill Rack and Air Fry Pan:** Wash these accessories in warm, soapy water.

6. TROUBLESHOOTING

If you encounter any issues, refer to the table below for common problems and solutions.

| Problem | Possible Cause | Solution |
|------------------------|--|--|
| Oven does not start | Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped. | Ensure power cord is securely plugged in; Close door firmly; Check household fuse/circuit breaker. |
| Food not heating | Door not closed properly; Cooking time/power level not set correctly; Metal objects in microwave mode. | Close door firmly; Adjust time/power; Remove any metal objects when using microwave. |
| Turntable not rotating | Turntable not properly seated; Turntable ring obstructed. | Ensure turntable is correctly placed on the ring; Clean under the turntable and ring. |

| Problem | Possible Cause | Solution |
|------------------------|--|--|
| Smoke or burning smell | Food residue inside oven; Overcooked food; Incorrect utensil used. | Clean oven interior thoroughly; Reduce cooking time; Use only appropriate utensils. If smoke persists, unplug immediately. |

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

| | |
|---------------------------------------|---|
| Model Number | MWA30.000BK |
| Capacity | 30 Liters |
| Functions | Microwave, Air Fryer, Grill, Convection |
| Microwave Power | 1000W |
| Wattage (Total) | 2000W |
| Power Levels | 5 |
| Preset Programs | 19 |
| Timer | Up to 95 Minutes |
| Display Type | Digital |
| Product Dimensions (L x W x H) | 20 x 20 x 25 cm |
| Item Weight | 20.2 Kilograms |
| Material | Metal |
| Installation Type | Countertop |

8. WARRANTY AND SUPPORT

This Kenwood appliance comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, service, or to inquire about replacement parts, please contact Kenwood customer support. Contact information can typically be found on the Kenwood official website or on your product's packaging.

When contacting support, please have your model number (MWA30.000BK) and proof of purchase readily available.

