

[Manuals.plus](#) /

› [Kryptonite](#) /

› Kryptonite KryptoLok Combo Bike U-Lock Instruction Manual

Kryptonite KryptoLok Combo U-Lock

Kryptonite KryptoLok Combo Bike U-Lock Instruction Manual

Model: 720018005797

INTRODUCTION

The Kryptonite KryptoLok Combo Bike U-Lock provides robust security for your bicycle and other valuable items. It features a 12.7mm hardened performance steel shackle designed to resist cutting and twisting attacks. The lock incorporates a 4-digit resettable combination mechanism for keyless convenience and a double deadbolt locking mechanism for enhanced security. A protective vinyl coating helps prevent scratches to your bike's frame, and a rotating dust cover shields the combination dials from dirt and debris. This U-lock is rated 6 out of 10 on the Kryptonite security scale, suitable for quick stops in metropolitan areas, several hours in suburbs, or all-day/overnight use in rural areas.



Image: The Kryptonite KryptoLok Combo Bike U-Lock, featuring its hardened steel shackle and resettable combination mechanism.

PACKAGE CONTENTS

- Kryptonite KryptoLok Combo Bike U-Lock
- FlexFrame-U Mounting Bracket

SETUP: SETTING YOUR COMBINATION

Your KryptoLok Combo U-Lock comes with a factory preset combination, usually 0000. To set your personalized 4-digit combination:

1. Ensure the lock is open and the shackle is removed from the crossbar.
2. Rotate the combination dials to the current opening combination (factory default is 0000).
3. Locate the reset button or lever on the side or bottom of the lock body. Use a pen or small pointed object to press and hold the reset button, or slide the lever to the 'SET' position.
4. While holding the reset button/lever, set your desired new 4-digit combination by rotating the dials. Make sure the numbers are aligned with the indicator marks.
5. Release the reset button/return the lever to its original position. Your new combination is now set.
6. **Important:** Test your new combination several times before locking your bike. Write down your combination and store it in a safe, memorable place, or register it with the [Combo Safe Program](#).

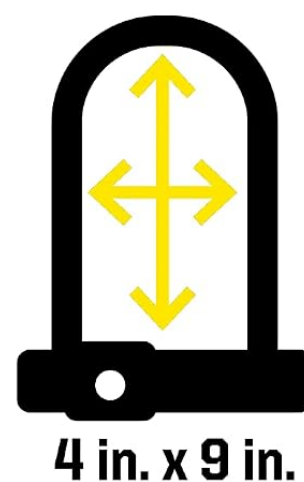


Image: Close-up of the combination dials on the KryptoLok U-Lock, showing the numbers and reset mechanism.

Video: This video provides a general overview of the Kryptonite KryptoLok Combo Bike U-Lock, including how to operate it and potentially set the combination.

OPERATING INSTRUCTIONS: SECURING YOUR BICYCLE

To effectively secure your bicycle, follow these steps:

1. Choose a secure, immovable object to lock your bike to, such as a dedicated bike rack, sturdy pole, or railing.
2. Position your bike close to the object.

3. Enter your 4-digit combination to unlock the U-lock and remove the shackle from the crossbar.
4. Pass the shackle through the frame of your bicycle and around the immovable object. If possible, also include one of your wheels (preferably the front wheel) within the shackle.
5. Reinsert both ends of the shackle firmly into the crossbar until you hear a click, ensuring both sides are fully engaged.
6. Scramble the combination dials to secure the lock.
7. Gently tug on the lock and bike to confirm it is securely fastened and cannot be easily removed.

Support FLEXFRAME-U



Image: The KryptoLok Combo U-Lock securing a bicycle frame and front wheel to a metal bike rack.

Video: This video demonstrates the proper technique for locking a bicycle using a U-lock, ensuring maximum security.

MOUNTING THE FLEXFRAME-U BRACKET

The included FlexFrame-U bracket allows for convenient transport of your U-lock on your bicycle frame:

1. Identify a suitable location on your bike frame (e.g., seat tube, down tube) that does not interfere with pedaling or other components.
2. Attach the bracket to the frame using the provided straps or bolts, ensuring it is tight and stable.
3. Slide the U-lock into the bracket until it clicks securely into place.
4. Ensure the lock is firmly held and does not rattle or obstruct your ride.

 	QUICK STOP	COUPLE OF HOURS	ALL DAY	OVERNIGHT
MAJOR METROPOLITAN AREA	9-10 ULTIMATE SECURITY	9-10 ULTIMATE SECURITY	9-10 ULTIMATE SECURITY	9-10 ULTIMATE SECURITY
METROPOLITAN AREA	4-6 MODERATE SECURITY	7-8 HIGH SECURITY	7-8 HIGH SECURITY	9-10 ULTIMATE SECURITY
COLLEGE CAMPUS	7-8 HIGH SECURITY	9-10 ULTIMATE SECURITY	9-10 ULTIMATE SECURITY	9-10 ULTIMATE SECURITY
SUBURBS	4-6 MODERATE SECURITY	4-6 MODERATE SECURITY	7-8 HIGH SECURITY	7-8 HIGH SECURITY
RURAL AREA	1-3 DETERRENT SECURITY	4-6 MODERATE SECURITY	4-6 MODERATE SECURITY	4-6 MODERATE SECURITY
CAR RACK ON THE ROAD	4-6 MODERATE SECURITY	4-6 MODERATE SECURITY	7-8 HIGH SECURITY	9-10 ULTIMATE SECURITY

HOW TO CHOOSE A LOCK

 WHERE DO YOU LOCK YOUR BIKE?

 AND FOR HOW LONG?

Find the recommended security rating on the chart and choose a product with that rating.

KRYPTONITE®

Image: The FlexFrame-U bracket mounted on a bicycle frame, securely holding the KryptoLok U-Lock.

MAINTENANCE

Proper maintenance will extend the life and functionality of your U-lock:

- **Keep Clean:** Regularly wipe down the lock body and shackle to remove dirt and grime.
- **Lubrication:** Periodically apply a small amount of graphite-based lubricant to the locking mechanism and combination dials to ensure smooth operation. Avoid oil-based lubricants as they can attract dirt.
- **Dust Cover:** Always use the rotating dust cover to protect the combination dials from environmental elements like dust, water, and debris.
- **Vinyl Coating:** The protective vinyl coating helps prevent scratches to your bike. Inspect it periodically for damage and avoid sharp objects that could cut or tear it.

TROUBLESHOOTING

Forgotten Combination

If you forget your combination, you may be able to retrieve it if you registered your lock with the [Kryptonite Combo Safe Program](#). Refer to the "Warranty and Support" section for more details.

Lock Mechanism Issues

If the lock is stiff or difficult to open/close:

- Ensure the combination is correctly aligned.
- Check for any debris obstructing the shackle or locking mechanism.
- Apply a graphite-based lubricant as described in the Maintenance section.
- If issues persist, contact Kryptonite customer support.

SPECIFICATIONS



Image: The KryptoLok Combo U-Lock displaying its interior locking dimensions of 4" x 9" and a weight of 2.9 lbs.

Feature	Detail
---------	--------

Brand	Kryptonite
Model Name	KryptoLok Combo U-Lock
Model Number	720018005797
Lock Type	Combination Lock (4-Digit Resettable)
Shackle Material	Hardened Performance Steel
Shackle Diameter	12.7 mm
Interior Locking Dimensions	4" x 9" (10.2 cm x 22.9 cm)
Overall Item Dimensions (L x W x H)	2.2 x 4 x 9 inches (5.6 x 10.2 x 22.9 cm)
Weight	2.9 pounds (1.32 kg)
Security Rating	6/10 (Kryptonite Security Scale)
Special Features	Double Deadbolt, Rotating Dust Cover, Protective Vinyl Coating



ANTI-THEFT PROTECTION OFFER



Image: Kryptonite's security rating scale, indicating a 6/10 rating for the KryptoLok Combo U-Lock.

WARRANTY AND SUPPORT

Limited Lifetime Warranty

The Kryptonite KryptoLok Combo U-Lock is backed by a Limited Lifetime Warranty. For specific terms and conditions, please refer to the official Kryptonite website or contact customer support.

Combo Safe Program

Kryptonite offers a Combo Safe Program. By registering your lock's combination online, Kryptonite can help you retrieve your combination if you forget it. This service ensures you always have access to your lock. Visit the official Kryptonite website to register your product and combination.



Image: An illustration detailing the Kryptonite Combo Safe Program, which allows users to register their lock combination for retrieval.

Anti-Theft Protection Offer (ATPO)

The Anti-Theft Protection Offer (ATPO) is an optional program available for eligible Kryptonite locks, including the KryptoLok Combo U-Lock (rated 6/10). This program provides financial reimbursement in the event your bicycle is stolen due to the lock being defeated. ATPO requires separate registration, additional information, and may involve fees. It is not automatically included with purchase. For full details and to register, please visit the official Kryptonite website.



COMBO SAFE PROGRAM



REGISTER YOUR
COMBINATION ONLINE
AND WE'LL REMIND YOU
WHAT IT IS SHOULD YOU
FORGET IT!



Image: An illustration explaining the Kryptonite Anti-Theft Protection Offer, providing peace of mind against theft.

Contact Information

For further assistance, product registration, or warranty claims, please visit the official Kryptonite website or contact their customer support directly.

© 2024 Kryptonite. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question