

[Manuals.plus](#) /

› [Dpofirs](#) /

› Dpofirs 1080p HD WiFi Wireless Mini Security Camera User Manual

Dpofirs Dpofirsxg92pqs5ad-11

Dpofirs 1080p HD WiFi Wireless Mini Security Camera User Manual

INTRODUCTION AND OVERVIEW

The Dpofirs 1080p HD WiFi Wireless Mini Security Camera is a compact and versatile surveillance device designed for both indoor and outdoor use. It features a high-resolution 1080P lens for clear video and image capture. With its built-in magnet, the camera can be easily mounted on any ferrous surface. Wireless WiFi connectivity allows for real-time monitoring via a mobile application, ensuring you can stay connected to your property from anywhere. The camera is equipped with a 240mAh battery, providing approximately 45 minutes of continuous operation, and supports up to 128GB of memory expansion for extensive recording.

PACKAGE CONTENTS



This image displays the main components included: the compact camera unit, its magnetic mounting base, and the USB charging cable.

- 1 x Dpofirs Mini Security Camera
- 1 x USB Charging Cable
- 1 x Magnetic Mounting Bracket
- 1 x Instruction Manual

PRODUCT FEATURES



Compact Design: The camera's small and exquisite design allows for discreet placement in various environments, from homes to offices.



WiFi Connectivity & Storage: Supports WiFi for remote viewing and features a slot for a Micro SD card (up to 128GB, not included) for local storage.



Intuitive Controls: Detailed view of the camera's ON/OFF and MODE buttons, along with the Micro USB charging port for power and data transfer.

MAGNETIC BACK COVER STRONG MAGNETIC ADSORPTION CAN BE USED WITH ANY IRON MATERIAL EASY TO PLACE ANYWHERE



Magnetic Mounting: The camera features a strong magnetic back cover, enabling easy and secure attachment to any ferrous material without additional tools.

SETUP INSTRUCTIONS

1. **Charge the Camera:** Connect the camera to a 5V 1A power source using the provided USB cable. The charging time is approximately 30 minutes for a full charge.
2. **Insert Memory Card:** If local storage is desired, insert a Micro SD card (up to 128GB, not included) into the designated slot. Ensure the card is inserted correctly.
3. **Download Mobile Application:** Search for the official application (e.g., "HD Camera" or similar, specific app name not provided) on your smartphone's app store (iOS/Android) and install it.
4. **Power On:** Press and hold the "ON/OFF" button to power on the camera.

5. Connect to WiFi:

- Open the mobile application.
- Follow the in-app instructions to connect the camera to your 2.4GHz WiFi network **Note:** This camera does not support 5GHz WiFi networks.
- Ensure your phone is connected to the same 2.4GHz WiFi network during the initial setup.

OPERATING INSTRUCTIONS

1. **Live View:** Open the mobile application and select your camera to view the live feed in 1080p HD resolution.
2. **Recording:**
 - **Continuous Recording:** If a memory card is inserted, the camera will automatically record video.
 - **App-Controlled Recording:** Use the application to manually start or stop video recording.
3. **Night Vision:** The camera features infrared light for night vision capabilities, allowing for surveillance in low-light conditions. This feature typically activates automatically.
4. **Playback:** Access recorded footage through the mobile application's playback function.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera lens and body. Avoid using liquid cleaners or abrasive materials.
- **Storage:** When not in use for extended periods, store the camera in a cool, dry place. Ensure the battery is partially charged to prolong its lifespan.
- **Battery Care:** Avoid fully discharging the battery frequently. Charge the camera regularly, even if not in constant use.

TROUBLESHOOTING

- **Camera not powering on:**
 - Ensure the camera is fully charged. Connect it to a power source and wait for the charging indicator to show it's ready.
 - Press and hold the "ON/OFF" button for a few seconds.
- **Cannot connect to WiFi:**
 - Verify that your WiFi network is 2.4GHz. This camera does not support 5GHz WiFi.
 - Ensure the camera is within range of your WiFi router.
 - Restart your router and the camera, then try connecting again.
 - Check if the WiFi password entered in the app is correct.
- **Poor video quality:**
 - Ensure the camera lens is clean.
 - Check the WiFi signal strength; a weak signal can affect streaming quality.
 - Ensure there are no obstructions blocking the camera's view.
- **Short battery life:**
 - The built-in battery provides approximately 45 minutes of operation. For continuous use, connect the camera to a constant power source.
 - Battery performance can degrade over time.

- **Memory card not recording:**
 - Ensure the Micro SD card is inserted correctly.
 - Check if the memory card is formatted correctly (usually FAT32).
 - Verify that the memory card is not full.
 - The camera supports up to 128GB; ensure your card is within this limit.

SPECIFICATIONS

Model	Dpofirxg92pqs5ad-11
Video Resolution	1080p
Battery Life	Approx. 45 minutes (Ultra HD video)
Battery Capacity	240 mAh Lithium-ion
Charging Power	5V 1A
Charging Interface	Micro USB
Charging Time	Approx. 30 minutes (0%-100%)
Max Memory Expansion	128GB (Micro SD card, not included)
Wireless Technology	WiFi (2.4GHz only)
Video Compression Standard	H.264 (Main Profile, Baseline Profile), MJPEF, JPEG Baseline
Material	ABS Plastic
Weight	Approx. 62g
Mounting Type	Pocket / Magnetic
Viewing Angle	150 Degrees
Frame Rate	30 frames per second
OS Compatibility	Android, iOS
Light Source Type	Infrared
Special Feature	HD Resolution
Usage Environment	Indoor or Outdoor

WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For warranty claims, technical support, or further assistance, please contact the seller or refer to the contact information provided with your purchase. Keep your proof of purchase for warranty purposes.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question