

[manuals.plus](#) /

› [Sensea](#) /
› [Sensea Emmy Wall-Mounted Soap Dish User Manual](#)

Sensea Emmy

Sensea Emmy Wall-Mounted Soap Dish User Manual

Model: Emmy

1. PRODUCT OVERVIEW

The Sensea Emmy Wall-Mounted Soap Dish is a stylish and functional accessory designed for your bathroom. It features a durable construction of ZAMA, chrome-plated steel, and glass, ensuring longevity and a modern aesthetic. This soap dish is designed for secure wall mounting using screws and dowels, providing a stable and space-saving solution for holding your soap.



Image 1.1: The Sensea Emmy Wall-Mounted Soap Dish, showcasing its design and materials.

2. SAFETY INFORMATION

Please read all instructions carefully before installation and use. Keep this manual for future reference.

- Ensure the mounting surface is suitable and can support the weight of the soap dish and soap.
- Use appropriate tools for installation and wear safety glasses to protect your eyes.
- Keep small parts and packaging materials away from children to prevent choking hazards.
- Do not overtighten screws during installation to avoid damaging the product or mounting surface.
- Handle glass components with care to prevent breakage and injury.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with installation.

- 1 x Sensea Emmy Soap Dish (ZAMA and chrome-plated steel frame)

- 1 x Glass insert for soap
- Mounting hardware (screws and wall dowels)
- 1 x Instruction Manual

4. SETUP AND INSTALLATION

This soap dish is designed for wall mounting. Follow these steps for secure installation.

Tools Required (Not Included):

- Pencil
- Drill
- Drill bit appropriate for wall dowels and surface type
- Screwdriver (Phillips head recommended)
- Measuring tape
- Level

Installation Steps:

1. **Choose Location:** Select a suitable location on the wall, ensuring it is at a convenient height and away from electrical wires or water pipes. Use a level to mark the desired position for the mounting holes.
2. **Mark Drill Points:** Hold the soap dish mounting bracket against the wall at the chosen location. Use a pencil to mark the exact positions for the drill holes.
3. **Drill Holes:** Using the appropriate drill bit, carefully drill holes at the marked points. The depth and diameter of the holes should match the provided wall dowels.
4. **Insert Dowels:** Gently insert the wall dowels into the drilled holes until they are flush with the wall surface.
5. **Attach Mounting Bracket:** Align the soap dish mounting bracket with the inserted dowels. Insert the screws through the bracket and into the dowels. Tighten the screws firmly but do not overtighten.
6. **Secure Soap Dish:** Attach the main body of the soap dish to the mounted bracket. Ensure it is securely fastened according to the product design (e.g., using a small set screw if applicable, or by sliding it into place).
7. **Insert Glass Tray:** Carefully place the glass insert into the soap dish frame.



Image 4.1: Illustrative image of the Sensea Emmy Soap Dish mounted on a wall.

5. USAGE INSTRUCTIONS

Using your Sensea Emmy Wall-Mounted Soap Dish is straightforward:

- Place your bar of soap directly onto the glass tray within the soap dish.
- The design allows for proper drainage, helping to keep your soap dry and lasting longer.
- Ensure the soap dish is kept clean to maintain hygiene and appearance.

6. MAINTENANCE AND CLEANING

Regular cleaning will help maintain the appearance and functionality of your soap dish.

- **General Cleaning:** Wipe the chrome-plated steel and ZAMA frame with a soft, damp cloth. For stubborn spots, use a mild, non-abrasive cleaner specifically designed for bathroom fixtures.
- **Glass Tray:** The glass insert can be removed for thorough cleaning. Wash with warm soapy water

and rinse thoroughly. Dry with a soft cloth to prevent water spots.

- **Avoid:** Do not use abrasive cleaners, scouring pads, or harsh chemicals (e.g., bleach, ammonia-based cleaners) as these can damage the chrome finish and glass.
- **Drying:** Always dry the soap dish components after cleaning to prevent water stains and maintain shine.

7. TROUBLESHOOTING

If you encounter any issues with your Sensea Emmy Soap Dish, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|---------------------------------------|---|---|
| Soap dish feels loose on the wall. | Mounting screws are loose or dowels are not secure. | Carefully tighten the mounting screws. If the dowels are damaged, consider relocating or using new, appropriate dowels. |
| Water spots or dull finish on chrome. | Hard water residue or improper drying. | Clean with a soft cloth and mild cleaner. Always dry thoroughly after use and cleaning. |
| Glass tray appears cloudy. | Soap residue buildup. | Remove the glass tray and wash it with warm soapy water. Rinse and dry completely. |

8. SPECIFICATIONS

- **Brand:** Sensea
- **Model:** Emmy
- **Materials:** ZAMA, Chrome-plated Steel, Glass
- **Mounting Type:** Wall-mounted (screws and dowels)
- **Item Weight:** 170 grams
- **ASIN:** B0C2HCKYXM
- **First Available Date:** January 13, 2023

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the retailer's policy or contact Sensea customer service directly. Keep your proof of purchase for any warranty claims.

For further assistance, please visit the official Sensea website or contact your local distributor.