

## WHATOOK 001

# WHATOOK 2-in-1 Cordless Air Duster & Vacuum Cleaner User Manual

Model: 001

Brand: WHATOOK

## 1. PRODUCT OVERVIEW

The WHATOOK 2-in-1 Cordless Air Duster and Vacuum Cleaner is a versatile cleaning tool designed for various applications, from delicate electronics to car interiors and household items. It combines powerful air blowing and strong vacuum suction in a compact, portable design.

Key features include:

- Powerful 100,000 RPM motor for air duster mode.
- Strong 10,000 KPA suction for vacuum mode.
- Three adjustable speed settings for varied cleaning needs.
- Rechargeable 7600mAh battery with Type-C quick charge.
- Integrated LED light for improved visibility.
- Comes with multiple nozzles and brushes for diverse cleaning tasks.



Figure 1: WHATOOK 2-in-1 Cordless Air Duster & Vacuum Cleaner with included accessories.

## 2. PACKAGE CONTENTS

Please check the package contents upon unboxing to ensure all components are present:

- WHATOOK 2-in-1 Cordless Air Duster & Vacuum Cleaner Unit
- Dusting Tool Nozzle
- Vacuum Nozzle
- USB Charging Cable (Type-C)
- Stainless Steel Filter
- Various cleaning brushes and additional nozzles (8 nozzles, 3 brushes)
- Storage Bag
- User Manual (this document)



Figure 2: Visual representation of the packing list.

### 3. SETUP AND CHARGING

---

#### 3.1 Initial Charge

Before first use, fully charge the device. The integrated 7600mAh battery provides extended usage time.

1. Connect the provided USB Type-C charging cable to the charging port on the device.
2. Connect the other end of the USB cable to a compatible power source (e.g., car charger, adapter charger, power bank, computer USB port).
3. The LED indicator will show charging status. Once fully charged, the indicator will change (refer to device specific LED behavior, usually turns green or off).

## BEST ALTERNATIVE TO COMPRESSED AIR CANS



Figure 3: Charging the device using the USB Type-C cable.

### 3.2 Attaching Nozzles

The device supports both air blowing and vacuuming functions. Attach the appropriate nozzle for your desired cleaning mode.

#### For Air Blowing:

1. Identify the front air outlet.
2. Select the desired dusting tool nozzle.
3. Align the nozzle with the air outlet and push firmly until it clicks into place.

#### For Vacuuming:

1. Identify the rear vacuum inlet.
2. Select the desired vacuum nozzle.
3. Align the nozzle with the vacuum inlet and twist or push firmly to secure it.



Figure 4: Installation and removal of air duster and vacuum nozzles.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Power On/Off and Speed Control

The device features three powerful airflow modes to suit different cleaning requirements.

1. To turn on the device, press and hold the power button for 3 seconds.
2. Once on, briefly press the power button to cycle through the three speed settings:
  - **1st Gear:** 60,000 RPM / 6000 PA (approx. 55 minutes runtime)
  - **2nd Gear:** 80,000 RPM / 8000 PA (approx. 35 minutes runtime)
  - **3rd Gear:** 100,000 RPM / 10000 PA (approx. 20 minutes runtime)
3. To turn off the device, press and hold the power button for 3 seconds again.

## 3 GEARS SPEED ADJUSTABLE DESIGN

Max speed up to 100,000RPM / 10000PA

### 1ST GEAR

60,000RPM / 6000PA

55 Minutes Runtime

### 2ST GEAR

80,000RPM / 8000PA

35 Minutes Runtime

### 3ST GEAR

100,000RPM / 10000PA

20 Minutes Runtime



Figure 5: Three adjustable speed settings for optimal performance.

## 5.2 Using the Air Duster Function

The air duster is ideal for removing dust and debris from sensitive electronics, keyboards, and hard-to-reach areas.

1. Attach the desired dusting nozzle to the front air outlet.
2. Select the appropriate speed setting.
3. Point the nozzle at the area to be cleaned and activate the air duster.
4. Use short bursts of air for delicate items or continuous airflow for larger areas.

## SUPER POWERFUL 2-IN-1 ELECTRIC DUSTER & VACUUM



Figure 6: Using the air duster mode for cleaning a laptop.

### 5.3 Using the Vacuum Function

The vacuum function is perfect for picking up dust, crumbs, and small debris from surfaces like car interiors, sofas, and tight corners.

1. Attach the desired vacuum nozzle to the rear vacuum inlet.
2. Select the appropriate speed setting.
3. Place the nozzle over the area to be vacuumed and activate the device.
4. Move the nozzle slowly over the surface to effectively pick up debris.

# PERFECT REPLACEMENT FOR CLEANSING GEL



Figure 7: Using the vacuum mode for cleaning a laptop.

## PERFECT CLEANING MODE



Figure 8: Examples of multiple usage scenarios for the device.

## 6. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your device.

### 6.1 Cleaning the Filter

The stainless steel filter should be cleaned regularly, especially after vacuuming fine dust.

1. Twist and remove the vacuum nozzle and the dust collection cup.
2. Carefully remove the stainless steel filter from the dust collection cup.
3. Tap the filter to dislodge loose debris. For thorough cleaning, rinse the filter under running water.
4. Ensure the filter is completely dry before reassembling. Air drying is recommended.
5. Reinsert the dry filter into the dust collection cup, then reattach the cup and nozzle to the device.

# MULTIPLE USAGES

Designed for your needs



Charcoal fire



Computer



Inflatable



Car



Pet Hair



Corner

Figure 9: Instructions for cleaning the vacuum filter.

## 6.2 General Cleaning

- Wipe the exterior of the device with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Ensure no liquid enters the charging port or air outlets/inlets.
- Store the device and its accessories in the provided storage bag in a cool, dry place.

## 7. TROUBLESHOOTING

If you encounter any issues with your WHATOOK 2-in-1 Cordless Air Duster & Vacuum Cleaner, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the provided USB Type-C cable.

Problem	Possible Cause	Solution
Weak airflow/suction.	Filter is clogged or dirty.	Clean the stainless steel filter as described in the Maintenance section.
Weak airflow/suction.	Nozzle is not properly attached.	Ensure the nozzle is securely attached to the correct port (air outlet for duster, vacuum inlet for vacuum).
Weak airflow/suction.	Battery is low.	Recharge the device. Performance may decrease as battery level drops.
Device stops unexpectedly.	Overheating protection activated.	Turn off the device and let it cool down for at least 15-30 minutes before resuming use.

If the problem persists after trying these solutions, please contact WHATOOK customer support.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	001
Dimensions (L x W x H)	16 x 9 x 16 cm
Weight	680 grams
Battery Capacity	7600 mAh
Charging Type	USB Type-C
Max Air Duster Speed	100,000 RPM
Max Vacuum Suction	10,000 PA
Rated Voltage	12 Volts
Runtime (Max Speed)	Approx. 20 minutes
Runtime (Min Speed)	Approx. 55 minutes
Filter Type	Stainless Steel Filter
Special Feature	HEPA (implied by "Filtre HEPA" in specs, though the main filter is stainless steel, it might refer to filtration capability)

## 9. WARRANTY AND SUPPORT

WHATOOK is committed to providing high-quality products and excellent customer service.

- **Warranty:** The product comes with a 24-month warranty.
- **Customer Support:** WHATOOK offers 7\*24 hour stand-by support with a 12-hour response time. Lifetime after-sales support is also provided.
- For any inquiries, technical assistance, or warranty claims, please contact WHATOOK customer service through their official channels or the retailer where you purchased the product.



#### **Responsible & Reliable**

- 12-Hour Response
- 7\*24 Hour Stand-by
- 24-Month Warranty
- Lifetime After-sales Support

Figure 10: WHATOOK customer support is available to assist you.

© 2024 WHATOOK. All rights reserved.

For more information, visit the [WHATOOK Store](#).