

[Manuals.plus](#) /

› [Bobtot](#) /

› Bobtot Portable Karaoke Machine User Manual

Bobtot ET29-BT

Bobtot Portable Karaoke Machine User Manual

Model: ET29-BT

INTRODUCTION

The Bobtot Portable Karaoke Machine is a versatile audio device designed for both indoor and outdoor entertainment. It combines a powerful Bluetooth speaker with a wireless microphone, offering multiple connectivity options and customizable sound features. This manual provides detailed instructions to help you get the most out of your device.

WHAT'S IN THE BOX

Upon unboxing your Bobtot Portable Karaoke Machine, please ensure all the following components are present:

- Karaoke machine (Main Speaker Unit)
- Wireless Microphone
- Charging Cord (Type-C cable)
- Auxiliary Cable
- User Manual (this document)

Packing list

- Karaoke machine
- Wireless microphone
- Type-C cable
- AUX cable
- User manual



Figure 1: Included components and approximate dimensions of the Bobtot Portable Karaoke Machine.

SPECIFICATIONS

Product Dimensions	11 x 6 x 6 inches
Item Weight	3 pounds
Model Number	ET29-BT
Power Output	40W
Bluetooth Version	5.3
Waterproof Rating	IPX6
Battery Capacity	8800 mAh

Play Time	Approximately 20 hours (varies with volume and music type)
Connectivity	Bluetooth, AUX, TF Card, USB

SETUP

1. Charging the Device

Before first use, fully charge the karaoke machine and the wireless microphone using the provided Type-C charging cord. The charging port for the speaker is located under a protective flap on the control panel. The microphone also has a USB-C charging port.

2. Powering On/Off

To power on the karaoke machine, press and hold the **Power button** () on the control panel until the indicator lights illuminate. To power off, press and hold the same button.

For the wireless microphone, press and hold its power button until the indicator light turns on. The microphone will automatically pair with the speaker.



Figure 2: The Bobtot Portable Karaoke Machine and its wireless microphone.

3. Connecting Your Device (Bluetooth)

Once powered on, the speaker will automatically enter Bluetooth pairing mode. On your smartphone, tablet, or other Bluetooth-enabled device, search for "Bobbot ET29-BT" in the Bluetooth settings and select it to connect. A voice prompt will confirm successful pairing.

Fast and Stable Connection



Figure 3: Fast and stable connections via Bluetooth 5.3, AUX, USB, and TF Card.

4. Other Connectivity Options

- **AUX Input:** Connect external audio devices using the provided auxiliary cable to the AUX port.
- **TF Card:** Insert a TF (microSD) card with audio files into the TF card slot.
- **USB Playback:** Insert a USB flash drive with audio files into the USB port.



Figure 4: Detailed view of the speaker's input ports for versatile media playback.

OPERATING INSTRUCTIONS

1. Volume Control

Use the + and - buttons on the speaker's control panel to adjust the main volume. The wireless microphone also has its own volume controls.

2. Echo Levels (Karaoke Mode)

The speaker offers three echo levels for karaoke. Short press the **EQ button** (🔊) to cycle through Much Echo, Medium Echo, and No Echo modes. This allows for customization based on your preference or environment.

Three Echo Levels for Karaoke



Figure 5: Adjusting echo levels for karaoke performance.

3. Indoor and Outdoor Modes

The speaker features distinct indoor and outdoor modes to optimize sound output for different environments. Press the **EQ button** to switch to outdoor mode for a louder voice output, suitable for open spaces.



Figure 6: Optimize sound for indoor or outdoor use by switching modes.

4. RGB Ambient Lighting

The speaker features customizable RGB ambient lighting that syncs with your music. Double press the **EQ button** to turn the RGB lights on or off, adding a vibrant atmosphere to your gatherings.

Your browser does not support the video tag. Please update your browser to view this content.

Video 1: Overview of the Bobtot Portable Karaoke Machine, demonstrating its features including RGB lighting and microphone functionality. (Source: Bobtot Direct)

5. Microphone Usage

The wireless microphone connects automatically to the speaker. Use the volume buttons on the microphone to adjust your vocal output independently. The microphone also features a power button and indicator lights.

Your browser does not support the video tag. Please update your browser to view this content.

Video 2: Demonstration of the wireless microphone's features and its use with the Bobtot karaoke machine. (Source: Bobtot Direct)

MAINTENANCE

1. Cleaning

Wipe the speaker and microphone with a soft, dry cloth. For stubborn stains, a slightly damp cloth can be used. Do not use harsh chemicals or abrasive cleaners.

2. Water Resistance (IPX6)

The Bobtot Karaoke Machine is IPX6 water-resistant, meaning it can withstand powerful water jets. It is suitable for use in environments like pool parties or beach outings. However, it is not designed for submersion in water. Ensure all port covers are securely closed before exposing the device to water.

Your browser does not support the video tag. Please update your browser to view this content.

Video 3: Demonstrating the IPX6 waterproof feature of the Bobtot speaker, suitable for outdoor activities. (Source: Bobtot Direct)

3. Storage

Store the device in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on	Low battery; Power button not pressed correctly	Charge the device fully; Press and hold the Power button for 3-5 seconds
Cannot pair via Bluetooth	Device not in pairing mode; Too far from speaker; Interference	Ensure speaker is in pairing mode; Move device closer to speaker; Disconnect other Bluetooth devices
Microphone not working	Microphone not powered on; Not paired; Low battery	Power on microphone; Ensure microphone is paired; Charge microphone
Sound distortion	Volume too high; Audio source issue	Lower the volume; Check audio source connection and quality

WARRANTY AND SUPPORT

For detailed warranty information and further technical support, please refer to the official Bobtot website or contact their customer service. You may also find additional resources in the digital Instructions for Use (IFU) PDF document available online.

Link to Instructions for Use (IFU) (PDF):

<https://manuals.plus/m/c4d919476f3f26ad1ce8dec61536fb58467878b63fb9dc5287882fef7cc45606>

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question