

Cameron Sino CS-RTX750VX

Cameron Sino Replacement Battery User Manual

For Rowenta X-Plorer 75 and 75S Series Robotic Vacuum Cleaners

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Cameron Sino replacement battery, model CS-RTX750VX. This battery is specifically designed to be compatible with various Rowenta X-Plorer 75 and 75S series robotic vacuum cleaners. Please read this manual thoroughly before installation and use.

Compatible Models:

- Rowenta RR7635WH/NS0
- Rowenta RR7647WH/NS0
- Rowenta RR7675WH/NS0
- Rowenta RR7687WH/NS0
- Rowenta RR8567WH/NS0
- Rowenta RR8575WH/NS0
- Rowenta RR8577WH/NS0
- Rowenta RR8585WH/NS0
- Rowenta RR8587WH/NS0
- Rowenta RR8595WH/NS0
- Rowenta RR8597WH/NS0
- Rowenta X-Plorer 75
- Rowenta X-Plorer 75S


2. SAFETY INFORMATION

Please observe the following safety precautions to prevent damage to the battery, device, or personal injury:

- **Warranty Void:** The warranty is void if the product label is removed.
- **Do Not Disassemble:** Do not attempt to disassemble, open, or service the battery pack.
- **Proper Replacement:** Replace only with the battery pack designated for your specific product model.
- **Avoid Physical Damage:** Do not crush, puncture, or short external contacts.

- **Temperature Control:** Do not store above 60°C (140°F).
- **Disposal:** Do not dispose of in fire or water.

3. PRODUCT OVERVIEW

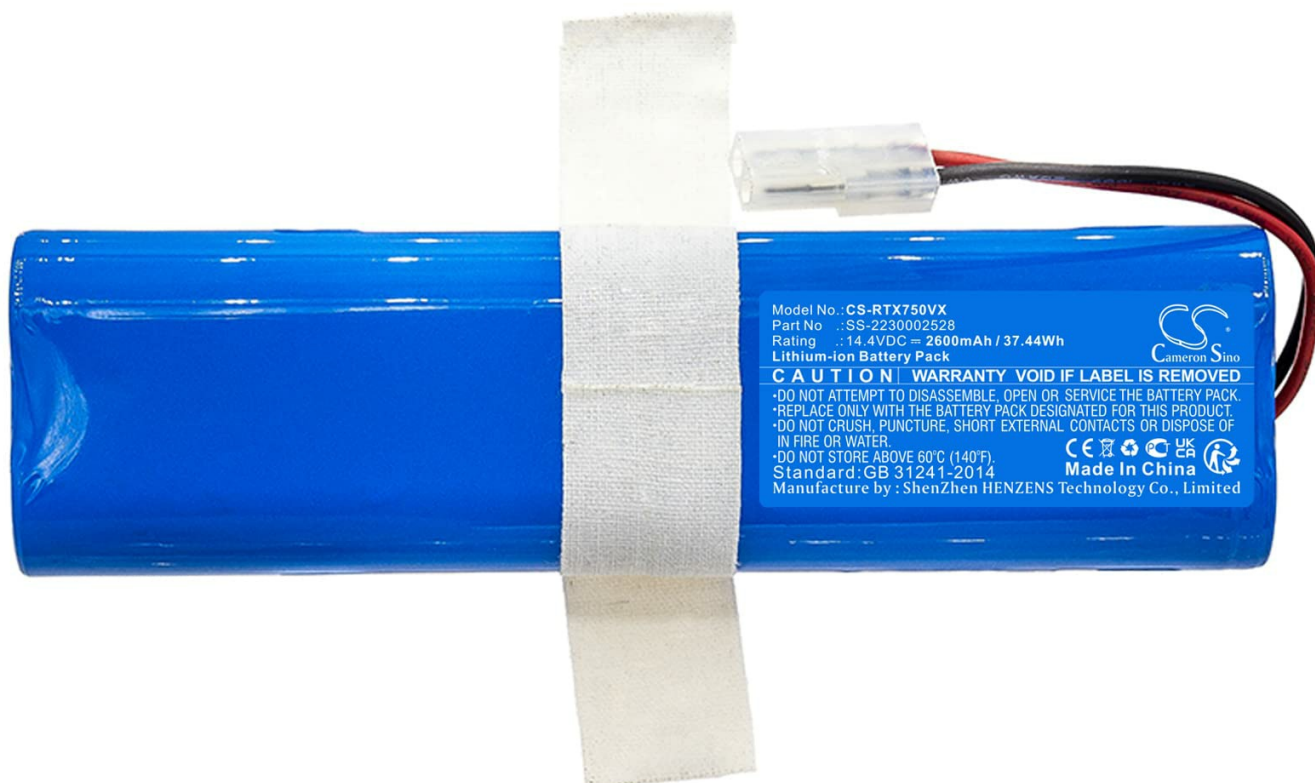

A blue cylindrical battery pack with a white connector cable and a white fabric strap. The label on the battery shows model number CS-RTX750VX, part number SS-2230002528, and specifications 14.4VDC, 2600mAh / 37.44Wh.

The Cameron Sino replacement battery is a high-quality Lithium-ion battery designed to meet the exact specifications of your original Rowenta vacuum cleaner battery. It features a new, fully decoded chip for seamless compatibility and includes multiple protection mechanisms for safe and durable use.

4. INSTALLATION

Installing the replacement battery is a straightforward process. For detailed visual guidance, numerous installation videos are available online for your specific vacuum cleaner model.

General Installation Steps:

1. **Power Off:** Ensure your vacuum cleaner is completely powered off and disconnected from any charging source.
2. **Locate Battery Compartment:** Refer to your vacuum cleaner's original manual to locate and open the battery compartment. This usually involves removing a cover or screws.
3. **Remove Old Battery:** Carefully disconnect the old battery's connector and remove it from the compartment.
4. **Insert New Battery:** Place the new Cameron Sino battery into the compartment, ensuring it fits correctly.
5. **Connect Securely:** Connect the battery's plug firmly and properly to the device's port. A secure connection is crucial for proper operation.
6. **Close Compartment:** Close the battery compartment securely, replacing any covers or screws.

After installation, it is recommended to fully charge the battery before initial use.

5. CHARGING AND USAGE

Initial Charging:

- For optimal performance, a new battery will achieve its best capacity after 2 or 3 complete charge and discharge cycles.
- Fully charge the battery before its first use.

General Usage Guidelines:

- Always use the original or a certified compatible charger provided with your vacuum cleaner.
- Avoid using low-quality third-party adapter chargers, as this can shorten the battery's lifespan and potentially damage the device.
- Monitor the vacuum cleaner's indicator lights for charging status.

6. MAINTENANCE AND STORAGE

Proper care and storage can significantly extend the life of your battery.

- **Temperature:** Store the battery in a cool, dry place. **Do not store above 60°C (140°F)** to prevent damage and ensure safety.
- **Charge Level for Storage:** If storing the battery for an extended period, charge it to approximately 50-60% capacity. Avoid storing a fully charged or completely depleted battery.
- **Regular Use:** For best results, use and recharge the battery regularly.
- **Cleaning:** Keep battery contacts clean and free from dust or debris.

7. TROUBLESHOOTING

If you encounter issues with your battery, consider the following common solutions:

- **Battery Not Charging:**
 - Ensure the charger is properly connected to both the wall outlet and the vacuum cleaner.
 - Verify that the battery connector is securely seated in the vacuum cleaner.
 - Check if the charging adapter is functioning correctly (try with another device if possible).
- **Short Operating Time:**
 - Perform 2-3 full charge and discharge cycles to optimize battery performance.

- Ensure the battery is fully charged before each use.
- Check for any blockages in the vacuum cleaner that might cause increased power consumption.

- **Vacuum Cleaner Not Powering On:**

- Confirm the battery is correctly installed and fully charged.
- Ensure the vacuum cleaner's power switch is in the 'ON' position.

If problems persist after following these steps, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Model Number	CS-RTX750VX
Part Number	SS-2230002528
Battery Type	Lithium-ion (Li-ion)
Voltage	14.4V DC
Capacity	2600mAh / 37.44Wh
Dimensions	132.38 x 36.78 x 21.10mm
Weight	190.0g
Reusability	Rechargeable
Manufacturer	CS Cameron Sino (ShenZhen HENZENS Technology Co., Limited)
Certifications	ISO9001, RoHS, CE

9. WARRANTY AND SUPPORT

Warranty Information:

- This Cameron Sino battery comes with a **12-month warranty** from the date of purchase.
- A **30-day money-back guarantee** is also provided.
- The warranty covers manufacturing defects and ensures the battery meets specified performance standards.
- The warranty is void if the product label is removed or if the battery has been disassembled or improperly used.

Customer Support:

For any questions, concerns, or issues regarding your Cameron Sino battery, please contact our customer support team. We aim to provide an email reply within 24 hours.

Please refer to your purchase documentation for specific contact details or visit the seller's support page.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question