
[Manuals.plus](#) /

› [Indesit](#) /

› Indesit Innex 9kg 1400 RPM Front Load Washing Machine User Manual

Indesit BWE91485XSEUN

Indesit Innex 9kg 1400 RPM Front Load Washing Machine

USER MANUAL

Introduction

This user manual provides essential information for the safe and efficient operation of your new Indesit Innex 9kg 1400 RPM Front Load Washing Machine, model BWE91485XSEUN. Please read this manual thoroughly before using the appliance to ensure proper installation, operation, and maintenance. Keep this manual for future reference.

Product Overview



Figure 1: Front view of the Indesit Innex 9kg 1400 RPM Front Load Washing Machine. This image displays the silver-colored appliance with its central loading door, control panel at the top, and detergent dispenser drawer.

The Indesit Innex washing machine is designed for efficient and convenient laundry care. It features a 9 kg capacity, suitable for medium to large households, and a maximum spin speed of 1400 RPM for effective water extraction. The appliance is equipped with an intuitive control panel, including a program selector knob and LED display, making cycle selection straightforward. Its front-load design ensures easy loading and unloading of garments.

Setup and Installation

1. Unpacking

- Carefully remove all packaging materials, including the polystyrene base and any protective film.
- Remove the transport bolts located at the rear of the machine. These bolts secure the drum during transit and must be removed before operation to prevent damage. Keep the bolts for future transport if needed.

2. Positioning and Leveling

- Place the washing machine on a flat, stable floor, away from direct sunlight or extreme temperatures.
- Adjust the adjustable feet at the bottom of the machine to ensure it is perfectly level. Use a spirit level to verify. Proper leveling prevents excessive vibration and noise during operation.

3. Water Connection

- Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure the connection is tight to prevent leaks.
- Position the drain hose into a standpipe or secure it to the edge of a sink, ensuring it is not kinked and is at an appropriate height (between 65 cm and 100 cm from the floor).

4. Electrical Connection

- Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications on the appliance's rating plate.
- Do not use extension cords or multiple adapters.

5. First Use

- Before washing clothes, run an empty cycle with a small amount of detergent to clean the drum and remove any manufacturing residues. Select a short, high-temperature program.

Operating Instructions

1. Control Panel Overview



Figure 2: Detailed view of the control panel, showing the detergent dispenser, program selector knob, and LED display.

- **Detergent Dispenser Drawer:** Located on the top left, for pre-wash, main wash detergent, and fabric softener.
- **Program Selector Knob:** Central knob used to select the desired wash program.
- **Push & Go Button:** A dedicated button for a quick, everyday wash cycle.
- **Function Buttons:** Buttons for additional options like spin speed, temperature, or delay start.
- **LED Display:** Shows program status, remaining time, and selected options.
- **Start/Pause Button:** To start or pause a wash cycle.

2. Preparing Laundry

- Sort laundry by fabric type, color, and degree of soiling.
- Check garment care labels for washing instructions.
- Empty pockets and close zippers or buttons to prevent damage.

3. Loading Laundry

- Open the washing machine door.
- Load laundry loosely into the drum, ensuring not to overload. The maximum capacity is 9 kg.
- Close the door firmly until it clicks.

4. Adding Detergent and Additives

- Pull out the detergent dispenser drawer.
- Add the appropriate amount of detergent to the main wash compartment (usually marked with 'II' or 'Main Wash').
- If using fabric softener, pour it into the designated compartment (usually marked with a flower symbol or 'Softener') up to the maximum fill line.
- Close the detergent drawer gently.

5. Selecting a Program and Starting the Wash

- Turn the program selector knob to choose the desired wash program (e.g., Cotton, Synthetics, Delicates, Quick Wash). The LED display will show the default settings for the selected program.
- If desired, press the function buttons to adjust options such as spin speed (up to 1400 RPM) or temperature.
- Press the Start/Pause button to begin the wash cycle. The machine will automatically lock the door.
- To use the **Push & Go** function, simply load the laundry, add detergent, and press the Push & Go button. This initiates a 45-minute cycle at 30°C, suitable for mixed daily loads.

Maintenance and Care

Regular maintenance ensures the longevity and optimal performance of your washing machine.

1. Cleaning the Detergent Dispenser Drawer

- Pull out the drawer completely.
- Rinse it under running water to remove any detergent or softener residue.
- Clean the housing of the drawer with a brush.
- Reinsert the drawer.

2. Cleaning the Pump Filter

- Locate the filter access panel at the bottom front of the machine.
- Place a shallow container beneath the filter to catch any residual water.
- Slowly unscrew the filter counter-clockwise and allow water to drain.

- Remove any lint, coins, or foreign objects from the filter and its housing.
- Clean the filter under running water and screw it back in tightly.

3. Cleaning the Drum and Door Seal

- Wipe the rubber door seal after each wash to prevent mold and mildew buildup.
- Periodically run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent or washing machine cleaner) to clean the drum.

4. External Cleaning

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

Troubleshooting

Before contacting customer service, please refer to the following common issues and their potential solutions.

Problem	Possible Cause	Solution
Machine does not start.	No power supply; Door not closed properly; Program not selected.	Check power plug and fuse; Ensure door is firmly closed; Select a program and press Start/Pause.
Excessive vibration/noise.	Transport bolts not removed; Machine not level; Uneven load.	Remove transport bolts; Adjust leveling feet; Redistribute laundry evenly in the drum.
Water not draining.	Drain hose kinked or blocked; Pump filter clogged.	Check and straighten drain hose; Clean the pump filter.
Detergent residue in dispenser.	Insufficient water pressure; Detergent clumping; Dispenser dirty.	Check water supply; Use less detergent or dissolve it; Clean the detergent dispenser.

Specifications

Feature	Detail
Brand	Indesit
Model Name	Innex Series
Product Model Number	BWE91485XSEUN
Capacity	9 Kilograms
Maximum Spin Speed	1400 RPM
Load Type	Front Load
Color	Silver
Dimensions (W x D x H)	60 x 60 x 80 cm
Weight	64 kg

Feature	Detail
Control Type	Push-button, Rotary Knob
Display Type	LED
Standard Cycles	8
Special Features	Quick Wash (Push & Go)

Warranty and Support

Your Indesit washing machine comes with a manufacturer's warranty. Please refer to the warranty card included with your appliance for specific terms and conditions, including coverage period and what is covered. Keep your proof of purchase for warranty claims.

For technical assistance, spare parts, or to schedule a service appointment, please contact Indesit customer support. Contact details can typically be found on the Indesit official website or in the documentation provided with your appliance.

