

bimar VC77

Bimar VC77 Tower Fan 80 cm with Timer User Manual

Model: VC77

1. INTRODUCTION

Thank you for choosing the Bimar VC77 Tower Fan. This manual provides important information regarding the safe operation, installation, maintenance, and troubleshooting of your new fan. Please read these instructions carefully before use and keep them for future reference.

The Bimar VC77 is an 80 cm tower fan designed for domestic indoor ventilation. It features 3 speed settings, a 60-minute timer, automatic right/left oscillation, and adjustable up/down tilt, powered by a 45W induction motor.

2. SAFETY INSTRUCTIONS

WARNING: Failure to follow these safety instructions may result in electric shock, fire, or serious injury.

- This appliance is intended for domestic indoor use only. Do not use it for any other purpose. Any other use is considered improper and dangerous.
- Ensure the power outlet is easily accessible to quickly disconnect the plug in an emergency.
- Position the fan away from heat sources (open flames, gas stoves, etc.) and liquid containers to prevent water splashes.
- Do not insert any tools or fingers between the protective grille meshes of the fan.
- Do not operate the fan with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Always unplug the fan before cleaning or when not in use for extended periods.
- Keep the appliance out of reach of children and pets.
- Do not cover the fan during operation.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Bimar VC77 Tower Fan.



Image 3.1: Front view of the Bimar VC77 Tower Fan, showing the main body, base, and control panel on top.



Image 3.2: Side view of the Bimar VC77 Tower Fan, illustrating its compact design and the handle for easy transport.



Image 3.3: Detailed diagram of the fan's top control panel, indicating the knobs for speed selection, timer setting, and oscillation function.

Key Components:

- **Control Panel:** Located on the top of the fan, featuring selector knobs for various functions.
- **Air Outlet Grille:** Front grille through which air is expelled.
- **Base:** Provides stability for the tower fan.
- **Integrated Handle:** For easy transportation of the unit.
- **Power Cord:** For connecting to an electrical outlet.

4. SETUP AND INSTALLATION

Follow these steps to set up your Bimar VC77 Tower Fan:

1. **Unpacking:** Carefully remove the fan from its packaging. Retain the packaging for storage or if the product needs to be returned.
2. **Base Assembly (if required):** Some models may require simple assembly of the base. Align the base parts and secure them according to the diagrams in the separate installation manual (if provided). Ensure the base is firmly attached for stability.
3. **Placement:** Place the fan on a flat, stable surface. Ensure there is adequate space around the fan for proper air circulation and oscillation. Avoid placing it near curtains or other objects that could obstruct airflow or get caught in the fan.
4. **Power Connection:** Plug the power cord into a standard 220-240V~ 50Hz electrical outlet. Ensure the outlet is easily accessible.

5. OPERATING INSTRUCTIONS

The Bimar VC77 Tower Fan is controlled via selector knobs located on the top panel.

1. **Power On/Off:** Turn the speed selector knob to one of the speed settings (Min, Med, Max) to turn the fan on. Turn it to '0' to turn the fan off.

2. **Adjusting Fan Speed:** Rotate the speed selector knob to choose your desired airflow intensity:
 - **Min:** Low speed for gentle air circulation.
 - **Med:** Medium speed for moderate airflow.
 - **Max:** High speed for maximum cooling.
3. **Automatic Oscillation:** To activate the automatic right/left oscillation, turn the oscillation knob to the 'ON' position. The fan will sweep air across a wider area. Turn the knob to 'OFF' to stop oscillation.
4. **Adjustable Tilt:** The fan head can be manually tilted up or down to direct the airflow vertically. Gently push or pull the top section of the fan to adjust the tilt angle.
5. **Timer Function:** Use the timer knob to set the fan to operate for a specific duration, up to 60 minutes. Rotate the timer knob clockwise to the desired time setting. The fan will automatically turn off once the set time has elapsed. To bypass the timer, ensure the timer knob is set to the 'ON' position (usually indicated by a continuous operation symbol or '0' if it's a countdown timer).

6. MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and efficient operation of your fan.

- **Cleaning:**
 - a. Always unplug the fan from the power outlet before cleaning.
 - b. Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the plastic.
 - c. For dust accumulation on the grilles, use a vacuum cleaner with a brush attachment or compressed air to gently remove dust. Do not attempt to disassemble the fan to clean internal components.
 - d. Ensure the fan is completely dry before plugging it back in and operating it.
- **Storage:** When not in use for extended periods, store the fan in its original packaging or cover it to protect it from dust. Store in a cool, dry place.

7. TROUBLESHOOTING

If you encounter issues with your Bimar VC77 Tower Fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	Not plugged in. Power outlet malfunction. Speed selector knob is off.	Ensure the power cord is securely plugged into a working outlet. Test the outlet with another appliance. Turn the speed selector knob to Min, Med, or Max.
Weak or no airflow.	Fan speed set too low. Air inlet/outlet grilles are blocked.	Increase the fan speed. Ensure grilles are clear of dust and obstructions.

Problem	Possible Cause	Solution
Fan is noisy during operation.	Fan not on a stable surface. Internal components may be loose or damaged. Timer mechanism noise (as noted in some reviews).	Place the fan on a firm, level surface. If noise persists and is unusual, discontinue use and contact customer support. Some mechanical timer noise is normal; if excessive, contact support.
Oscillation not working.	Oscillation knob is off.	Ensure the oscillation knob is set to the 'ON' position.

If the problem persists after trying these solutions, please contact Bimar customer support.

8. SPECIFICATIONS

Feature	Detail
Model Name	VC77
Brand	bimar
Type	Tower Fan (Column Fan)
Height	81.5 cm
Dimensions (DxWxH)	26.8P x 26.8l x 81.5H cm
Weight	2.4 kg
Power Source	Corded Electric
Voltage	220-240V~ 50Hz
Wattage	45W
Motor Type	Induction Motor
Number of Speeds	3 (Min / Med / Max)
Timer	Up to 60 minutes
Oscillation	Automatic Right/Left
Tilt Adjustment	Adjustable Up/Down
Control Method	Button/Knob
Material	Plastic
Noise Level	45 Decibels
Indoor/Outdoor Use	Indoor

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or contact the

retailer. Bimar products are designed for reliability and performance.

If you require technical assistance, have questions about your product, or need to report a fault, please contact Bimar customer support. You may also find additional resources, including detailed user and installation manuals, on the manufacturer's website or through the following links:

- [User Manual \(PDF\)](#)
- [Installation Manual \(PDF\)](#)
- [Instructions for Use \(PDF\)](#)

Please have your model number (VC77) and purchase details ready when contacting support.