



Manuals.plus /

› **Bosch** /

› Bosch Serie 4 PWP611BB5E Induction Hob User Manual

## Bosch PWP611BB5E

# Bosch Serie 4 PWP611BB5E Induction Hob User Manual

MODEL: PWP611BB5E

## Introduction

---

This user manual provides essential information for the safe and efficient operation of your new Bosch Serie 4 PWP611BB5E induction hob. Please read these instructions carefully before installation and use, and keep them for future reference. This appliance is designed for domestic use only.

The Bosch Serie 4 PWP611BB5E is a 60 cm built-in induction hob featuring 4 cooking zones, touch controls, and a sleek black glass-ceramic surface. It offers precise temperature control and efficient cooking.

## Safety Information

---


Always adhere to the following safety guidelines to prevent personal injury or damage to the appliance.

- Ensure the appliance is installed by a qualified professional in accordance with local regulations.
- Do not operate the hob if it is damaged. Contact authorized service personnel.
- Keep children away from the appliance during operation as surfaces can become hot.
- Never leave cooking unattended, especially when cooking with fats or oils, as they can ignite.
- Do not place metallic objects such as knives, forks, spoons, or lids on the hob surface as they can become hot.
- Clean the hob regularly to prevent grease buildup, which can be a fire hazard.
- Only use induction-compatible cookware.

## Setup and Installation

---

Proper installation is crucial for the safe and efficient operation of your induction hob. Refer to the diagram below for precise measurements and clearance requirements.

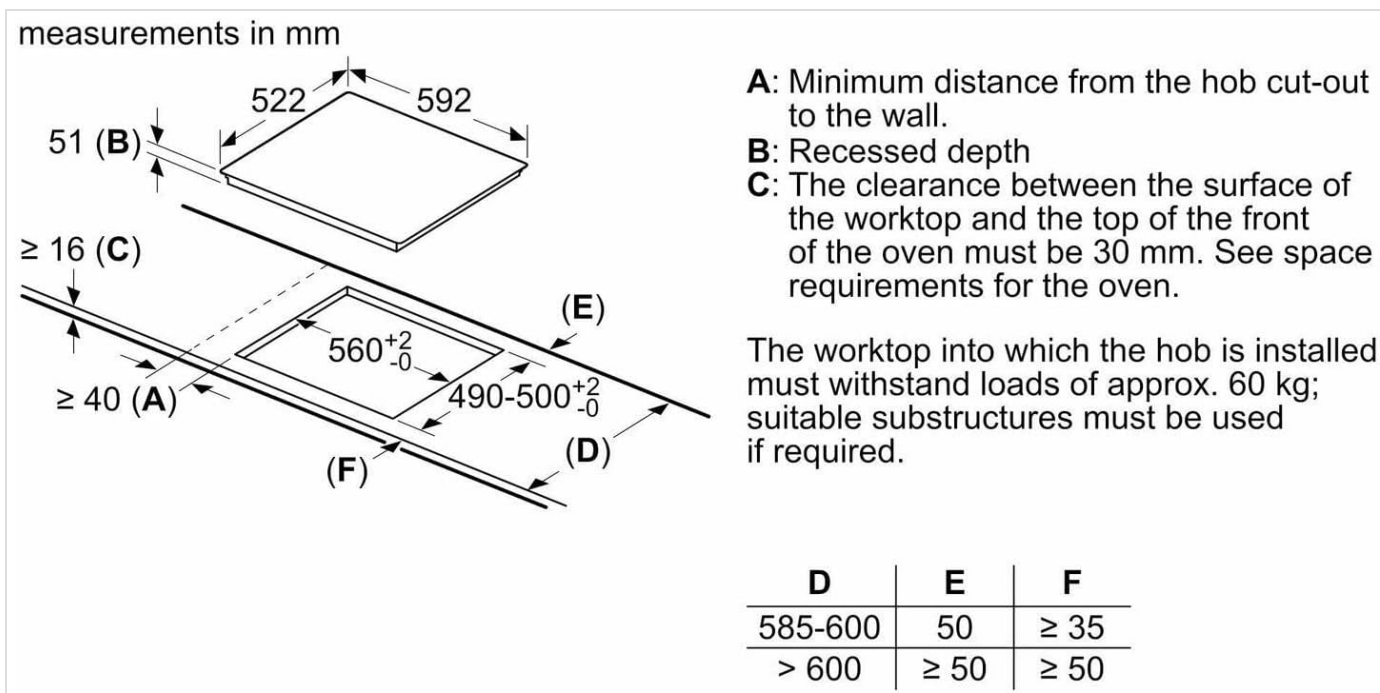


**Figure 1: Installation Dimensions and Clearances.** This diagram illustrates the necessary cut-out dimensions for the countertop (560x490 mm) and the overall hob dimensions (592x522x51 mm). It also specifies minimum distances from the wall (A: ≥ 40 mm), recessed depth (B: 51 mm), and clearance between the hob surface and oven top (C: ≥ 16 mm). The worktop must withstand loads of approximately 60 kg.

The hob requires a cut-out of 560 mm (width) x 490 mm (depth) in the countertop. Ensure adequate ventilation space around the appliance. The worktop material must be heat-resistant and capable of supporting the hob's weight plus any cookware.

For electrical connection, ensure the power supply matches the specifications listed in the technical data section and that the installation is performed by a qualified electrician.

## Operating Instructions

Your Bosch induction hob features intuitive touch controls for easy operation.

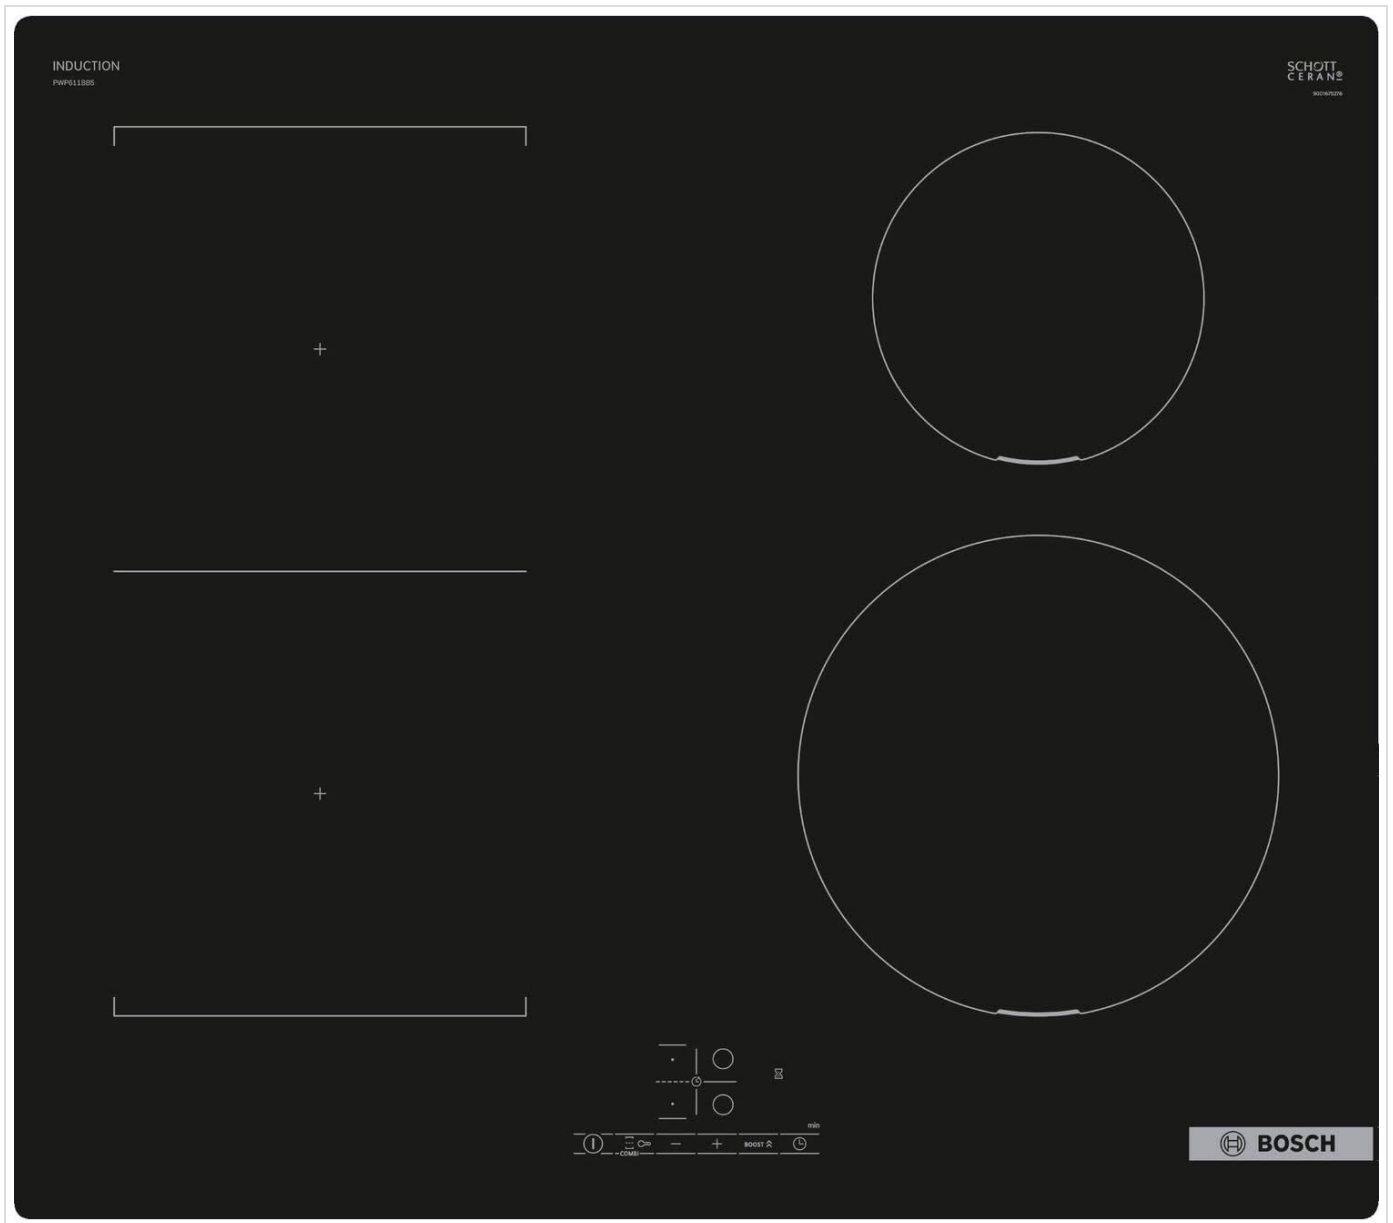

**Figure 2: Bosch PWP611BB5E Induction Hob Overview.** This image shows the full surface of the hob, highlighting the two circular cooking zones on the right and two rectangular zones on the left, along with the central touch control panel.



**Figure 3: Touch Control Panel.** A detailed view of the touch controls, including the power button, individual zone selection, '+' and '-' buttons for power adjustment, and the timer function.

## Turning On/Off

1. To turn on the hob, touch the main power symbol ( ). The indicator lights will illuminate.
2. To turn off, touch the main power symbol again.

## Selecting a Cooking Zone and Adjusting Power

1. Place an induction-compatible pan on the desired cooking zone.
2. Touch the corresponding cooking zone selection symbol on the control panel.
3. Use the '+' or '-' symbols to adjust the power level from 1 (low) to 9 (high).
4. The hob features a Boost function for rapid heating. Touch the 'Boost' symbol after selecting a zone to activate.

## Timer Function

The integrated timer allows you to set a cooking duration for individual zones or as a minute minder.

1. To set a cooking zone timer, select the zone, then touch the timer symbol ( ). Use '+' or '-' to set the desired time. The zone will switch off automatically when the time expires.
2. To use as a minute minder, touch the timer symbol without selecting a zone.

## Maintenance and Cleaning

---

Regular cleaning and maintenance will ensure the longevity and optimal performance of your induction hob.

- Always switch off the hob and allow it to cool completely before cleaning.
- For light soiling, wipe the glass-ceramic surface with a damp cloth and a small amount of mild dish soap.
- For stubborn stains or burnt-on food, use a specialized hob scraper and a ceramic hob cleaner. Follow the cleaner's instructions.
- Avoid abrasive cleaners, scouring pads, or harsh chemicals as they can scratch or damage the surface.
- Clean the control panel with a soft, damp cloth. Ensure no moisture enters the control area.

## Troubleshooting

---

If you encounter issues with your hob, consult the following table before contacting service.

Problem	Possible Cause	Solution
Hob does not turn on.	No power supply; child lock activated.	Check power connection; deactivate child lock (refer to full manual for specific steps).
Cooking zone not heating.	Incorrect cookware; pan not centered; zone not selected.	Use induction-compatible cookware; center pan; select desired zone.
Display shows 'E' or error code.	Internal fault; overheating.	Turn off hob, wait a few minutes, then restart. If error persists, contact service.
Hob makes noise during operation.	Normal operation (fan noise, pan vibrations).	This is normal for induction hobs and not a fault.

For more detailed troubleshooting or persistent issues, please refer to the comprehensive online manual or contact Bosch customer service.

## Specifications

---

Key technical specifications for the Bosch Serie 4 PWP611BB5E induction hob:

Feature	Detail
Product Color	Black
Appliance Placement	Built-in
Hob Width Size	60 cm
Hob Type	Induction Hob
Top Surface Type	Glass-ceramic
Total Number of Cooking Zones	4
Control Type	Touch
Control Position	Front
Aggregated Power (Electric)	4600 W
AC Input Voltage	220 - 240 V
AC Input Frequency	50 - 60 Hz
Product Dimensions (W x D x H)	592 x 522 x 51 mm
Weight	10.3 kg
Timer	Yes

## Warranty and Support

---

Your Bosch Serie 4 PWP611BB5E induction hob comes with a manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation provided with your appliance or visit the official Bosch website.

In case of technical issues, service requests, or questions not covered in this manual, please contact Bosch customer support. You can find contact information on the official Bosch website or through your local retailer.

For returns or defects within 30 days of receipt, please consult Amazon's return policy. For specific information on purchases made via Marketplace, refer to Amazon's Marketplace help page.