

Zassenhaus 043037

Zassenhaus Kingston Steel Automatic Electric Coffee Grinder User Manual

Model: 043037

1. INTRODUCTION

Thank you for choosing the Zassenhaus Kingston Steel Automatic Electric Coffee Grinder. This appliance is designed to provide freshly ground coffee for optimal aroma and taste. Please read this manual carefully before using the appliance for the first time to ensure safe operation and to achieve the best results. Keep this manual for future reference.

Important Safety Instructions

- Always ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Do not immerse the appliance, power cord, or plug in water or any other liquid.
- Unplug the appliance from the power outlet when not in use, before cleaning, and before assembling or disassembling parts.
- Keep hands and utensils away from the grinding burrs during operation to prevent injury.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use the appliance only for its intended purpose: grinding whole roasted coffee beans.

2. PRODUCT OVERVIEW

The Zassenhaus Kingston Steel Automatic Electric Coffee Grinder is equipped with a hardened steel burr grinder for uniform results and an aroma protection lid to preserve the freshness of your coffee beans.

Key Components:

- **Bean Container:** Holds up to 180g of whole coffee beans, with an aroma protection lid.
- **Grind Level Selector:** Dial to choose from 17 grind settings (fine to coarse).
- **Cup Quantity Selector:** Dial to select grinding for 2 to 12 cups.
- **Start/Stop Button:** Initiates and stops the grinding process.
- **Ground Coffee Container:** Collects the freshly ground coffee.
- **Cleaning Brush:** Included for maintenance.



Figure 1: Front view of the Zassenhaus Kingston Steel Automatic Electric Coffee Grinder, showing the bean container, grind selector, and cup quantity selector.

3. SETUP

1. **Unpack:** Carefully remove all packaging materials and ensure all components are present.
2. **Initial Cleaning:** Before first use, clean the bean container, ground coffee container, and the removable upper grinding disc with a damp cloth. Ensure all parts are completely dry before assembly. Do not wash the main unit under running water.
3. **Placement:** Place the grinder on a stable, flat, and dry surface. Ensure there is adequate ventilation around the appliance.
4. **Assemble:** Ensure the ground coffee container is correctly inserted into the base of the grinder. Place the bean container onto the main unit and secure its lid.



Figure 2: The coffee grinder in an operational setting, demonstrating the bean container filled with coffee beans and the included cleaning brush.

4. OPERATING INSTRUCTIONS

1. **Fill Bean Container:** Open the aroma protection lid and fill the bean container with whole roasted coffee beans. Do not overfill; the maximum capacity is 180g. Close the lid securely.
2. **Select Grind Level:** Turn the grind level selector dial (labeled 'FEIN' for fine and 'GROB' for coarse) to your desired setting. There are 17 distinct settings available. Finer settings are suitable for espresso,

while coarser settings are ideal for French press or drip coffee.

3. **Select Cup Quantity:** Turn the cup quantity selector dial to choose the number of cups you wish to brew (from 2 to 12 cups). The grinder will automatically grind the appropriate amount of coffee for your selection.
4. **Start Grinding:** Plug the appliance into a suitable power outlet. Press the Start/Stop button to begin the grinding process.
5. **Automatic Stop:** The grinder will automatically stop once the selected quantity of coffee has been ground.
6. **Remove Ground Coffee:** Carefully remove the ground coffee container from the appliance. The freshly ground coffee is now ready for brewing.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your coffee grinder.

1. **Unplug:** Always unplug the appliance from the power outlet before cleaning.
2. **Ground Coffee Container:** Empty and wash the ground coffee container with warm, soapy water after each use. Rinse thoroughly and dry completely.
3. **Bean Container:** If necessary, wipe the inside of the bean container with a dry or slightly damp cloth. Ensure no moisture enters the grinding mechanism.
4. **Grinding Burrs:** The upper grinding disc is removable for easy cleaning. Turn the grind level selector to the coarsest setting, then carefully lift out the upper burr. Use the provided cleaning brush to remove any residual coffee grounds from both burrs and the grinding chamber.
5. **Exterior:** Wipe the exterior of the grinder with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
6. **Do Not Immerse:** Never immerse the main unit of the grinder in water or any other liquid.

6. TROUBLESHOOTING

- **Grinder does not start:**
 - Ensure the power cord is securely plugged into a working outlet.
 - Check that the bean container lid is properly closed and the ground coffee container is correctly inserted.
 - Verify that the cup quantity selector is set to a valid number (2-12).
- **Coffee is not grinding or grinding poorly:**
 - Check if the bean container is empty.
 - The grinding burrs might be clogged. Unplug the unit and clean the burrs as described in the Maintenance section.
 - Ensure only whole, roasted coffee beans are used. Do not use instant coffee or other substances.
- **Appliance stops during operation:**
 - This is normal if the selected cup quantity has been reached (automatic stop).
 - If it stops prematurely, the motor might be overheating. Unplug the appliance and let it cool down for at least 30 minutes before attempting to use it again.

7. SPECIFICATIONS

Feature	Specification
Brand	Zassenhaus
Model Number	043037
Color	Black
Product Dimensions (L x W x H)	19 x 13.5 x 21 cm
Item Weight	1 Kilogram
Bean Container Capacity	180 Grams
Power	150 Watts
Voltage	220-240 Volts
Material	Plastic (body), Hardened Steel (burr grinder)
Grind Settings	17 levels (fine to coarse)
Cup Selection	2-12 cups

8. WARRANTY AND SUPPORT

Zassenhaus products are manufactured with high-quality materials and undergo strict quality control. Please retain your proof of purchase for any warranty claims. For specific warranty terms and conditions, or if you require technical support, please refer to the warranty card included with your product or visit the official Zassenhaus website. Contact information for customer service can typically be found on the product packaging or the manufacturer's website.