

[Manuals.plus](#) /

› [WESTTREE](#) /

› WESTTREE X26A Camping Fan User Manual

## WESTTREE X26A

# WESTTREE X26A Camping Fan User Manual

Model: X26A Yellow

## 1. INTRODUCTION

Thank you for choosing the WESTTREE X26A Camping Fan. This versatile device combines a powerful fan with an LED lantern and a convenient power bank function, making it ideal for camping, outdoor activities, power outages, and everyday use. This manual provides detailed instructions for safe and efficient operation, maintenance, and troubleshooting.

## 2. SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the fan and retain this manual for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the fan in water or expose it to heavy rain.
- Keep out of reach of children and pets.
- Do not disassemble, repair, or modify the fan yourself. Contact qualified personnel for service.
- Use only the provided Type-C charging cable and a compatible 5V3A power adapter for charging.
- Avoid placing fingers or foreign objects into the fan blades while operating.
- Do not block the air intake or outlet during operation.
- Store the fan in a cool, dry place when not in use.

## 3. PACKAGE CONTENTS

Please check the package contents upon unboxing:

- WESTTREE X26A Camping Fan
- USB Type-C Fast Charging Cable
- User Manual (this document)

## 4. PRODUCT OVERVIEW

Familiarize yourself with the main components and features of your WESTTREE X26A Camping Fan.



Figure 1: Front view of the WESTTREE X26A Camping Fan, highlighting the control panel and USB charging capability.

- **Fan Blades:** Dual blade design for powerful airflow.
- **Control Panel:** Located at the base, includes fan speed knob, light buttons, and power indicators.
- **LED Lanterns:** Integrated lights around the fan grille.
- **Pivoting Head:** Allows 270° vertical adjustment of the fan.

- **Integrated Hook:** Foldable hook for hanging the fan in tents or other elevated positions.
- **USB Type-C Input Port:** For charging the fan's internal battery.
- **USB Output Port:** For using the fan as a power bank to charge other devices.



Figure 2: Detail of the integrated hanging hook for versatile placement.

## 5. SETUP

### 5.1 Initial Charging

Before first use, fully charge the fan's internal 20000mAh battery.

1. Connect the provided USB Type-C charging cable to the fan's Type-C input port.
2. Connect the other end of the cable to a 5V3A compatible USB power adapter (not included) or a power source.

3. The power indicator lights on the control panel will illuminate to show charging progress. All lights will be solid when fully charged.
4. A full charge typically takes approximately 6 hours with a 5V3A input.

## **6. OPERATING INSTRUCTIONS**

### **6.1 Fan Operation**

The fan features stepless speed regulation, allowing precise control over airflow.

1. To turn the fan ON, rotate the central knob clockwise from the OFF position.
2. Continue rotating the knob clockwise to gradually increase the fan speed. The fan offers 4 distinct speed levels.
3. To decrease the fan speed, rotate the knob counter-clockwise.
4. To turn the fan OFF, rotate the knob counter-clockwise until it clicks into the OFF position.

# No Noise & Double Blades

Quiet ( $\leq 20\text{dB}$ ) fans for bedroom, enjoy coolness



Figure 3: The fan's brushless motor technology ensures quiet operation, suitable for bedrooms.

## 6.2 LED Lantern Operation

The integrated LED lantern provides illumination with adjustable brightness and color temperatures.

1. Press the light button (usually marked with a lightbulb icon) on the control panel to turn the LED lantern ON.
2. Press the light button repeatedly to cycle through 3 brightness settings.
3. To change the light color temperature (warm or white), press the dedicated color temperature button (if available, otherwise it might cycle automatically).
4. To turn the LED lantern OFF, continue pressing the light button until the lights turn off.

# 3 Level Brightness Camping Fan

Come with 2 color temperatures warm and white Light



Figure 4: The 3-level brightness LED lantern provides ample lighting for various situations, including inside a tent.

## 6.3 Power Bank Function

The fan can serve as an emergency power source for your electronic devices.

1. Locate the USB output port on the fan's base.
2. Connect your device's charging cable to the USB output port.
3. The fan's internal battery will begin charging your device.

# Faster Charge & Emergency Discharge



Timer Setting & Power Indicator Display



Figure 5: The fan's emergency discharge function allows charging of other devices like smartphones.

## 6.4 Pivoting Head and Hanging Function

Adjust the fan's direction and placement for optimal comfort.

- **Pivoting Head:** Manually adjust the fan head up or down by up to 270° to direct airflow precisely where needed.
- **Hanging Function:** Extend the integrated hook from the top of the fan to hang it from tent poles, branches, or other suitable structures.



Figure 6: The 270° pivoting head allows for versatile airflow direction.

## 7. MAINTENANCE AND CARE

Proper care will ensure the longevity and optimal performance of your fan.

- **Cleaning:** Wipe the exterior of the fan with a soft, dry cloth. Do not use abrasive cleaners or immerse the fan in water. Ensure the fan is turned off and unplugged before cleaning.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure the battery is partially charged (around 50%) before storage to prolong battery life.

## 8. TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan fully using the provided Type-C cable.
Weak airflow.	Fan speed is too low.	Increase fan speed using the control knob.
	Air intake/outlet is blocked.	Clear any obstructions from the fan's grilles.
LED lantern does not turn on.	Battery is depleted.	Charge the fan fully.
	Light mode is off or too dim.	Press the light button to cycle through brightness settings.

## 9. SPECIFICATIONS

Feature	Detail
Brand	WESTTREE
Model Name	X26A Yellow
Power Source	Battery Powered (Rechargeable)
Battery Capacity	20000mAh Lithium Metal
Fan Speeds	4 (Stepless regulation)
Noise Level	<28dB
LED Lantern	3 Brightness Settings, 2 Color Temperatures (Warm/White)
Pivot Angle	270°
Product Dimensions	1"D x 1"W x 1"H
Item Weight	3.32 pounds
Connector Type	USB Type C (Input/Output)
Indoor/Outdoor Usage	Outdoor

## 10. WARRANTY AND SUPPORT

The WESTTREE X26A Camping Fan comes with a manufacturer's warranty. Please refer to the product packaging or contact the seller directly for specific warranty terms and conditions.

For technical support, product inquiries, or assistance with troubleshooting beyond what is covered in this manual, please contact WESTTREE customer service through the platform where you purchased the product.