

Blackview MP20 N150

Blackview MP20 Mini PC User Manual

Model: MP20 N150

INTRODUCTION

The Blackview MP20 Mini PC is a compact and powerful desktop computer designed for both home and office use. Featuring an Intel Twin Lake N150 processor, 8GB DDR4 RAM, and a 256GB SSD, it delivers smooth performance for multitasking, 4K streaming, and various applications. Its ultra-portable design, versatile connectivity options including WiFi 6 and Bluetooth 5.2, and support for dual 4K displays make it an ideal solution for a clean, efficient workspace or entertainment hub.



Image: The Blackview MP20 Mini PC, showcasing its compact form factor and modern aesthetic.

WHAT'S IN THE BOX

Please check the package contents carefully upon unboxing:

- Blackview MP20 Mini PC (1 unit)
- Power Adapter (1 unit)
- HDMI Cable (1 unit)
- VESA Bracket with Screws (1 set)
- User Guide (1 unit)

SETUP GUIDE


Initial Connection

1. **Connect to Display:** Use the provided HDMI cable to connect the Mini PC to your monitor or TV. The MP20 supports dual 4K displays via HDMI 2.0 and DisplayPort.
2. **Connect Peripherals:** Plug in your keyboard and mouse to the available USB 3.0 or USB 2.0 ports.
3. **Connect Power:** Connect the power adapter to the DC Jack on the Mini PC and then plug it into a power outlet.
4. **Power On:** Press the power button located on the front of the Mini PC.

9 Versatile Ports

Multiple Ports for Multipurpose Use

With a full suite of ports, the MP20 lets you connect, transfer, and display with ease

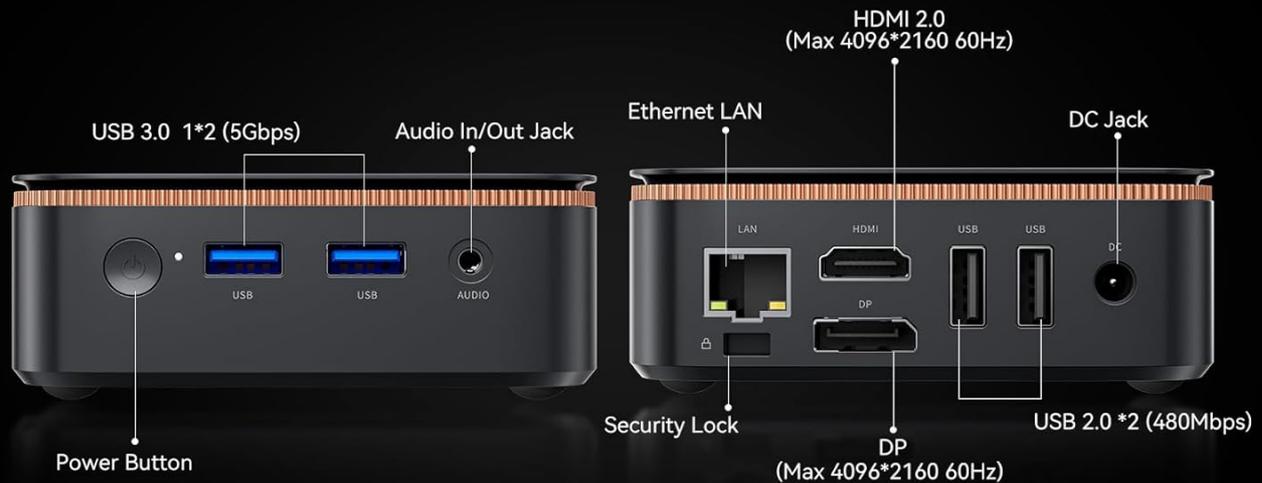

Keyboard



Mice



Monitors



TV



Audio



Projector

Image: Detailed view of the Blackview MP20 Mini PC's versatile I/O ports for easy connectivity.

Operating System Setup

The Blackview MP20 comes pre-installed with Windows 11 Pro. Follow the on-screen instructions to complete the initial Windows setup, including language, region, network connection (WiFi 6 or Ethernet), and user account creation.

VESA Mounting (Optional)

To save desk space, you can mount the Mini PC behind a compatible monitor or TV using the included VESA bracket. Attach the bracket to the Mini PC, then secure it to the VESA mounting holes on your display.

Mounted On. Clean Up.

VESA Mounting Support

Free up valuable desk space and achieve a clean and organized environment.

*The VESA mounting plate is included.

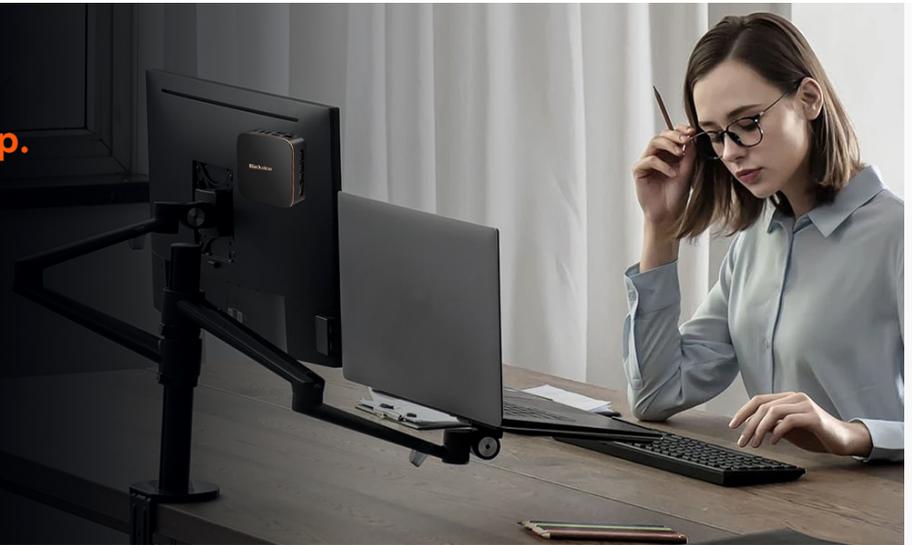


Image: The Blackview MP20 Mini PC shown mounted on the rear of a monitor, illustrating its VESA mounting capability for a clutter-free workspace.

OPERATING INSTRUCTIONS

Power Management

- **Power On:** Press the power button once.
- **Sleep Mode:** Briefly press the power button while the PC is on, or select "Sleep" from the Windows Start menu.
- **Shut Down:** Go to the Windows Start menu, select "Power," and then "Shut down."
- **Restart:** Go to the Windows Start menu, select "Power," and then "Restart."


Connectivity

The MP20 offers robust connectivity for various needs:

- **Wi-Fi 6:** For high-speed wireless internet access. Ensure your router supports Wi-Fi 6 for optimal performance.
- **Bluetooth 5.2:** Connect wireless peripherals such as keyboards, mice, headphones, and speakers.
- **Gigabit Ethernet (RJ45):** For stable wired network connections.
- **USB Ports:** Utilize the USB 3.2 and USB 2.0 ports for external drives, flash drives, and other USB devices.
- **Full-Featured USB-C:** Supports data transfer, video output, and power delivery (check specific device compatibility).

Seamless Connectivity, Silky-smooth Speed

Dual-band Wi-Fi 6 & BT 5.2

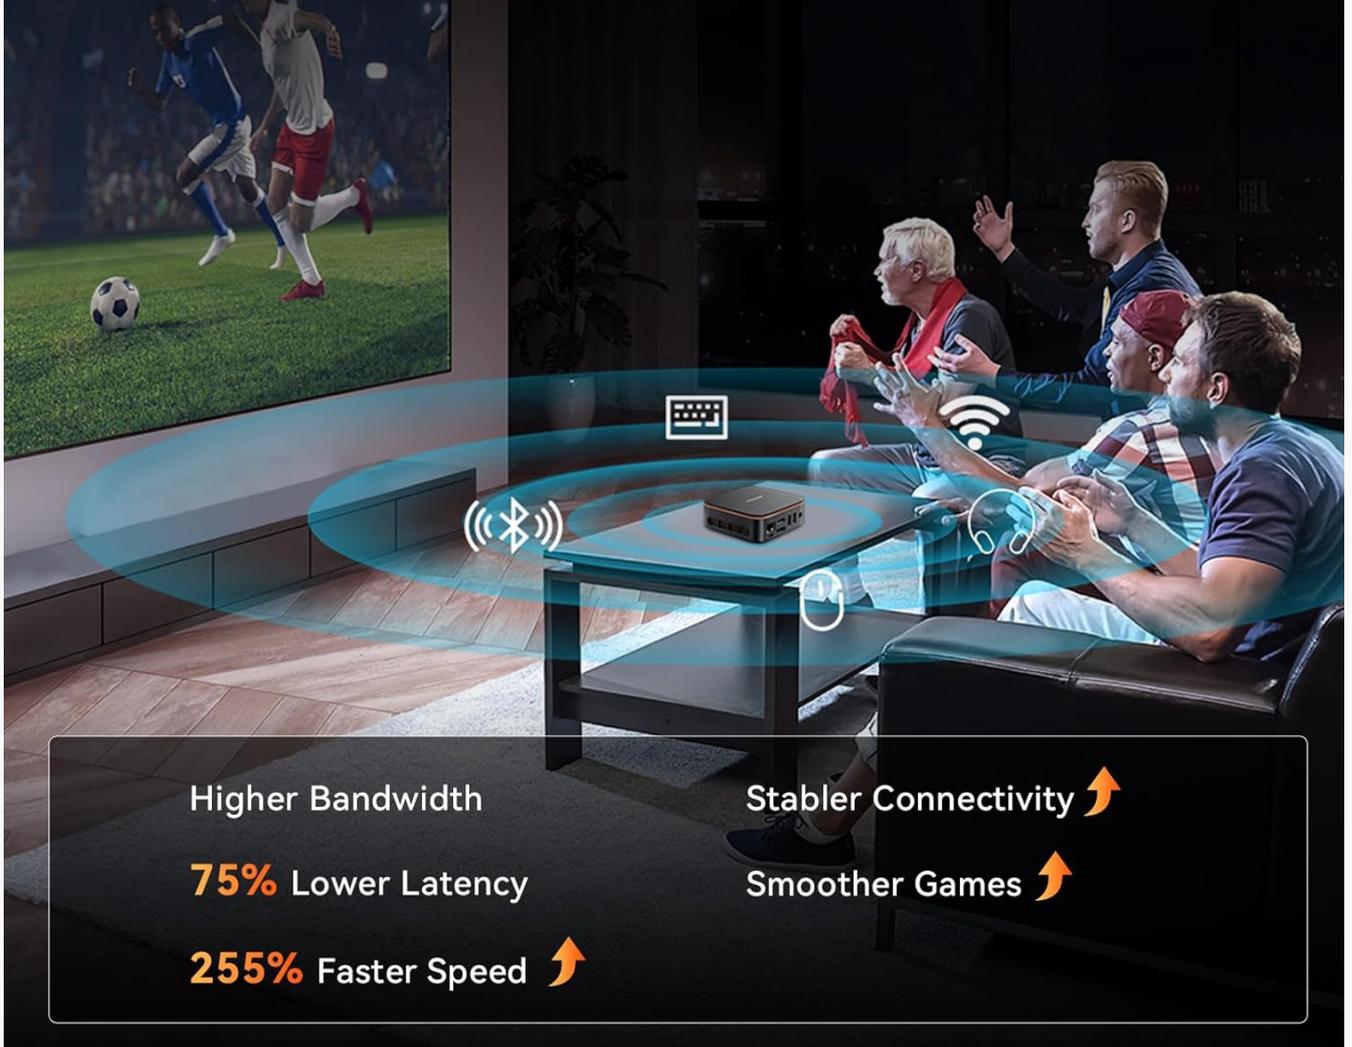

Higher Bandwidth

75% Lower Latency

255% Faster Speed ↗

Stabler Connectivity ↗

Smoother Games ↗

Image: Demonstrating the seamless connectivity of the Blackview MP20 Mini PC with Wi-Fi 6 and Bluetooth 5.2 for various applications.

Storage Expansion

The MP20 Mini PC allows for easy storage expansion. You can add up to a 2TB 2.5-inch SSD/HDD. The base can be removed without tools for convenient access to the expansion slot.

Smooth, Fast, Efficient

8GB 2666MHz DDR4(Max 16GB)

Blaze through everyday tasks with 8GB DDR4 memory, which supports up to 16 GB. Operating at speeds of up to 2666MHz, the MP20 ensures rapid multitasking, smoother gaming, and faster data processing,



256GB SSD
(Max 2TB)

8GB 2666MHz DDR4
(Max 16GB)

Image: Internal view of the Blackview MP20, illustrating the RAM and SSD, and the potential for 2TB storage expansion.

MAINTENANCE

- **Keep Clean:** Regularly clean the exterior of the Mini PC with a soft, dry cloth. Ensure ventilation openings are free from dust and obstructions.
- **Software Updates:** Keep your Windows operating system and drivers updated to ensure optimal performance and security.
- **Proper Ventilation:** Place the Mini PC in a well-ventilated area to prevent overheating. Avoid blocking the air vents.
- **Safe Shutdown:** Always shut down the Mini PC properly through the operating system to prevent data corruption.

Chill Up. Speed Up

Twofold Heat Dissipation System

Copper Tube

Fast Heat
Conduction

Max 3500 RPM

Efficient
Cooling Airflow

35,455m²

Total Heat
Dissipation Area



Stay Cool, Stay Ahead

25~35dB
Regular Use

<38dB
Under
demanding Tasks

Image: Exploded view of the Blackview MP20's cooling system, highlighting the copper tube and efficient fan for heat dissipation.

TROUBLESHOOTING

If you encounter issues with your Blackview MP20 Mini PC, refer to the following common troubleshooting steps:

- **No Power:**
 - Ensure the power adapter is securely connected to both the Mini PC and a working power outlet.
 - Try a different power outlet.
- **No Display:**
 - Verify that the HDMI or DisplayPort cable is firmly connected to both the Mini PC and the monitor.
 - Check if the monitor is set to the correct input source (HDMI/DP).
 - Try a different display cable or monitor if available.

- **No Internet Connection (Wi-Fi):**

- Ensure Wi-Fi is enabled in Windows settings.
- Restart your router and the Mini PC.
- Check if the Wi-Fi password is entered correctly.

- **Slow Performance:**

- Close unnecessary applications running in the background.
- Check for and install any pending Windows updates.
- Ensure there is sufficient free space on the SSD.

- **Peripheral Not Detected:**

- Try connecting the peripheral to a different USB port.
- Ensure the peripheral's drivers are installed and up to date.
- Restart the Mini PC.

For further assistance, please contact Blackview customer support.

SPECIFICATIONS

Feature	Detail
Model	MP20 N150
Processor	Intel Twin Lake N150 (4 Cores, up to 3.6 GHz Turbo)
Graphics	Intel UHD Graphics (Supports dual 4K displays)
RAM	8GB DDR4 2666MHz (Expandable up to 16GB)
Storage	256GB SSD (Expandable up to 2TB 2.5-inch SSD/HDD)
Operating System	Windows 11 Pro
Wireless Connectivity	Wi-Fi 6 (802.11ax), Bluetooth 5.2
Wired Connectivity	Gigabit Ethernet (RJ45)
Ports	2x USB 3.2, 2x USB 2.0, 1x HDMI 2.0, 1x DisplayPort, 1x Audio In/Out Jack, 1x DC Jack, 1x Security Lock
Dimensions	3.94 x 3.94 x 1.39 inches (10 x 10 x 3.5 cm)
Weight	9.3 ounces (265g)
Cooling System	Twofold Heat Dissipation System (Copper Tube, Silent Fan)

New-generation Twin Lake N150 Processor



Up to 3.6GHz
Turbo Frequency



Intel 7
Lithography



6MB
Intel Smart Cache



4 Cores
4 Threads



Cinebench R23



Image: Visual representation of the Intel Twin Lake N150 processor and its performance metrics.

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product video showcasing the Blackview MP20 Mini PC, its compact design, powerful Intel Twin Lake N150 processor, versatile ports, dual 4K display support, and efficient cooling system. It highlights the device's suitability for home and office environments.

WARRANTY AND SUPPORT

The Blackview MP20 Mini PC comes with a comprehensive two-year warranty covering parts and labor for manufacturing defects. This ensures quick replacement or repair if any issues arise within the warranty period.

Beyond the warranty period, Blackview provides lifelong technical support. Our expert team is available to assist you with software updates, troubleshooting, and optimization suggestions via email, live chat, or phone. We are committed to ensuring your device operates without any malfunctions for many years to come.



Image: Blackview Care information, detailing warranty and support commitments.