

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Bewinner](#) /

> [Bewinner S16 Kids Smartwatch User Manual](#)

## Bewinner S16

# Bewinner S16 Multifunction Kids Smartwatch User Manual

Model: S16 (Bewinner41sgm5x7an-11)

## 1. INTRODUCTION

---

Thank you for choosing the Bewinner S16 Multifunction Kids Smartwatch. This device is designed to provide children with a fun and interactive experience, featuring communication, entertainment, and educational tools. It comes equipped with a vibrant HD touchscreen, dual cameras, and a variety of built-in applications to support your child's daily activities and learning. Please read this manual carefully to ensure proper use and maintenance of the smartwatch.



Image: Front view of the Bewinner S16 Kids Smartwatch, showcasing its pink strap and digital watch face.

# Long battery life

Equipped with 400mAh rechargeable lithium battery  
After 2 hours of full charge, the watch can last for 100 hours



Image: Two views of the Bewinner S16 Kids Smartwatch, showing the front with the screen and the side profile with buttons and camera lens.

## 2. SAFETY INFORMATION

---

Please observe the following safety guidelines to prevent injury or damage to the device:

- **Choking Hazard:** This product contains small parts that could be a choking hazard for young children. Adult supervision is recommended.
- **Battery Safety:** The smartwatch contains a non-removable lithium battery. Do not attempt to replace the battery yourself. Do not expose the device to extreme temperatures, direct sunlight, or fire.
- **Water Resistance:** This smartwatch is not waterproof. Avoid exposing it to water, rain, or excessive moisture.
- **Cleaning:** Use a soft, dry cloth for cleaning. Do not use harsh chemicals or abrasive materials.
- **Disposal:** Dispose of the device and its battery responsibly according to local regulations.

## 3. PACKAGE CONTENTS

---

Upon opening the package, please verify that all the following items are included:

- 1 x Bewinner S16 Kids Smartwatch (Pink)
- 1 x USB Charging Cable
- 1 x Card Pin (for SIM card slot, if applicable - though not explicitly mentioned for SIM, it's a common accessory)
- 1 x User Manual (this document)



Image: The Bewinner S16 Kids Smartwatch displayed alongside its USB charging cable and a small card pin, indicating the complete package contents.

## 4. PRODUCT FEATURES

---

The Bewinner S16 Smartwatch is packed with features designed for children:

- **Dual Cameras:** Equipped with two 0.3 MP cameras, allowing children to capture photos and videos from different angles. Features photo stickers for creative fun.



Image: A child happily using the smartwatch camera, with other children in the background, illustrating the camera feature.

- **Multifunctional Entertainment & Learning:** Includes a wide array of functions such as music player, video player, alarm clock, pedometer, calculator, calendar, stopwatch, flashlight, and voice recorder. It also features customizable wallpapers and built-in games.



Image: The smartwatch screen displaying a grid of colorful icons representing its various functions like Camera, Photos, Player, Video, Music, Recorder, Calendar, Calculator, Alarm, Torch, Tools, Theme, Pedometer, Games, and Settings.

- **Long Battery Life:** Features a 400 mAh rechargeable lithium battery, providing up to 100 hours of standby time after a full 2-hour charge.

# Multi-function kids Smartwatch



Image: The smartwatch displaying its watch face, with a graphic indicating "Long battery life" and a battery icon, emphasizing its extended usage time.

- **HD IPS Color Touchscreen:** A 1.54-inch HD IPS color touchscreen with 240x240 resolution ensures clear display and protects children's eyesight.
- **Portable Design:** Compact and lightweight, measuring approximately 52 x 38.2 x 13.8 mm (2.0 x 1.5 x 0.5 inches), making it comfortable for children to wear and carry.

## 5. SPECIFICATIONS

Feature	Specification
Model	S16
Processor Model	MT6261
Screen	1.54-inch HD IPS Color Touchscreen
Resolution	240 x 240 pixels

Feature	Specification
Camera	2 x 0.3 MP
Battery	Built-in 400 mAh Lithium Battery
Memory	32 MB
Watch Size	Approx. 52 x 38.2 x 13.8 mm (2.0 x 1.5 x 0.5 inches)
Color	Pink
Target Audience	Children, Girls
Compatible Devices	PC (for data transfer/charging)



Image: The Bewinner S16 Smartwatch with clear labels indicating its dimensions: 52mm (2.0in) length, 38.2mm (1.5in) width, and 13.8mm (0.5in) thickness.

## 6. SETUP

---

### 6.1 Charging the Smartwatch

Before first use, fully charge the smartwatch.

1. Connect the small end of the USB charging cable to the charging port on the smartwatch.
2. Connect the larger end of the USB cable to a standard USB power adapter (not included) or a computer's USB port.
3. The charging indicator on the screen will show the charging status.
4. A full charge takes approximately 2 hours and provides up to 100 hours of standby time.

### 6.2 Powering On/Off

- **To Power On:** Press and hold the Power button (usually located on the side of the watch) for a few seconds until the screen lights up.
- **To Power Off:** Press and hold the Power button until a power-off option appears on the screen. Tap to confirm. Alternatively, navigate to Settings and select the Power Off option.

## 7. OPERATING INSTRUCTIONS

---

### 7.1 Navigating the Interface

The smartwatch features a responsive touchscreen.

- **Tap:** To select an icon or confirm an action.
- **Swipe:** Swipe left or right to navigate between different app screens or menus. Swipe up or down for more options within an app.
- **Home Screen:** The main screen displays the time and date. Swipe to access applications.

### 7.2 Core Functions



Image: A collage showing various features of the smartwatch in action, including a child sleeping (Alarm), listening to music (Music), using a calculator (Calculator), recording sound (Recorder), running (Pedometer), and using the flashlight (Torch).

- **Camera:** Tap the "Camera" icon. You can switch between the front and rear cameras (if applicable) and apply fun photo stickers before taking a picture. Photos are saved in the "Photos" gallery.
- **Music Player:** Tap the "Music" icon. You can play pre-loaded music or transfer new audio files to the watch's memory.
- **Video Player/Recorder:** Tap the "Video" icon to record short videos or play existing ones.
- **Alarm Clock:** Tap "Alarm" to set multiple alarms. You can customize alarm times and sounds.
- **Pedometer:** Tap "Pedometer" to track your child's steps throughout the day. This feature encourages physical activity.
- **Calculator:** Tap "Calculator" for basic arithmetic operations.
- **Calendar:** Tap "Calendar" to view the current date and month.
- **Flashlight:** Tap "Torch" to turn on the built-in flashlight for convenience in dark environments.
- **Voice Recorder:** Tap "Recorder" to record voice memos.
- **Games:** The smartwatch includes several pre-installed games for entertainment. Tap the "Games" icon to access them.
- **Settings:** Access "Settings" to adjust volume, brightness, set wallpaper, change time/date, and view device information.

## 8. MAINTENANCE

---

- **Cleaning:** Wipe the smartwatch screen and body with a soft, dry, lint-free cloth. Do not use liquid cleaners or sprays.
- **Storage:** When not in use for extended periods, store the smartwatch in a cool, dry place away from direct sunlight.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the watch regularly, even if not in daily use.
- **Avoid Impacts:** Protect the watch from drops and strong impacts, which can damage the screen or internal components.

## 9. TROUBLESHOOTING

---

Problem	Possible Solution
Smartwatch does not turn on.	<ul style="list-style-type: none"><li>◦ Ensure the battery is charged. Connect to the charger for at least 10 minutes.</li><li>◦ Press and hold the Power button for 10-15 seconds to attempt a forced restart.</li></ul>
Screen is unresponsive.	<ul style="list-style-type: none"><li>◦ Restart the smartwatch by holding the Power button.</li><li>◦ Ensure the screen is clean and dry.</li></ul>
Battery drains quickly.	<ul style="list-style-type: none"><li>◦ Reduce screen brightness.</li><li>◦ Close unused applications running in the background.</li><li>◦ Ensure the watch is fully charged before use.</li></ul>
Cannot transfer files.	<ul style="list-style-type: none"><li>◦ Ensure the USB cable is securely connected to both the watch and the computer.</li><li>◦ Try a different USB port or cable.</li><li>◦ Check if the watch is in data transfer mode (if prompted on screen).</li></ul>

## 10. WARRANTY AND SUPPORT

---

For detailed warranty information and customer support, please refer to the separate warranty card or contact Bewinner customer service through the contact information provided on the product packaging or the official Bewinner website.

Please retain your purchase receipt as proof of purchase for any warranty claims.