

cortina 5580-00006-0001

cortina Wooden Poster Frame User Manual

Model: 5580-00006-0001

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your cortina Wooden Poster Frame. Designed for displaying posters, photos, or cherished artwork, this frame is crafted from solid oak wood and measures 19.7 x 19.7 inches (50 x 50 cm). It can be used in both portrait and landscape orientations.

PRODUCT OVERVIEW

The cortina Wooden Poster Frame is designed for durability and aesthetic appeal, featuring high-quality oak wood construction.

Components

- **Wooden Frame:** Solid oak wood construction.
- **Transparent Front Panel:** Clear panel for protecting your artwork.
- **Backing Board:** Sturdy board to secure your artwork.
- **Fasteners:** Metal clips to hold the backing board in place.
- **Hanging Hardware:** Includes D-rings and a hanging string for wall mounting.

Visual Guide



Figure 1: Front view of the cortina Wooden Poster Frame, showcasing its clear front panel and oak wood finish.

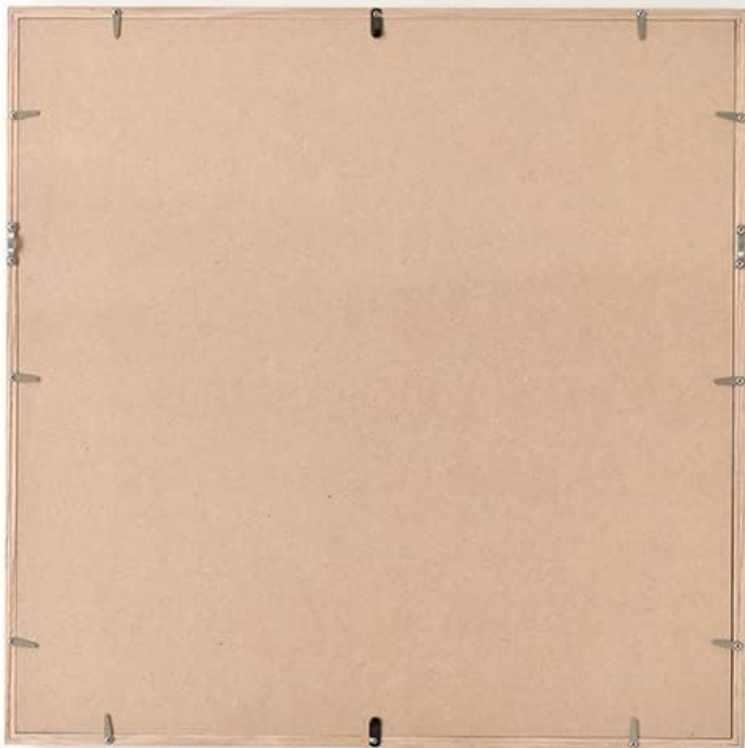


Figure 2: Back view of the frame, showing the backing board and metal fasteners.



Figure 3: Detailed view of the frame's corner joint, highlighting the solid oak wood construction.



Figure 4: The included hanging string and pre-installed D-rings for easy wall mounting.



Figure 5: Close-up of the rotatable metal fasteners that secure the backing board.

SETUP

Follow these steps to prepare your cortina Wooden Poster Frame for displaying your artwork.

1. **Unpack the Frame:** Carefully remove the frame from its packaging. Inspect for any damage.
2. **Prepare the Backing:** Lay the frame face down on a clean, flat surface. Rotate the metal fasteners (Figure 5) to release the backing board.
3. **Remove Protective Films:** Peel off any protective films from both sides of the transparent front panel.
4. **Insert Artwork:** Place your poster, photo, or artwork onto the backing board. Ensure it is centered and flat.
5. **Reassemble:** Carefully place the transparent front panel over your artwork, followed by the backing board. Align them properly within the frame.
6. **Secure Fasteners:** Rotate the metal fasteners back into position to firmly secure the backing board and transparent panel.
7. **Attach Hanging String (Optional):** If not already attached, thread the provided hanging string through the D-rings on the back of the frame and tie a secure knot (Figure 4).

OPERATING

The cortina Wooden Poster Frame is designed for simple display. Once your artwork is secured, you can hang it on a wall.

Wall Mounting

1. **Choose Location:** Select a suitable wall location, ensuring it can support the weight of the frame and artwork.
2. **Install Wall Hook:** Install a wall hook or nail securely into the wall at the desired height. Ensure it is level.

3. **Hang Frame:** Carefully lift the frame and hang it by the string or D-rings onto the installed wall hook. Adjust as needed to ensure it hangs straight.

The frame can be hung in both portrait and landscape orientations.

MAINTENANCE

Proper care will ensure the longevity and appearance of your cortina Wooden Poster Frame.

- **Cleaning the Frame:** Wipe the wooden frame with a soft, dry, lint-free cloth. For stubborn marks, a slightly damp cloth can be used, followed immediately by a dry cloth. Avoid abrasive cleaners or harsh chemicals.
- **Cleaning the Front Panel:** Gently wipe the transparent front panel with a soft, clean microfiber cloth. For fingerprints or smudges, use a small amount of glass cleaner applied to the cloth (not directly to the panel) and wipe clean.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause the wood to fade or warp. Position the frame in a location away from direct sun exposure.
- **Humidity Control:** Avoid placing the frame in areas with extreme humidity fluctuations, as this can affect the wood.

TROUBLESHOOTING

Here are solutions to common issues you might encounter.

Problem	Possible Cause	Solution
Artwork appears blurry or scratched.	Protective film not removed from transparent panel.	Remove the protective film from both sides of the transparent front panel.
Frame does not hang straight.	Wall hook/nail is not level; hanging string is uneven.	Ensure your wall hook is level. Adjust the hanging string if necessary to balance the frame.
Backing board is loose.	Metal fasteners are not fully rotated into place.	Ensure all metal fasteners are securely rotated to hold the backing board firmly.

SPECIFICATIONS

Attribute	Detail
Brand	cortina
Model Number	5580-00006-0001
Material	Solid Oak Wood
Color	Brown (Oak)
Product Dimensions	19.7 x 19.7 inches (50 x 50 cm)
Shape	Square
Mounting Type	Wall Mount
Item Weight	2.79 pounds (1.27 kg)

Attribute	Detail
Orientation	Vertical, Horizontal

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available documentation. For any support inquiries or further assistance, please refer to the retailer or manufacturer's official website where you purchased the product.



© 2023 cortina. All rights reserved.