

[Manuals.plus](#) /

> [Timegyro](#) /

> Timegyro Alarm Clock for Bedrooms, LED Digital Clock Battery Operated Small Wall Clock with 3 Level Brightness Adjustable,Snooze,12/24Hr,1.2" Digital Display for Desk, Bedside,Table, Travel Black-white

Timegyro B0C2PP6GGG

Timegyro LED Digital Alarm Clock User Manual

Model: B0C2PP6GGG

Brand: Timegyro

PRODUCT OVERVIEW

The Timegyro LED Digital Alarm Clock is a versatile and portable timekeeping device designed for bedrooms, desks, and travel. It features a clear 1.2-inch LED digital display, adjustable brightness, a snooze function, and supports both 12-hour and 24-hour time formats. This clock is battery-operated, ensuring portability and freedom from power outlets.



Figure 1: Front view of the Timegyro LED Digital Alarm Clock displaying 20:00.

PACKAGE CONTENTS

- Timegyro LED Digital Alarm Clock
- User Manual
- (Batteries not included)

SETUP

1. Battery Installation

The Timegyro alarm clock is powered by 4 AA batteries (not included). Ensure correct polarity when inserting batteries.

1. Locate the battery compartment cover on the back of the clock.
2. Slide the cover open.
3. Insert 4 new AA batteries, matching the (+) and (-) indicators inside the compartment.
4. Close the battery compartment cover securely.

Battery operated only



Figure 2: Rear view of the clock indicating battery compartment and control buttons for Time Setting, Alarm Setting, Brightness Adjustment,

2. Setting Time

Use the buttons on the back of the clock to set the current time.

1. Press the **TIME SET** button once. The hour digits will flash.
2. Use the **HOUR / 12-24** button to adjust the hour. Press and hold for faster adjustment.
3. Press the **TIME SET** button again. The minute digits will flash.
4. Use the **MIN / AL ON/OFF** button to adjust the minutes. Press and hold for faster adjustment.
5. Press the **TIME SET** button a third time to confirm and exit time setting mode.

3. Setting 12/24 Hour Format

The clock supports both 12-hour (Standard Time) and 24-hour (Military Time) display formats.

- While in normal time display mode, press the **HOUR / 12-24** button to toggle between 12-hour and 24-hour formats.
- In 12-hour format, an "AM" or "PM" indicator will appear on the display.

12-hour / 24-hour switchable

12-hour (Standard Time)

24-hour (Military Time)



Figure 3: The clock displaying time in 12-hour (10:30) and 24-hour (22:30) formats.

4. Setting Alarm

Set your desired wake-up time using the alarm setting function.

1. Press the **AL SET** button once. The alarm hour digits will flash.
2. Use the **HOUR / 12-24** button to adjust the alarm hour.
3. Press the **AL SET** button again. The alarm minute digits will flash.
4. Use the **MIN / AL ON/OFF** button to adjust the alarm minutes.
5. Press the **AL SET** button a third time to confirm and exit alarm setting mode.

OPERATING INSTRUCTIONS

1. Turning Alarm On/Off

To activate or deactivate the alarm:

- While in normal time display mode, press the **MIN / AL ON/OFF** button to toggle the alarm on or off.
- When the alarm is active, an alarm icon (bell symbol) will appear on the display.

2. Snooze Function

When the alarm sounds, you can activate the snooze function for an additional 7 minutes of sleep.

- When the alarm is ringing, gently touch the **SNOOZE AL STOP** button located on the top of the clock.
- The alarm will pause for 7 minutes and then sound again.
- This snooze process can be repeated up to 3 times.
- To completely stop the alarm, press any button on the back of the clock.



Figure 4: Activating the snooze function by pressing the top button when the alarm sounds.

3. Adjusting Brightness

The clock features 3 levels of brightness to suit your environment and preference.

- While in normal time display mode, press the **BRIGHTNESS** button (light bulb icon) on the back of the clock to cycle through the three brightness levels.
- The clock also has a Night-mode feature, which automatically dims the display between 8:00 PM and 6:00 AM for comfortable viewing in low light conditions.
- *Note: This clock is designed for weaker light and night use. The display may appear fuzzy under strong light conditions.*

I Three Levels of Brightness

Set three levels of the LED brightness to ensure it will not disturb you.



Figure 5: Examples of the three adjustable brightness levels for the LED display, suitable for various lighting conditions.

MAINTENANCE

1. Cleaning

- Wipe the clock surface with a soft, dry cloth.
- Do not use abrasive cleaners or solvents, as they may damage the finish.

2. Battery Replacement

- When the display becomes dim or the clock stops functioning, it's time to replace the batteries.
- Follow the battery installation steps outlined in the "Setup" section.
- Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock display is dim or blank.	Low batteries or incorrect battery installation.	Replace batteries with new AA batteries, ensuring correct polarity.
Alarm does not sound.	Alarm is not activated or alarm time is incorrect.	Ensure the alarm is turned ON (bell icon visible). Verify the alarm time is set correctly.
Display appears fuzzy or hard to read.	Clock is used under strong light conditions.	Move the clock to an area with weaker light or use it during night-time. Adjust brightness level.
Time accuracy issues.	Normal deviation for battery-operated clocks.	The clock has an accuracy of less than +/-30 seconds per month. Reset time if significant deviation occurs.

SPECIFICATIONS

- Model:** B0C2PP6GGG
- Dimensions:** 5.1 x 1.5 x 2.6 inches (Length x Width x Height)
- Weight:** Approximately 0.13 Kilograms
- Power Source:** 4 x AA Batteries (not included)
- Display Type:** 1.2-inch LED Digital Display
- Brightness Levels:** 3 adjustable levels + Night-mode (auto-dim from 8 PM - 6 AM)
- Time Format:** 12-hour / 24-hour switchable
- Alarm Features:** Daily Alarm, 7-minute Snooze (up to 3 times)
- Time Accuracy:** Less than +/-30 seconds per month



Figure 6: Dimensions of the Timegyro LED Digital Alarm Clock.

WARRANTY AND SUPPORT

Warranty Information

This Timegyro LED Digital Alarm Clock comes with a **1-year warranty** for quality assurance. This warranty covers manufacturing defects and issues arising from normal use.

The warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or failure to follow the instructions in this manual.

Customer Support

Should you encounter any problems or have questions regarding your Timegyro alarm clock, please do not hesitate to contact our customer support team. We are committed to providing prompt assistance.

We aim to respond to all inquiries within 24 hours.

For support, please visit the [Timegyro Store on Amazon](#) or contact us through the Amazon platform.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question