

[Manuals.plus](#) /

> [Darkaway](#) /

> Darkaway Gooseneck Barn Light Instruction Manual

Darkaway Gooseneck Barn Light

Darkaway Gooseneck Barn Light Instruction Manual

Model: Gooseneck Barn Light

1. INTRODUCTION

Thank you for purchasing the Darkaway Gooseneck Barn Light. This manual provides essential information for the safe installation, operation, and maintenance of your new lighting fixture. Please read these instructions thoroughly before installation and retain them for future reference.

2. SAFETY INFORMATION

- **WARNING:** Risk of electric shock. Disconnect power at the fuse box or circuit breaker before installation or servicing.
- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). Contact a qualified electrician if you are unfamiliar with proper electrical wiring installations.
- This fixture is intended for use with a 110-volt AC power supply.
- Use only E26 base bulbs, maximum 40 watts. Compatible with LED, Incandescent, CFL, and Halogen bulbs.
- Do not exceed the maximum wattage.
- Ensure the mounting surface can support the weight of the fixture.
- Wear safety glasses and gloves during installation.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation.

- 1 x Wall Sconce
- 1 x User Manual
- 1 x Installation Hardware (mounting bracket, screws, wire nuts)

4. SPECIFICATIONS

Brand	Darkaway
Model	Gooseneck Barn Light
Material	Metal
Color	Oil-Rubbed Bronze
Dimensions (L x W x H)	15" x 13" x 11" (Approximate, based on product images and description)
Back Plate Diameter	4.7 inches
Voltage	110 Volts (AC)
Max Wattage	40 Watts
Bulb Base	E26
Light Source Compatibility	LED, Incandescent, CFL, Halogen (Bulb not included)
Indoor/Outdoor Usage	Indoor, Outdoor

Note: Dimensions are approximate and may vary slightly.

5. SETUP AND INSTALLATION

Before you begin: Ensure power is disconnected at the circuit breaker. It is recommended to have a second person assist with installation.

5.1 Identify Components

Familiarize yourself with the parts of your Darkaway Gooseneck Barn Light.

DETAILS



▲ **GOLD FINISH**

▶ **GOOSENECK**



▶ **METAL SHADE**



Figure 1: Key components of the Darkaway Gooseneck Barn Light, highlighting the classic gooseneck arm, metal shade, and gold interior finish.

PRODUCT DIMENSION



Figure 2: Product dimensions, indicating a width of 13.4 inches and a height of 11.8 inches from the wall mount to the top of the gooseneck.

5.2 Wiring and Mounting

1. **Turn off power:** Locate the circuit breaker or fuse box and turn off the power to the junction box where you will install the fixture.
2. **Attach mounting bracket:** Secure the mounting bracket (included) to the junction box using the provided screws. Ensure it is firmly attached.
3. **Connect wires:**
 - Connect the **black** wire from the fixture to the **black** (hot) wire from the junction box using a wire nut.
 - Connect the **white** wire from the fixture to the **white** (neutral) wire from the junction box using a wire nut.
 - Connect the **green** or **bare copper** ground wire from the fixture to the ground wire from the junction box (or to the green ground screw on the mounting bracket).
4. **Secure fixture:** Carefully tuck all wires into the junction box. Align the fixture's base with the mounting bracket and secure it with the provided screws.

5.3 Bulb Installation

Install the appropriate bulb into the fixture's socket.

1. Ensure the power is still off.
2. Gently screw one E26 base bulb (max 40W, not included) into the socket until it is snug. Do not overtighten.

Your browser does not support the video tag.

Video 1: This video demonstrates the bulb installation process for the Darkaway Gooseneck Barn Light. It shows how to screw an E26 base bulb into the fixture's socket.



Figure 3: Illustration of compatible E26 bulb types for the fixture, indicating a maximum of 40W and 110V.

6. OPERATING INSTRUCTIONS

Once installed, operating your Darkaway Gooseneck Barn Light is straightforward.

1. **Restore Power:** After installation and bulb insertion are complete, turn the power back on at the circuit breaker or fuse box.
2. **Control:** The light fixture is controlled by a standard wall switch (not included) connected to the electrical circuit. Flip the switch to turn the light on or off.

6.1 Application Examples

The versatile design of this fixture makes it suitable for various indoor and outdoor settings.



Figure 4: Example of the light fixture installed in an entryway.



Figure 5: Example of the light fixture installed on an outdoor balcony.



Figure 6: Example of the light fixture installed in a bedroom.

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your light fixture.

- **Cleaning:** Before cleaning, ensure the power is turned off. Wipe the fixture with a soft, dry cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish.
- **Bulb Replacement:** Always turn off the power before replacing a bulb. Allow the old bulb to cool completely before removing it. Screw in a new E26 base bulb (max 40W) gently.
- **Inspection:** Periodically check the fixture for any signs of wear, loose connections, or damage. If any issues are found, disconnect power and consult a qualified electrician.

8. TROUBLESHOOTING

If you encounter issues with your light fixture, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	<ul style="list-style-type: none"> Power is off at the circuit breaker. Bulb is loose or burned out. Incorrect wiring. 	<ul style="list-style-type: none"> Check the circuit breaker and ensure power is on. Tighten or replace the bulb. Turn off power and re-check wiring connections. Consult an electrician if unsure.
Light flickers.	<ul style="list-style-type: none"> Loose bulb. Loose wiring connection. Incompatible dimmer switch (if applicable). 	<ul style="list-style-type: none"> Tighten the bulb. Turn off power and check wiring connections. Ensure dimmer switch is compatible with the bulb type.
Fixture hums.	<ul style="list-style-type: none"> Loose components. Incompatible bulb or dimmer. 	<ul style="list-style-type: none"> Turn off power and check for any loose parts. Try a different bulb or remove the dimmer to test.

If the problem persists after trying these solutions, please contact customer support.

9. WARRANTY AND SUPPORT

Darkaway provides a one-year warranty for this product, covering manufacturing defects and material flaws under normal use.

- **Warranty Coverage:** This warranty covers defects in materials and workmanship for one year from the date of purchase.
- **Exclusions:** The warranty does not cover damage caused by improper installation, misuse, abuse, accidents, unauthorized repairs, or normal wear and tear.
- **Claiming Warranty:** To make a warranty claim, please contact Darkaway customer service with your proof of purchase.
- **Customer Support:** For any quality or technical issues, please contact our customer service team. Refer to your purchase platform for contact details.

