

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [iJoy](#) /

> [iJoy Disney Nightmare Before Christmas Sally Dress Bluetooth Headphones User Manual DHP2431](#)

### iJoy DHP2431

# iJoy Disney Nightmare Before Christmas Sally Dress Bluetooth Headphones User Manual

Model: DHP2431 | Brand: iJoy

## INTRODUCTION

---



**Image:** The iJoy Disney Nightmare Before Christmas Sally Dress Bluetooth Headphones, showcasing their unique design.

Thank you for choosing the iJoy Disney Nightmare Before Christmas Sally Dress Bluetooth Headphones. These wireless over-ear headphones are designed to provide a rich audio experience with a unique Sally Dress design. They feature a built-in microphone for hands-free calling, a foldable design for portability, and versatile connectivity options. This manual will guide you through the setup, operation, and maintenance of your new headphones.

## SETUP

### 1. Charging the Headphones



**Image:** Graphic indicating 15 hours of playtime for the headphones, highlighting battery endurance.

Before first use, fully charge your headphones. Connect the provided charging cable to the charging port on the headphones and a USB power source. The LED indicator will show charging status and turn off when fully charged. A full charge provides approximately 15 hours of battery life.

## **2. Bluetooth Pairing**

# Universal Compatibility



**Image:** The headphones with a graphic illustrating universal compatibility with both Apple and Android devices.

1. Ensure the headphones are turned off.
2. Press and hold the Power button until the LED indicator flashes blue and red, indicating pairing mode.
3. On your Bluetooth-enabled device (smartphone, tablet, computer), go to Bluetooth settings and search for available devices.
4. Select "iJoy DHP2431" (or similar name) from the list.
5. Once connected, the LED indicator will flash blue slowly.

### **3. Using the Auxiliary Cable**

For a wired connection, plug one end of the 3.5mm auxiliary cable into the headphone's audio jack and the other end into your audio device. This allows for continued listening even if the battery is depleted.

### **4. Micro SD Card Playback**

Insert a Micro SD card with your favorite music into the designated slot on the headphones. The headphones will automatically switch to Micro SD card playback mode. Use the control buttons to manage your music.


## OPERATING INSTRUCTIONS

### Power On/Off

- **To Power On:** Press and hold the Power button until the LED indicator lights up.
- **To Power Off:** Press and hold the Power button until the LED indicator turns off.

### 5-Button Control System

The headphones feature a convenient 5-button control system located on the ear cup for easy management of audio and calls.

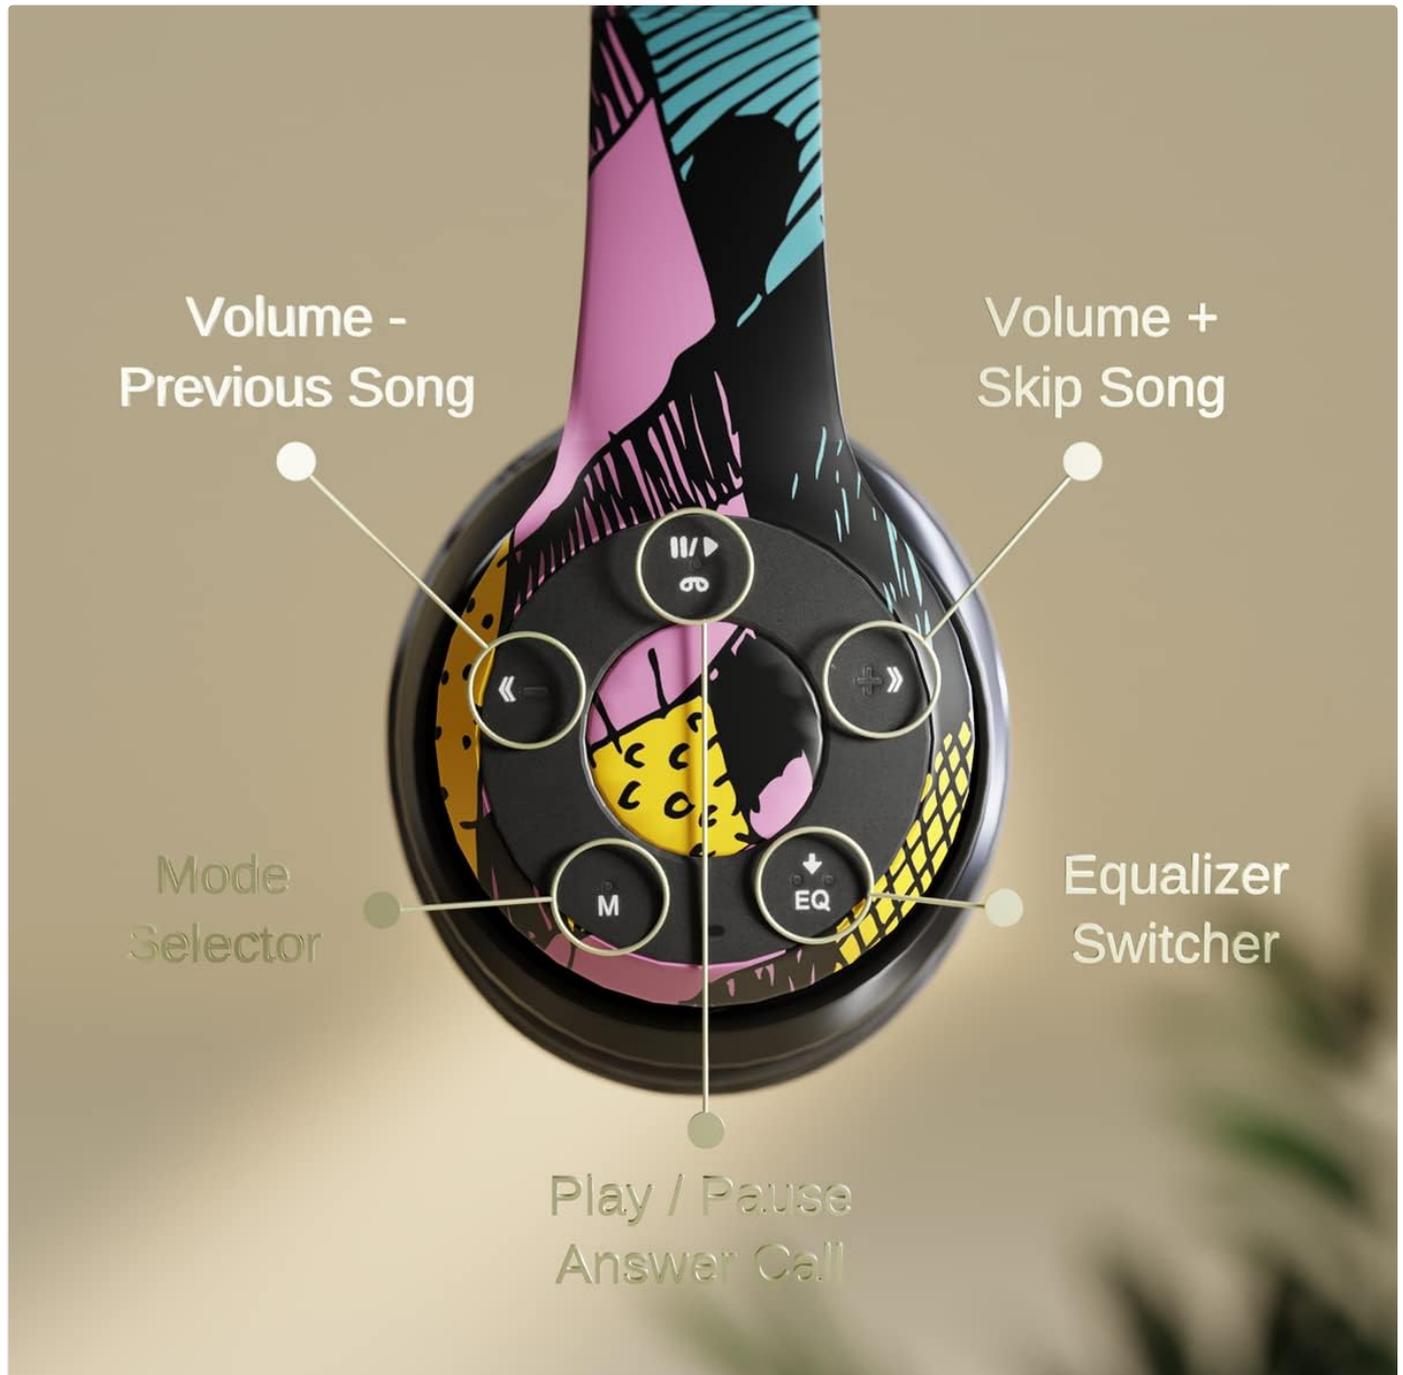

**Image:** Detailed view of the 5-button control panel on the headphone ear cup, indicating functions for volume, track navigation, equalizer, and call management.

- **Play/Pause/Answer/Hang-up:** Press the center button to play or pause music, or to answer/end a phone call.

- **Volume Up / Next Track:** Press the '+' button to increase volume. Hold the '+' button to skip to the next track.
- **Volume Down / Previous Track:** Press the '-' button to decrease volume. Hold the '-' button to go to the previous track.
- **Equalizer:** Press the 'EQ' button to cycle through different equalizer presets.
- **Mode Selector:** Press the 'M' button to switch between Bluetooth, Micro SD card, and FM Radio modes.

### Hands-Free Calling

With the built-in microphone, you can make and receive calls directly through your headphones when connected via Bluetooth to your smartphone. Use the center button to answer or end calls.

### Built-in Radio Receiver

Switch to FM Radio mode using the 'M' button. The headphones will automatically scan and tune into available radio stations. Use the track navigation buttons to change stations.


### Foldable Design



**Image:** The headphones are shown in their folded configuration, highlighting their compact and portable design for easy storage and transport.

The headphones feature a foldable design, allowing for easy storage and portability. Simply fold the ear cups inwards towards the headband to reduce their size for travel or storage in a backpack.

### Noise Canceling Design

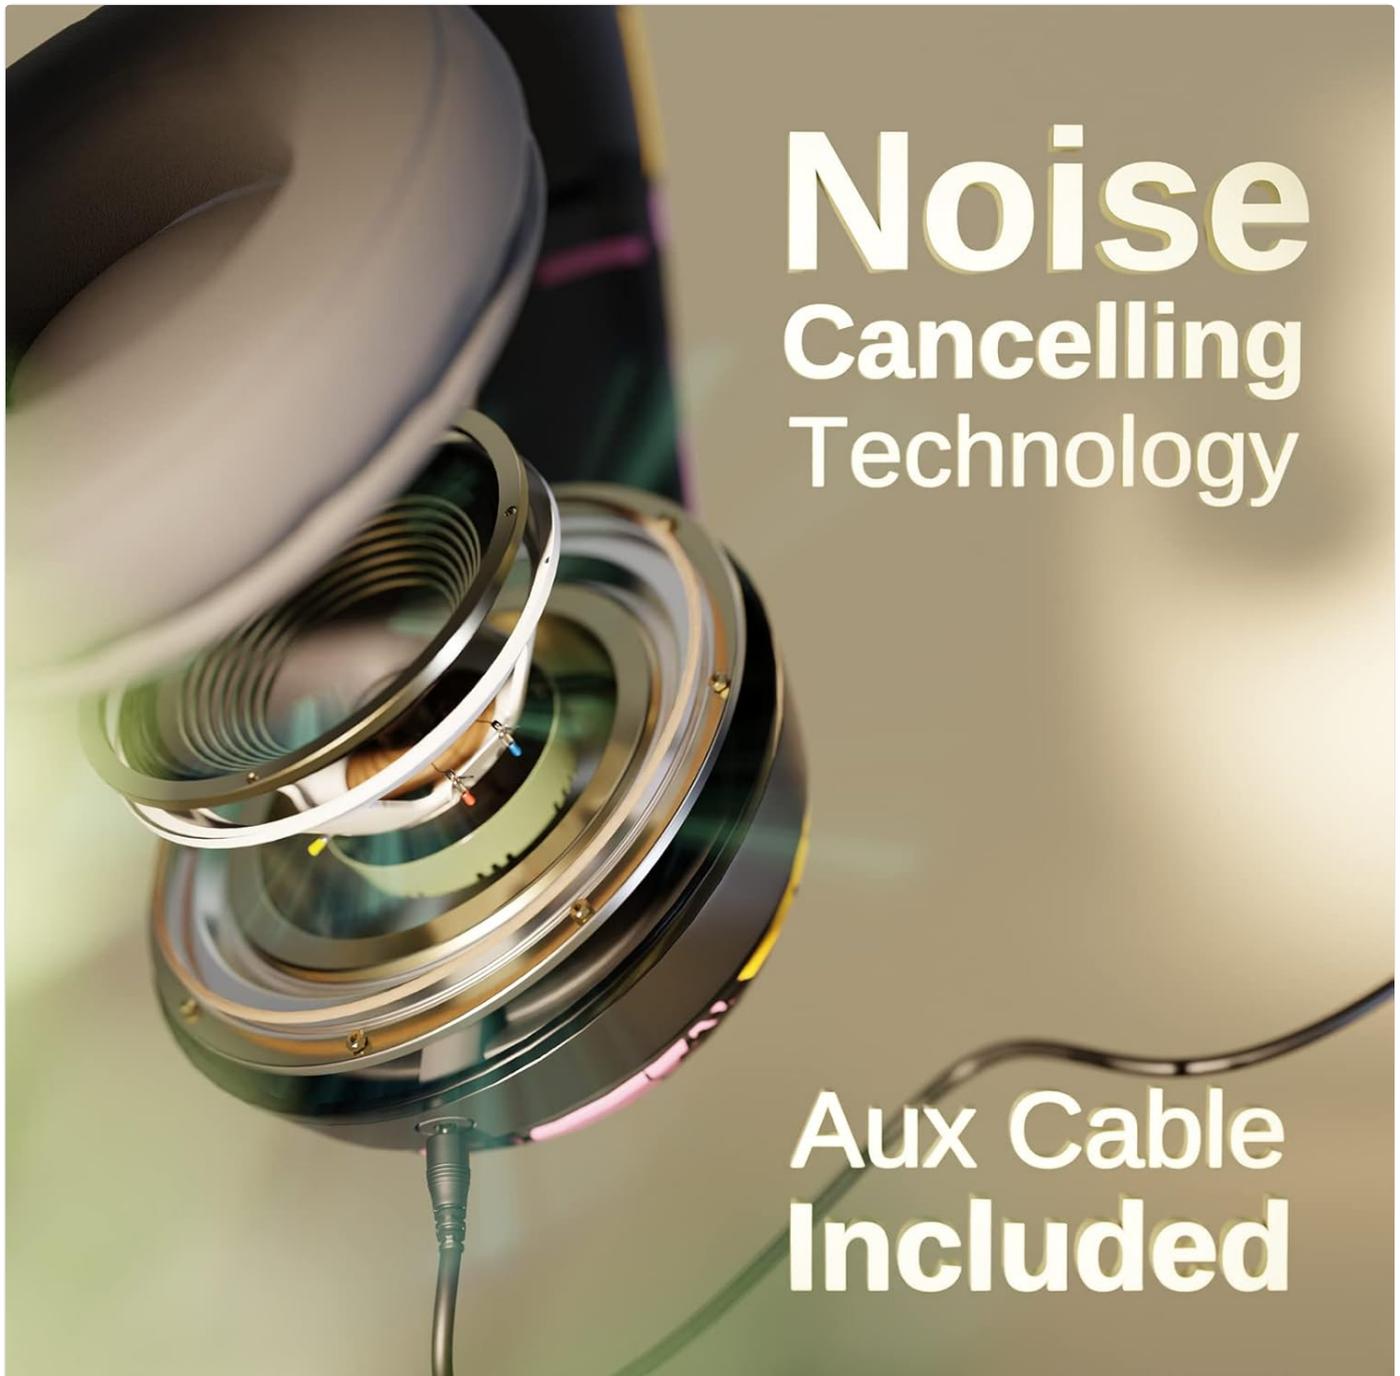

**Image:** An exploded view of the headphone's ear cup, illustrating the internal speaker components and the connection point for the auxiliary cable, emphasizing the noise-canceling technology.

The over-ear cup design helps to isolate audio, providing a more immersive listening experience by reducing external noise interference.

### MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use abrasive cleaners or solvents.

- **Storage:** When not in use, store the headphones in a cool, dry place. Utilize the foldable design for compact storage.
- **Battery Care:** To prolong battery life, avoid fully discharging the headphones frequently. Charge them regularly, even if not in constant use.
- **Water Resistance:** These headphones are not water-resistant. Avoid exposure to liquids.

## TROUBLESHOOTING

- **No Power:** Ensure the headphones are fully charged. Connect to a power source and check the charging indicator.
- **Cannot Pair via Bluetooth:**
  - Ensure the headphones are in pairing mode (LED flashing blue and red).
  - Make sure Bluetooth is enabled on your device and it's within range (typically 10 meters).
  - Forget the device from your phone's Bluetooth list and try pairing again.
  - Restart both the headphones and your device.
- **No Sound:**
  - Check the volume level on both the headphones and your connected device.
  - Ensure the headphones are properly connected via Bluetooth or auxiliary cable.
  - If using an SD card, ensure the audio files are in a compatible format.
- **Poor Sound Quality:**
  - Move closer to your Bluetooth device to avoid interference.
  - Check the audio source for quality issues.
  - Ensure the ear cups are properly positioned over your ears for optimal sound isolation.

## SPECIFICATIONS

<b>Model Name</b>	DHP2431
<b>Connectivity Technology</b>	Wireless (Bluetooth)
<b>Wireless Communication Technology</b>	Bluetooth
<b>Included Components</b>	Headphones, Charging Cable, Auxiliary Cable
<b>Age Range (Description)</b>	Adult (suitable for kids)
<b>Material</b>	Plastic, Metal, Fabric, Memory Foam
<b>Recommended Uses For Product</b>	Music, Calling
<b>Compatible Devices</b>	Bluetooth-enabled devices
<b>Control Type</b>	Volume Control, Track Navigation, Equalizer, Mode Selector
<b>Cable Feature</b>	Retractable, Without Cable (for wireless use)
<b>Item Weight</b>	0.26 Kilograms (9.1 ounces)
<b>Water Resistance Level</b>	Not Water Resistant

<b>Style</b>	Sally Dress
<b>Control Method</b>	Button
<b>Number of Items</b>	1
<b>Battery Life</b>	15 Hours
<b>Audio Driver Type</b>	Dynamic Driver
<b>Earpiece Shape</b>	Over-Ear
<b>Hardware Interface</b>	3.5mm Audio
<b>UPC</b>	842700197150
<b>Special Feature</b>	Built-in Radio Receiver, Foldable and Adjustable headband, Micro SD Card Plug-in, Microphone Included
<b>Manufacturer</b>	iJoy
<b>Package Dimensions</b>	6.57 x 6.1 x 3.19 inches
<b>Batteries</b>	1 Lithium Polymer battery required (included)

## WARRANTY

---

iJoy provides a **6-month exchange warranty** for these headphones. If your headset breaks or is damaged for any reason within this period, iJoy will provide you with a free replacement.

## SUPPORT

---

For further assistance, troubleshooting, or warranty claims, please contact iJoy customer support. You can often find contact information on the product packaging or by visiting the official iJoy website.

## PRODUCT VIDEOS

---

### iJoy Disney Nightmare Before Christmas Headphones Overview

Your browser does not support the video tag.

**Video:** An official product video showcasing the iJoy Disney Nightmare Before Christmas Headphones, highlighting their design and features.

