

## Hafele Noil

# Hafele NOIL 6.3L Digital Air Fryer Instruction Manual

Model: NOIL | Brand: Hafele

## 1. INTRODUCTION

Thank you for choosing the Hafele NOIL 6.3L Digital Air Fryer. This appliance is designed to provide a healthier way to cook your favorite foods, utilizing 360° Rapid Air Circulation Technology to achieve crispy results with significantly less oil. Please read this manual thoroughly before operating the appliance to ensure safe and optimal performance. Keep this manual for future reference.



*Image 1: Hafele NOIL 6.3L Digital Air Fryer, a sleek black appliance with a digital display and a bowl of french fries in front.*

## 2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse the cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.

- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended household use.
- Ensure the basket is properly inserted and locked before operation.

### 3. PRODUCT OVERVIEW AND COMPONENTS

The Hafele NOIL Air Fryer features a compact design with intuitive controls. Familiarize yourself with the main components:

- **Main Unit:** Houses the heating element and fan.
- **Digital Touch Panel:** For setting time, temperature, and selecting preset menus.
- **Removable Frying Basket:** Non-stick coated for easy cleaning, with a safety lock.
- **Handle:** For safely removing and inserting the frying basket.
- **Air Inlet/Outlet:** For proper air circulation during cooking.



Image 2: Front view of the Hafele NOIL Air Fryer, highlighting its sleek design and digital display.

## 4. SETUP AND FIRST USE

---

Before using your Hafele NOIL Air Fryer for the first time, please follow these steps:

1. **Unpack:** Carefully remove all packaging materials and promotional labels.
2. **Clean:** Wash the frying basket and any removable accessories with warm, soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation. Ensure there is at least 10 cm of free space on the back and sides, and 10 cm above the appliance.
4. **Initial Run:** It is recommended to run the air fryer empty for about 10-15 minutes at 180°C (356°F) to eliminate any manufacturing odors. A slight smell or smoke may occur, which is normal. Ensure the area is well-ventilated.
5. **Cool Down:** Allow the appliance to cool down completely after the initial run before proceeding with cooking.

## 5. OPERATING INSTRUCTIONS

---

The Hafele NOIL Air Fryer features a user-friendly digital touch panel for easy operation.

### 5.1 Digital Touch Panel



## Easy touch control



**Preset  
menu**



**Time/ temperature  
adjustment key**



**Temperature control  
key (80<sup>o</sup>-200<sup>o</sup>C)**



**Time control  
key (0-60 mins)**



**Power  
key**

*Image 3: Close-up of the Hafele NOIL Air Fryer's digital touch panel, showing icons for preset menus, temperature/time adjustment, and power.*

- **Preset Menu Key:** Select from 8 pre-programmed cooking modes for common dishes like French fries, vegetables, shrimp, fish, pizza, chicken, cake, and lamb chop.
- **Time/Temperature Adjustment Keys (+/-):** Manually adjust cooking time (0-60 minutes) and temperature (80°C-200°C).
- **Power Key:** Turns the appliance on/off and starts/pauses cooking.

### 5.2 General Cooking Steps

1. Place the air fryer on a stable, heat-resistant surface.
2. Pull out the frying basket from the main unit.
3. Place your ingredients into the frying basket. Do not overfill.
4. Slide the frying basket back into the air fryer until it clicks into place.
5. Plug the power cord into a grounded wall outlet.
6. Press the Power Key to turn on the appliance.
7. Select a preset menu or manually set the desired temperature and time using the adjustment keys.
8. Press the Power Key again to start cooking.



9. The air fryer will automatically turn off when the set time has elapsed.
10. Carefully pull out the basket, place it on a heat-resistant surface, and remove the cooked food.

### 5.3 Special Functions

- **Shake Reminder:** For certain recipes, the air fryer will emit a reminder to shake the basket to ensure even cooking and crispiness.
- **Keep Warm Function:** This function maintains your food at an ideal serving temperature for a set period after cooking is complete.

Your browser does not support the video tag.

*Video 1: A short demonstration showcasing the Hafele NOIL Air Fryer in action, including preparation of various dishes like nachos and french fries, and highlighting its digital controls.*

## 6. COOKING GUIDE AND TIPS

The Hafele NOIL Air Fryer is versatile and can be used for air frying, baking, grilling, roasting, and reheating.

- **Oil Usage:** While the air fryer uses significantly less oil, a small amount of oil (1 tablespoon) can be added to some foods for extra crispiness.
- **Even Cooking:** For best results, shake the basket halfway through the cooking time, especially for smaller items like fries or nuggets.
- **Preheating:** Preheating the air fryer for 3-5 minutes before adding food can improve cooking results.
- **Batch Cooking:** For larger quantities, cook in smaller batches to ensure even cooking and crispiness.
- **Food Types:** Experiment with various foods. The 8 preset menus offer a good starting point for different categories.

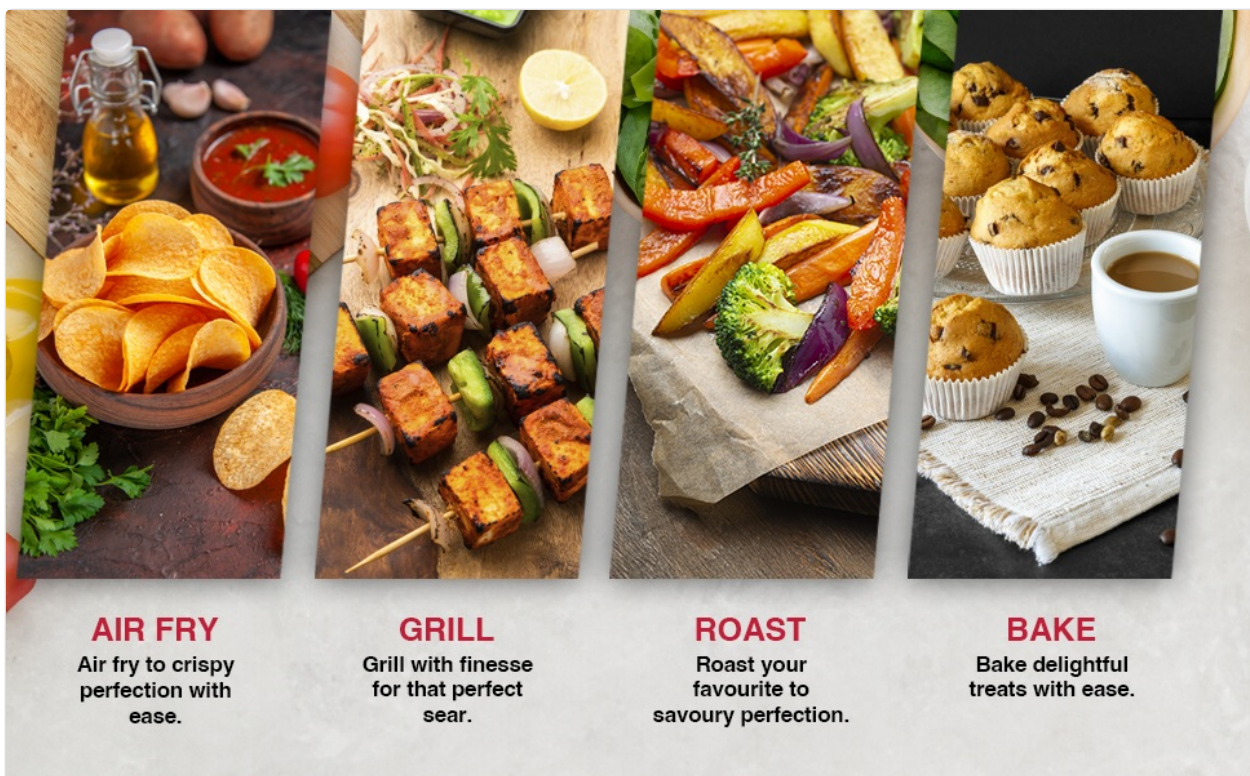


Image 4: Graphic illustrating the versatility of the Hafele NOIL Air Fryer, capable of air frying, grilling, roasting, and baking.

## 7. MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your air fryer.

- **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
- **Frying Basket:** The non-stick frying basket is dishwasher safe. Alternatively, wash it with warm, soapy water and a non-abrasive sponge.
- **Main Unit:** Wipe the exterior of the air fryer with a damp cloth. Do not immerse the main unit in water or any other liquid.
- **Interior:** Clean the interior with a damp cloth and mild detergent if necessary. Ensure no water enters the heating element area.
- **Storage:** Once clean and dry, store the air fryer in a cool, dry place.



Image 5: Illustration of the easy cleaning features, showing the removable basket and indicating dishwasher-safe parts.

## 8. TROUBLESHOOTING

If you encounter any issues with your Hafele NOIL Air Fryer, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; power outlet not working; basket not properly inserted.	Check power cord connection; test outlet with another appliance; ensure basket is fully pushed in until it clicks.
Food is not cooked evenly.	Basket is overcrowded; food not shaken during cooking.	Cook in smaller batches; shake the basket halfway through cooking.
Food is not crispy.	Not enough oil (for some foods); temperature too low; cooking time too short.	Lightly brush food with oil; increase temperature or cooking time.

Problem	Possible Cause	Solution
White smoke comes from the appliance.	Fat residue from previous use; excessive oil on food; non-food items in basket.	Clean the basket thoroughly; drain excess oil from food; ensure only food is in the basket.

If the problem persists after trying these solutions, please contact Hafele customer support.

## 9. SPECIFICATIONS

Key technical specifications for the Hafele NOIL 6.3L Digital Air Fryer:

Feature	Detail
Model Name	Noil
Capacity	6.3 Litres
Power Output	1700 Watts
Voltage	220-240 Volts
Control Method	Touch
Temperature Range	80°C - 200°C
Timer Range	0-60 minutes
Material	Stainless Steel Cladding
Non-stick Coating	Yes
Dishwasher Safe Parts	Yes (Basket)
Item Weight	7 kg 280 g





**Power**  
**1700W**



**Voltage**  
**220-240V**



**Capacity**  
**6.3 L**







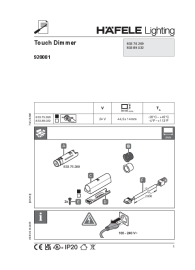

**Frequency**  
**50-60Hz**



Image 6: Visual representation of the Häfele NOIL Air Fryer's dimensions (360mm x 290mm x 345mm) and key specifications like 1700W power, 220-240V voltage, 6.3L capacity, and 50-60Hz frequency.

## 10. WARRANTY AND SUPPORT

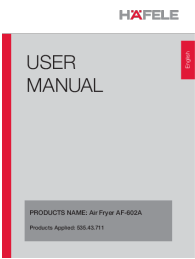For warranty information, product registration, or technical support, please refer to the warranty card included with your purchase or visit the official Häfele website. Keep your proof of purchase for any warranty claims. You can also visit the [Häfele Store on Amazon](#) for more product details and support resources.

	<p><a href="#">Häfele Air Fryer AF-602A User Manual</a></p> <p>Comprehensive user manual for the Häfele Air Fryer AF-602A, providing detailed instructions on operation, safety, settings, cleaning, and troubleshooting for optimal household use.</p>
	<p><a href="#">Häfele Furniture Knob Safety Instructions and Usage Guide</a></p> <p>Essential safety precautions and usage guidelines for Häfele furniture knobs (model 10611073), including warnings about child safety and packaging.</p>
	<p><a href="#">Häfele Product 10290140 Safety Instructions and Warnings</a></p> <p>Safety instructions and warnings for Häfele product 10290140, covering general usage, restrictions for children and individuals with reduced abilities, and suffocation risks from packaging. Includes manufacturer details.</p>
	<p><a href="#">Häfele Connect App Short User Guide</a></p> <p>A concise user guide for the Häfele Connect App, explaining how to set up and control BLE-Boxes for smart lighting, including features like scenes, animations, timers, and network sharing.</p>
	<p><a href="#">Häfele Touch Dimmer 833.75.269 / 833.89.032 Installation Guide</a></p> <p>Installation instructions and technical specifications for the Häfele Touch Dimmer, model numbers 833.75.269 and 833.89.032, designed for lighting control.</p>
	<p><a href="#">Häfele NOVA Digital Door Lock User and Installation Manual</a></p> <p>Comprehensive guide for the Häfele NOVA digital door lock, covering installation, setup, usage, and troubleshooting. Learn how to use fingerprint, card, and passcode access, as well as advanced features via the Häfele Smart Living app.</p>