

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Surge SG60073

Surge Wireless Pro Controller User Manual

Model: SG60073 | Brand: Surge

INTRODUCTION

Enhance your gameplay with the Surge SwitchPad Wireless Pro Controller for the Nintendo Switch. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your controller. Its classic style and lightweight design ensure continued comfort, while advanced features like programmable macro buttons, motion controls, and rumble feedback offer an immersive and personalized gaming experience. The controller is compatible with Nintendo Switch, Windows, and Android devices.

PRODUCT OVERVIEW



Front view of the Surge Wireless Pro Controller in Grey Camo.



Angled view showcasing the ergonomic design of the controller.



Rear view highlighting the four programmable macro buttons (M1, M2, M3, M4).



Detailed diagram of the controller with labels for Turbo Button, Wireless Connection, LED Indicator, and Programmable Macro Buttons.

SETUP

1. Initial Charge

Before first use, fully charge your Surge Wireless Pro Controller. Connect the included USB-C cable to the controller's

charging port and the other end to a USB power source (e.g., Nintendo Switch dock, computer USB port, or USB wall adapter). The LED indicator lights will show charging status and turn off when fully charged. A full charge provides up to 12 hours of gameplay.

2. Pairing with Nintendo Switch

1. On your Nintendo Switch HOME Menu, select **Controllers**, then **Change Grip/Order**.
2. Press and hold the **Home button** on the Surge controller for 3-5 seconds until the LED indicators begin to flash rapidly.
3. Once paired, the corresponding player LED(s) on the controller will light up solid.

3. Pairing with Android/Windows Devices

1. Ensure Bluetooth is enabled on your Android device or Windows PC.
2. On the Surge controller, press and hold the **Home button** for 3-5 seconds until the LED indicators flash rapidly.
3. On your device, search for Bluetooth devices and select "Surge SwitchPad Pro" (or similar) from the list.
4. Follow any on-screen prompts to complete the pairing process.

OPERATING INSTRUCTIONS

Basic Controls

The Surge Wireless Pro Controller features standard button layouts for intuitive gameplay:

- **Left/Right Analog Sticks:** For precise movement and camera control.
- **D-Pad:** For directional input.
- **A/B/X/Y Buttons:** Standard action buttons.
- **L/R Buttons & ZL/ZR Triggers:** Shoulder buttons and triggers for various in-game actions.
- **Home Button:** Returns to the HOME Menu (Switch) or main screen (Android).
- **+/- Buttons:** Equivalent to Start/Select or Plus/Minus buttons.
- **Screenshot Button:** Captures screenshots.

Motion Controls


The controller is equipped with 6-axis motion control, allowing for immersive gameplay in titles that utilize motion sensing, such as *The Legend of Zelda: Breath of the Wild*, *Mario Kart 8 Deluxe*, and *Splatoon 2*. Simply tilt and move the controller as instructed by the game.



Icon indicating motion control capability.

Programmable Macro Buttons


The four programmable macro buttons (M1, M2, M3, M4) located on the rear of the controller allow you to assign custom button combinations for increased performance. Refer to the specific game's settings or the controller's advanced manual (if available) for detailed programming instructions.

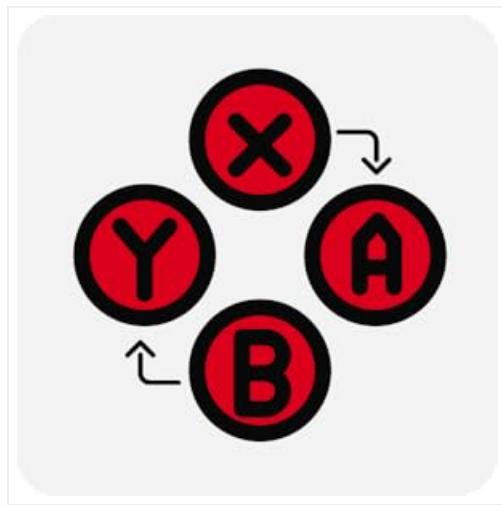

Icon indicating programmable macro buttons.

Turbo Functionality

Activate Turbo mode to turn any button into a rapid-fire input. This feature can be particularly useful in games requiring quick, repeated button presses. Consult the controller's specific instructions for enabling and customizing Turbo settings.

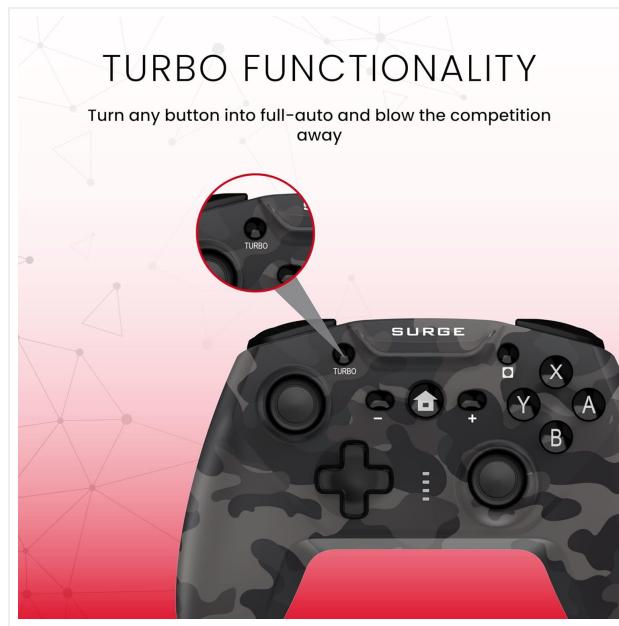

Close-up of the Turbo button, located near the left joystick.

MAINTENANCE

Charging

Recharge the controller when the battery is low. The built-in 550mAh rechargeable battery provides up to 12 hours of gameplay on a full charge. Use the provided USB-C cable for optimal charging.

Cleaning

Wipe the controller with a soft, dry cloth. Do not use harsh chemicals or abrasive materials. Avoid exposing the controller to excessive moisture.

Storage

Store the controller in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, ensure the battery is partially charged (around 50%) to prolong its lifespan.

TROUBLESHOOTING

- Controller not connecting:** Ensure the controller is charged. Try re-pairing the controller by following the "Pairing" instructions. Move closer to the console/device to ensure you are within the 25ft wireless range.
- Buttons unresponsive:** Check if the controller is properly connected. If issues persist, try resetting the controller (refer to manufacturer's website for specific reset instructions if not in this manual).
- Motion controls not working:** Ensure the game supports motion controls. Try recalibrating the motion sensors through your console/device settings.
- Short battery life:** Ensure the controller is fully charged. Battery life can vary based on usage and game features (e.g., rumble feedback).

SPECIFICATIONS

Model Number	SG60073
Compatibility	Nintendo Switch, Windows, Android devices
Connectivity	Bluetooth (Wireless), USB-C (Wired/Charging)
Wireless Range	Up to 25 feet
Battery Type	Built-in 550mAh Lithium-Ion
Battery Life	Up to 12 hours (approx.)
Motion Control	6-Axis Gyroscope
Programmable Buttons	4 Rear Macro Buttons
Dimensions	5.91 x 4.72 x 2.76 inches
Weight	13.12 ounces

WARRANTY INFORMATION

For detailed warranty information, please refer to the product packaging or visit the official Surge website. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you encounter any issues or have questions not covered in this manual, please contact Surge customer support. Visit the [Surge Store on Amazon](#) for more information and contact options.

