

[Manuals.plus](#) /

› [Amazon](#) /

› Echo Spot with Alexa (Latest Generation) | Smart Alarm Clock with Vibrant Sound | Black Color - User Manual

Amazon Echo Spot (2024)

Amazon Echo Spot (2024) User Manual

Smart Alarm Clock with Vibrant Sound and Alexa

INTRODUCTION

The Amazon Echo Spot is a smart alarm clock designed to enhance your daily routine with vibrant sound and the convenience of Alexa. It is always ready to assist you with waking up, relaxing, and much more.

This manual provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your Echo Spot device.

echo spot

Tenha Alexa no seu quarto



Música



Display



Casa
inteligente



Alarmes



Informação

Image: The Echo Spot, a compact spherical device with a circular screen displaying the time and weather, positioned on a wooden surface.

SETUP

What's Included in the Box

- Echo Spot device
- Power adapter (15W) and 12V (1.5m cable)
- Quick Start Guide

System Requirements

The Echo Spot is ready to connect to your Wi-Fi network. The Alexa app is compatible with Fire, Android, and iOS devices. Certain services and Skills may require subscription fees or other types of fees.

- Wi-Fi network (dual-band 5 compatible with a/b/g/n/ac Wi-Fi networks)
- Alexa app (available on Fire, Android, and iOS devices)

Initial Setup Steps

1. **Connect Power:** Plug the power adapter into the Echo Spot and then into a wall outlet. The device will power on automatically.
2. **Follow On-Screen Instructions:** The Echo Spot display will guide you through the initial setup process, including language selection and Wi-Fi connection.
3. **Download Alexa App:** On your smartphone or tablet, download the Amazon Alexa app from your device's app store.
4. **Log In:** Open the Alexa app and log in with your Amazon account credentials.
5. **Add Device:** In the Alexa app, navigate to "Devices" and select "Add Device." Choose "Amazon Echo" and then "Echo Spot" to link your device.
6. **Complete Setup:** Follow any remaining prompts in the Alexa app to personalize your Echo Spot, such as setting your location and preferred clock face.

Amazon's simple Wi-Fi setup technology allows customers to connect smart devices to their Wi-Fi network in a few easy steps, ensuring a frustration-free setup experience.

OPERATING YOUR ECHO SPOT

Understanding the Display

The Echo Spot features a 2.83-inch touch-sensitive display with a resolution of 320 x 240 pixels. This display allows you to easily view the time, weather forecast, music titles, and control smart home devices.



Image: A close-up of the Echo Spot's screen showing the time "9:00" and a weather icon indicating 15 degrees Celsius.

You can customize the display with your preferred clock design and fun colors. Simply tap the screen to interact with various functions.

Voice Control with Alexa

The Echo Spot is powered by Alexa, Amazon's voice assistant. To activate Alexa, simply say the wake word "Alexa" followed by your command or question.

- **Music and Audio:** Ask Alexa to play music, podcasts, and audiobooks. Enjoy powerful and vibrant sound with clear vocals and deep bass from the 1.73-inch front-firing speaker.
- **Alarms and Timers:** Set alarms and timers with your voice. For example, say "Alexa, set an alarm for 7 AM."
- **Information:** Ask for the weather forecast, news updates, or general information.
- **Routines:** Create Alexa routines to gradually wake up to music and gradual lighting. Quickly check the time, review reminders, or ask Alexa for the weather forecast.



Curta um som potente e vibrante,
com graves profundos e vocais nítidos

Image: The Echo Spot's screen showing album art and song title for "Electric Soul" by "Sam".



“Alexa, alarme para às
7h da manhã.”

Image: The Echo Spot's screen showing an alarm set for "7:00" AM, with the text "Alexa, alarm for 7 AM."

Smart Home Control

Control compatible smart home devices with your Echo Spot. Simply ask Alexa or tap the display to turn smart lights on or off. You can create routines to turn off the air conditioning when you leave home or turn on the lights at sunset.

- **Compatibility:** Supports Wi-Fi, Bluetooth Low Energy, and Matter for smart home device connectivity.
- **Voice Commands:** "Alexa, turn on the living room lights."
- **Touch Control:** Tap the smart home icon on the display to access and control connected devices.



Controle dispositivos de casa inteligente compatíveis

Image: The Echo Spot's screen showing a smart home control interface with a light bulb icon and the text "Bedroom Lamp On."

Accessibility Features

To activate features that customize Alexa according to your needs, go to Settings → Accessibility.

- **Speech Options:** Customers can select whether Alexa should speak fast or slow.
- **Alexa Captions:** Provide captions for compatible content in all modes.
- **Kindle Read Aloud:** Allows Alexa to read your Kindle books aloud.
- **Color Accessibility:** Includes color inversion and color correction features.

MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your Echo Spot.

- **Cleaning the Device:** Use a soft, lint-free cloth to clean the screen and the device's exterior. Avoid abrasive cleaners or sprays that could damage the finish or screen.
- **Dust Prevention:** Keep the device in a clean, dust-free environment. Regularly wipe down the speaker grille to

prevent dust buildup.

- **Power Management:** Unplug the device during electrical storms or when unused for long periods.
- **Temperature:** Operate the device within recommended temperature ranges to prevent overheating or damage.

TROUBLESHOOTING

If you encounter issues with your Echo Spot, refer to the following common troubleshooting steps.

Common Issues and Solutions

- **Device Not Responding:**
 - Ensure the device is properly plugged into a power outlet.
 - Check if the microphone is muted. Press the microphone off button (indicated by a red light) to unmute.
 - Try restarting the device by unplugging it for a few seconds and then plugging it back in.



Para desligar os microfones, basta pressionar o botão de desligar

Image: A close-up view of the top of the Echo Spot, highlighting the microphone off button with a red indicator light.

- **Wi-Fi Connectivity Issues:**

- Verify your Wi-Fi password is correct.
- Move the Echo Spot closer to your Wi-Fi router.
- Restart your Wi-Fi router.
- Check for Wi-Fi interference from other electronic devices.

• **Alexa Not Understanding Commands:**

- Speak clearly and at a normal volume.
- Reduce background noise.
- Ensure the device's microphones are not obstructed.

• **Display Issues:**

- Adjust the brightness settings in the device's display menu or through the Alexa app.
- If the screen is unresponsive, try restarting the device.

Privacy Features

The Echo Spot is built with multiple layers of privacy controls. These include a microphone off button, the ability to view and delete your voice recordings, and streaming indicators.

- **Microphone Off Button:** To physically disconnect the microphones, simply press the microphone off button on top of the device. A red light will indicate that the microphones are off.
- **Voice Recording Management:** You can view and delete your voice recordings through the Alexa app or by visiting the Alexa Privacy Portal.
- **Wake Word Technology:** The device only begins recording and sending audio to the cloud after detecting the wake word.

SPECIFICATIONS

Feature	Description
Size	113 mm x 103 mm x 111 mm
Weight	405 grams. Actual size and weight may vary by manufacturing process.
Display	2.83-inch touch-sensitive screen with 320 x 240 pixels resolution. Semicircular tempered glass.
Camera	No camera.
Wi-Fi Connectivity	Dual-band Wi-Fi (5) compatible with a/b/g/n/ac Wi-Fi networks.
Bluetooth Connectivity	Supports Advanced Audio Distribution Profile (A2DP) for audio streaming from your mobile device to Echo Spot or from Echo Spot to your Bluetooth speaker. Audio/Video Remote Control Profile (AVRCP) for voice control of connected mobile devices. Hands-free voice control is not compatible with Mac OS X devices. Bluetooth speakers requiring PIN codes are not supported.
Audio	1 x 1.73-inch front-firing speaker, high-definition lossless.
Processor	Amazon AZ2 Neural Edge (MT8519)
Memory	1GB DRAM + 8GB eMMC
Generation	Echo Spot (2024).

Feature	Description
Language	Alexa speaks Portuguese. (Note: Manual is in English for this output)
Anatel Certification	01736-24-01698

WARRANTY AND SUPPORT

Warranty Information

A 1-year limited warranty is included with your Echo Spot. Use of the Echo is subject to the terms available [here](#).

Software Security Updates

This device will receive software security updates for at least four years after the device was last available for purchase as a new unit on our websites. Learn more about these software security updates. If you already own an Amazon Echo, get specific information about your device on the [Manage Your Content and Devices](#) page for device-specific information.

Additional Support

For further assistance, visit the [Alexa Privacy Portal](#) to understand how Alexa and Echo devices are designed to protect your privacy, or contact Amazon customer support.

© 2024 Amazon. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

