

[manuals.plus](#) /› [ZdalaMit](#) /› [ZdalaMit RC-304 Replacement Remote Control User Manual for Insignia TVs](#)

## ZdalaMit RC-304

# ZdalaMit RC-304 Replacement Remote Control User Manual

Model: RC-304 | Brand: ZdalaMit

## INTRODUCTION

This manual provides comprehensive instructions for the ZdalaMit RC-304 Replacement Remote Control. This remote is designed to function as a direct replacement for original Insignia TV remote controls, requiring no programming for immediate use.

### Compatible Insignia TV Models:

- NS-L19Q-10A
- NS-L32Q09-10A
- NS-L19W1Q-10A
- NS-L47Q09-10A
- NS-L22Q-10A
- NS-L26Q-10A

## SETUP

The RC-304 remote control requires no programming. Simply install the batteries, and it will be ready for use with your compatible Insignia TV.

### Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert two (2) 1.5V AAA Alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

*Note: Batteries are not included with the remote control.*





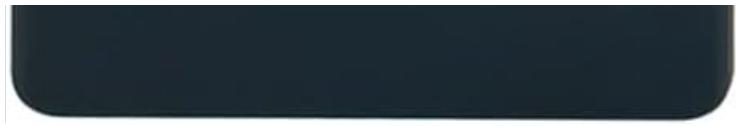


Figure 1: Angled view of the RC-304 remote control, showing its ergonomic design and button layout.

## OPERATING INSTRUCTIONS

The RC-304 remote control features standard buttons for navigating your Insignia TV. Below is a general overview of common button functions.



Figure 2: Front view of the RC-304 remote control, highlighting the arrangement of all control buttons.

### Button Functions:

- **Power (Red Button):** Turns the TV on or off.
- **MUTE:** Mutes or unmutes the TV audio.
- **VOL (+/-):** Increases or decreases the volume level.
- **CH (Up/Down Arrows):** Changes the TV channel up or down.

- **INPUT:** Cycles through available input sources (HDMI, AV, Component, etc.).
- **SLEEP:** Sets a timer for the TV to automatically turn off.
- **EXIT:** Exits the current menu or on-screen display.
- **INFO:** Displays information about the current program or input.
- **GUIDE:** Opens the electronic program guide (if available).
- **MENU:** Opens the TV's main menu.
- **Navigation Arrows (Up/Down/Left/Right):** Navigates through menus and options.
- **OK/ENTER:** Confirms a selection or enters a menu item.
- **Number Buttons (0-9):** Directly selects channels or enters numerical values.
- **RECALL:** Switches between the current and previously viewed channel.
- **FAV:** Accesses favorite channels list.
- **SAP:** Selects Secondary Audio Program (if available).
- **FREEZE:** Pauses the current image on screen.
- **ZOOM:** Adjusts the screen zoom level.
- **CCD:** Activates Closed Captioning.
- **VIDEO:** Selects Video input.
- **COMP:** Selects Component input.
- **HDMI:** Selects HDMI input.
- **TV:** Switches to TV tuner input.

For specific functions and advanced settings, refer to your Insignia TV's original user manual.

## MAINTENANCE

---

### Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops functioning. Always replace both batteries simultaneously with new 1.5V AAA Alkaline batteries.

### Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

## TROUBLESHOOTING

---

If you experience issues with your RC-304 remote control, please refer to the following common solutions:

#### • **Remote not responding:**

- Ensure the batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with new 1.5V AAA Alkaline batteries.
- Check for any obstructions between the remote control and the TV's infrared sensor.
- Ensure you are within the effective operating range and line of sight of the TV.

#### • **Intermittent button function:**

- This can often be resolved by replacing the batteries.
- Ensure no buttons are stuck or obstructed.

- If the issue persists after replacing batteries, the remote may be malfunctioning.

- **Remote controls other devices:**

- This remote is specifically designed for Insignia TVs. Ensure no other devices are inadvertently responding to its signals.

If troubleshooting steps do not resolve the issue, please contact customer support.

## SPECIFICATIONS

---

<b>Model Number</b>	RC-304
<b>Product Dimensions</b>	5 x 1.5 x 0.5 inches
<b>Item Weight</b>	1.76 ounces
<b>Power Supply</b>	2 x 1.5V AAA Alkaline Batteries
<b>Compatible Devices</b>	Television (Specific Insignia models)
<b>Max Number of Supported Devices</b>	1

## WARRANTY INFORMATION

---

No specific warranty information is provided with this product. For details regarding returns or replacements, please refer to the purchase platform's policies or contact the seller directly.

## SUPPORT

---

For any questions, concerns, or technical assistance regarding your ZdalaMit RC-304 Replacement Remote Control, please contact the seller through the platform where the purchase was made. They will be able to provide further support.