

Easytry18360

Generic Remote Control Instruction Manual

For Pioneer Car Stereo Systems (Models: CXB6796, FH-P4000, FH-P4100, KEH-P601, KEH-P6010, CXB4285, DEH-P41, DEH-P410, DEH-P4100, DEH-P4150, DEH-P6200)

1. INTRODUCTION

This manual provides essential instructions for the operation and maintenance of your new Generic replacement remote control. This remote is designed to be compatible with various Pioneer CD Car Stereo Receiver Systems. Please ensure your original remote or stereo model number matches those listed for full compatibility.



Figure 1: Front view of the remote control, showing various function buttons including volume, track, and source selection.

2. SETUP

2.1 Battery Installation

The remote control requires two CR2 batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two CR2 batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, pushing it until it clicks securely into place.



Figure 2: Back view of the remote control, highlighting the battery compartment area.

2.2 Initial Use

This remote control is an infrared replacement and typically requires no setup or programming. Once batteries are installed, it should function directly with compatible Pioneer car stereo systems. Point the remote control directly at the infrared receiver on your car stereo.

3. OPERATING INSTRUCTIONS

The remote control features various buttons for controlling your Pioneer car stereo. Refer to the image below for button identification and their general functions.



Figure 3: Front view of the remote control with all buttons clearly visible.

- **VOLUME (+/-):** Adjusts the audio output level.

- **TRACK/SEEK (◀▶)**: Skips tracks or seeks radio frequencies.
- **SELECT (▲▼◀▶)**: Navigation buttons for menu selection.
- **BAND/ESC**: Changes radio bands or exits menu screens.
- **ATT**: Attenuates (mutes) the audio.
- **FUNCTION (F)**: Accesses various function menus.
- **AUDIO (A)**: Accesses audio settings.
- **DISC/P.CH**: Selects disc or preset channels.
- **Power ()**: Turns the stereo system on or off.
- **Source (●)**: Cycles through audio sources (e.g., CD, Radio, AUX).
- **Mute (●)**: Mutes the audio output. (Note: Button labels may vary slightly based on specific Pioneer stereo models.)

For detailed functionality of each button, please refer to the original instruction manual of your specific Pioneer car stereo receiver system.

4. MAINTENANCE

- **Cleaning**: Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement**: Replace batteries when the remote's range decreases or it stops responding. Always replace both batteries at the same time with new ones of the same type (CR2).
- **Storage**: If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place.
- **Avoid Damage**: Do not drop the remote control or expose it to extreme temperatures, moisture, or direct sunlight.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are installed correctly with the correct polarity.
 - Replace old batteries with new CR2 batteries.
 - Ensure there are no obstructions between the remote control and the car stereo's infrared receiver.
 - Make sure you are within the maximum operating range (approximately 10 meters).
 - Verify that your car stereo model is listed as compatible with this remote control.
- **Some buttons not working:**
 - This remote is a replacement and may not have all the exact functions or button mappings as your original remote. Refer to your stereo's original manual for specific button functions.
 - Ensure the remote is pointed directly at the stereo's IR sensor.

If troubleshooting steps do not resolve the issue, please contact customer support.

6. SPECIFICATIONS

Brand	Generic
Model Number	Easytry18360
Compatible Devices	Pioneer CXB6796, FH-P4000, FH-P4100, KEH-P601, KEH-P6010, CXB4285, DEH-P41, DEH-P410, DEH-P4100, DEH-P4150, DEH-P6200
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Maximum Range	10 meters (approx. 33 feet)

Batteries Required	2 x CR2 batteries
Manufacturer	SZHKHXD

7. WARRANTY INFORMATION

This product comes with a 90-day warranty from the date of purchase. This warranty covers manufacturing defects. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

8. SUPPORT

For any questions, concerns, or technical assistance regarding this remote control, please contact the seller directly through the platform where the purchase was made. Provide your order number and a detailed description of the issue for prompt support.